



CY8CKIT-001

## PSoC<sup>®</sup> Development Kit Guide

Doc. # 001-48651 Rev. \*N  
November 25, 2013

Cypress Semiconductor  
198 Champion Court  
San Jose, CA 95134-1709  
Phone (USA): 800.858.1810  
Phone (Intl): 408.943.2600  
<http://www.cypress.com>

## Copyrights

© Cypress Semiconductor Corporation, 2009-2013. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

PSoC Designer™ and PSoC Creator™ are trademarks and PSoC® and CapSense® are registered trademark of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

## Flash Code Protection

Cypress products meet the specifications contained in their particular Cypress PSoC Datasheets. Cypress believes that its family of PSoC products is one of the most secure families of its kind on the market today, regardless of how they are used. There may be methods, unknown to Cypress, that can breach the code protection features. Any of these methods, to our knowledge, would be dishonest and possibly illegal. Neither Cypress nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Cypress is willing to work with the customer who is concerned about the integrity of their code. Code protection is constantly evolving. We at Cypress are committed to continuously improving the code protection features of our products.

# Contents



<b>1. Introduction</b>	<b>7</b>
1.1 Kit Overview.....	7
1.2 Kit Contents .....	7
1.3 Installation.....	8
1.3.1 Before You Begin .....	8
1.3.2 Prerequisites .....	8
1.3.3 Installing PSoC 1 Development Software .....	8
1.3.4 Installing PSoC 3 Development Software .....	8
1.3.5 Installing PSoC 5LP Development Software .....	9
1.4 PSoC Development Board.....	10
1.4.1 Default Switch and Jumper Settings .....	10
1.5 Kit Revision.....	12
1.6 Additional Resources.....	13
1.6.1 Beginner Resources.....	13
1.6.2 Engineers Looking for More .....	13
1.6.3 Learning from Peers.....	13
1.6.4 More Code Examples.....	13
1.7 Document Conventions .....	15
1.8 Document Revision History .....	15
<b>2. Loading My First PSoC Project</b>	<b>17</b>
2.1 My First PSoC 1 (CY8C28) Project .....	18
2.1.1 Loading My First PSoC 1 Project .....	18
2.1.2 Building My First PSoC 1 Project .....	19
2.1.3 Programming My First PSoC 1 Project .....	20
2.1.4 Running My First PSoC 1 Project .....	21
2.2 My First PSoC 1 (CY8C29) Project .....	23
2.2.1 Loading My First PSoC 1 Project .....	23
2.2.2 Building My First PSoC 1 Project .....	24
2.2.3 Programming My First PSoC 1 Project .....	25
2.2.4 Running My First PSoC 1 Project .....	26
2.3 My First PSoC 3 (CY8C38) Project .....	28
2.3.1 Loading My First PSoC 3 Project .....	28
2.3.2 Building My First PSoC 3 Project .....	29
2.3.3 Programming My First PSoC 3 Project .....	30
2.3.4 Running My First PSoC 3 Project .....	31
2.4 My First PSoC 5LP (CY8C58LP) Project.....	31
2.4.1 Loading my First PSoC 5LP Project.....	31
2.4.2 Building My First PSoC 5LP Project.....	33
2.4.3 Programming My First PSoC 5LP Project.....	34
2.4.4 Running My First PSoC 5LP Project.....	35

<b>3. Sample Projects</b>	<b>37</b>
3.1 CY8C28 Family Processor Module Code Examples .....	37
3.1.1 My First PSoC 1 (CY8C28) Project.....	37
3.1.2 ADC to LCD Project.....	46
3.1.3 ADC to UART with DAC.....	52
3.1.4 CapSense .....	63
3.2 CY8C29 Family Processor Module Code Examples .....	73
3.2.1 My First PSoC 1 (CY8C29) Project.....	73
3.2.2 ADC to LCD Project.....	82
3.2.3 ADC to LCD with DAC and UART .....	89
3.3 CY8C38/CY8C58LP Family Processor Module Code Examples .....	104
3.3.1 My First PSoC 3/PSoC 5LP Project (LED_with_PWM) .....	104
3.3.2 ADC to LCD Project.....	113
3.3.3 ADC to UART with DAC.....	119
3.3.4 USB HID .....	132
3.3.5 CapSense .....	144
3.3.6 SAR ADC to UART with DAC (PSoC 5LP Only).....	152
<b>Appendix A. Board Specifications and Layout</b>	<b>165</b>
A.1 PSoC Development Board .....	165
A.1.1 Factory Default Configuration .....	165
A.1.2 Power Supply Configuration Examples.....	166
A.1.3 Prototyping Components .....	171
A.1.4 LCD Module.....	173
A.1.5 CapSense Elements .....	174
A.1.6 Processor Module .....	174
A.1.7 Expansion Ports.....	177
A.2 Schematics .....	181
A.2.1 CY8CKIT-001 PSoC Development Board .....	181
A.2.2 CY8C28 Family Processor Module.....	182
A.2.3 CY8C29 Family Processor Module.....	183
A.2.4 CY8C38 Family Processor Module.....	184
A.2.5 CY8C58LP Family Processor Module .....	185
A.2.6 Enable Boost Component in PSoC 3 and PSoC 5LP Processor Modules ..	185
A.3 Bill of Materials .....	186
A.3.1 CY8CKIT-001 PSoC Development Board .....	186
A.3.2 CY8C28 Family Processor Module.....	188
A.3.3 CY8C29 Family Processor Module.....	189
A.3.4 CY8C38 Family Processor Module.....	190
A.3.5 CY8C58LP Family Processor Module .....	191
<b>Appendix B. MiniProg3</b>	<b>193</b>
B.1 MiniProg3 LEDs.....	193
B.2 Programming in Power Cycle Mode .....	193
B.3 Interface Pin Assignment Table.....	193
B.4 Protection Circuitry .....	194
B.5 Level Translation .....	194
<b>Appendix C. MiniProg3 Technical Description</b>	<b>195</b>
C.1 Interfaces.....	196
C.1.1 ISSP.....	196
C.1.2 JTAG.....	196

C.1.3	SWD/SWV .....	196
C.1.4	I2C™ .....	196
C.2	Connectors .....	197
C.2.1	5-Pin Connector .....	197
C.2.2	10-Pin Connector .....	197
C.3	Power.....	198
<b>Appendix D. PSoC Creator DWR</b>		<b>199</b>



# 1. Introduction



## 1.1 Kit Overview

The CY8CKIT-001 PSoC<sup>®</sup> Development Kit provides a common development platform where you can prototype and evaluate different solutions using PSoC 1, PSoC 3, PSoC 4, or PSoC 5LP architectures. This guide gives you a practical understanding of PSoC technology. The kit also includes several code examples with step-by-step instructions that enable you to easily develop PSoC solutions. This kit includes PSoC CY8C28, CY8C38, and CY8C58LP family processor modules.

**Note** The PSoC 4 processor module is not packaged with this kit. Refer to the CY8CKIT-038 PSoC 4200 Family Processor Module Kit User Guide in <http://www.cypress.com/go/cy8ckit-038> for more details on the PSoC 4 processor module.

## 1.2 Kit Contents

The CY8CKIT-001 PSoC Development Kit includes:

- PSoC development board
- PSoC CY8C28 family processor module
- PSoC CY8C38 family processor module
- PSoC CY8C58LP family processor module
- MiniProg3 programmer and debug tool
- USB cable<sup>1</sup>
- 12-V power supply adapter
- JTAG ribbon cable
- Wire pack
- Printed documentation
  - Quick start guide
  - Schematic, block diagram, and pinout of PSoC development board design
- PSoC 1 software DVD (contents are installed in \PSoC Development Kit CY8C28):
  - PSoC Designer™ IDE
  - PSoC Programmer software
  - CY8C28 datasheets
  - Kit release notes
  - Software release notes
  - Code example files, firmware, and documentation
- PSoC 3 and PSoC 5LP software DVD (contents are installed in the \CY8CKIT-009A folder for PSoC 3 module kit and the \CY8C58LP Family Processor Module folder for PSoC 5LP module kit):
  - PSoC Creator™ IDE

1. Any USB certified cable up to 2 meters in length can be used with the DVK.

- PSoC Programmer software
- Kit release notes
- Software release notes
- Code example files, firmware, and documentation

## 1.3 Installation

Everything you need to use the PSoC Development Kit is included; you only need to install the software for the processor module you plan to use.

**Note** CY8CKIT-008 CY8C29 family processor module is not part of this kit; you can purchase this module from <http://www.cypress.com>.

### 1.3.1 Before You Begin

All Cypress software installations require administrator privileges, but this is not required to run the installed software.

Shut down any currently running Cypress software.

Disconnect any ICE-Cube or MiniProg devices from your computer.

### 1.3.2 Prerequisites

PSoC Creator and PSoC Designer both use Microsoft .NET Framework, Adobe Acrobat Reader, and a Windows Installer. If .NET Framework and Windows Installer are not on your computer, the installation automatically installs them. If you do not have Adobe Acrobat Reader, download and install it from the Adobe website.

### 1.3.3 Installing PSoC 1 Development Software

To use the CY8C28 or CY8C29 family processor module (PSoC 1), you need:

- PSoC Designer 5.3 or later
- PSoC Programmer 3.16 or later

After installation, user guides and key documents are located in the \Documentation subdirectory of the PSoC Designer installation directory.

### 1.3.4 Installing PSoC 3 Development Software

To use the CY8C38 family processor module (PSoC 3), you need:

- PSoC Creator 3.0 or later
- PSoC Programmer 3.19.1 or later
- PSoC Development Kit example files

Insert the PSoC 3 or PSoC 5LP software DVD; in the menu, select **Install Software for PSoC 3**. This option installs all three required software packages. The installers for PSoC Programmer and PSoC Creator automatically start before the kit examples are installed.

For each installation, select the **Typical** type of installation on the **Installation Type** page.

PSoC Creator uses the DP8051 Keil 9.51 compiler to build PSoC 3 applications. This compiler is included on the DVD; if the installer does not detect the compiler, you will be prompted to install it.

**Note** The Keil compiler is distributed with a free license. You must activate this license within 30 days of installation. When the Cypress software installation is complete, and you run PSoC Creator, activate the compiler license from **Help** → **Register** → **Keil**.

**Important for Win7 and Vista users:** If Keil registration fails, rename the `_tools.ini` file in `<Install_Directory>\PSoC Creator\<version>\PSoCCreator\import\keil\pk51\<version>` to "`tools.ini`" for the Keil registration to be successful.

After installing PSoC Creator and PSoC Programmer, refer to the documentation as needed:

- **PSoC Creator** → **Help** → **Topics** → **Getting Started**
- **Programmer** → **Help** → **Help Topics** → **Using PSoC Programmer**

Other documents included with this release are located in the `\Documentation` subdirectory of the PSoC Creator installation directory. The default location is:

`<Install_Directory>:\PSoC Creator\<version>\PSoC Creator\Documentation`

You can access this directory from within PSoC Creator under **Help** → **Documentation**. Documents include (but are not limited to):

- *PSoC Creator Component Author Guide (component\_author\_guide.pdf)*
- *Warp Verilog Reference Guide (warp\_verilog\_reference.pdf)*
- *Customization API Reference (customizer\_api.chm)*

**Note** After the installation is complete, the kit contents are available at the following location:

`<Install_Directory>:\CY8CKIT-009A\<version>`

### 1.3.5 Installing PSoC 5LP Development Software

To use the CY8C58LP family processor module (PSoC 5LP), you need:

- PSoC Creator 3.0 or later
- PSoC Programmer 3.19.1 or later
- PSoC Development Kit example files

Insert the PSoC 3 or PSoC 5LP Software DVD; in the menu, select **Install Software for PSoC 5LP**. This option installs all three required software packages. The installers for PSoC Programmer and PSoC Creator automatically start before the kit examples are installed.

For each installation, select the **Typical** type of installation on the **Installation Type** page.

PSoC Creator uses the GNU GCC 4.7.3 compiler to build PSoC 5LP applications.

After installing PSoC Creator and PSoC Programmer, refer to the documentation as needed:

- **PSoC Creator** → **Help** → **Topics** → **Getting Started**
- **Programmer** → **Help** → **Help Topics** → **Using PSoC Programmer**

Other documents included with this release are located in the `\Documentation` subdirectory of the PSoC Creator installation directory. The default location is:

`<Install_Directory>:\PSoC Creator\<version>\PSoC Creator\Documentation`

You can access this directory from within PSoC Creator under **Help** → **Documentation**. Documents include (but are not limited to):

- *PSoC Creator Component Author Guide (component\_author\_guide.pdf)*
- *Warp Verilog Reference Guide (warp\_verilog\_reference.pdf)*
- *Customization API Reference (customizer\_api.chm)*

**Note** After the installation is complete, the kit contents are available at the following location:

`<Install_Directory>:\CY8C58LP Family Processor Module\<version>`

## 1.4 PSoC Development Board

The CY8CKIT-001 PSoC Development Board is designed to aid hardware, firmware, and software developers in building their own systems around Cypress's PSoC devices. The flexibility to configure the power domains is one of the foremost features of this board. Input power to the board is from one of two sources:

- 12 V 1-A power supply adapter
- 9-V alkaline battery (not included)

**Note** Do not apply more than 15 V as input voltage. Also, do not power the board from test points.

This full-featured board incorporates three onboard linear regulators that power peripherals and PSoC processor modules at voltages between 1.7 V and 5.0 V. These regulators include a fixed 5 V 1-A linear regulator, a fixed 3.3 V 300-mA linear regulator, and a 1.5 V to 3.3 V for 3.3-V supply and 1.5 V to 5 V for 5-V supply adjustable regulator. The board also provides the ability to separate the PSoC core VDD rail into two separate rails, analog and digital. In addition, the board is able to separate the I/O VDD rails, giving the flexibility to power the I/O ports at different voltages.

The board is equipped with a 2×16 alphanumeric LCD module capable of 1.8 V to 5.0 V I/O. In addition, there is a mini-B full-speed USB interface and a female DB9 serial communications interface. Also included is a 12-pin wireless radio module interface, which can be used to develop CyFi™ low-power RF or other embedded RF solutions with this kit. The board also has a prototyping area containing a small breadboard, complete with I/O port sockets nearby, multipurpose LEDs, mechanical push buttons, and a multipurpose variable resistor. In addition, three capacitive sensing elements (two buttons and a five segment slider) are included on the board to allow the evaluation of CapSense® applications.

The board has four general-purpose I/O (GPIO) expansion slots, allowing the I/O to expand to external boards.

The board is protected against reverse voltage and overvoltage on the 5-V and 3.3-V lines on the expansion slots. See [Protection Circuit on page 179](#) for more information.

The board is designed with modularity in mind and, as a result, supports removable processor modules. This allows you to plug different PSoC processor modules into the board based upon the desired features of both 8-bit and 32-bit PSoC devices.

### Note

- The PSoC device may get hot or damaged if many I/O pins are configured as strong drive with initial state HIGH and grounded externally using wires.
- The PSoC device may get hot or damaged if many I/O pins are configured as strong drive with initial state LOW and connected to Vcc externally using wires.

### 1.4.1 Default Switch and Jumper Settings


Jumpers on the CY8CKIT-001 PSoC development board have a default setting to operate at 3.3 V. For default configuration, each of the jumpers must be set according to these instructions.

**Note** All CY8C28 and CY8C29 family processor module code examples are configured for 5 V. Configure the board to 5 V, before creating the code examples.


**SW3 - VDD Select.** Default Position: 3.3 V (down position)




**J8 - 5 V Source.** Default Position: VREG (upper two pins)

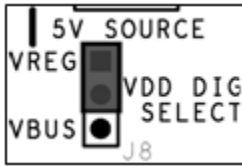


**J7, J6 - VDD Digital, VDD Analog.** Default Position: VDD (upper two pins, both headers)

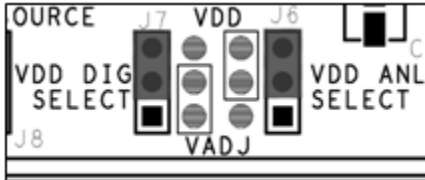


**J12 - LCD Power.** Default Position: ON (lower two pins)

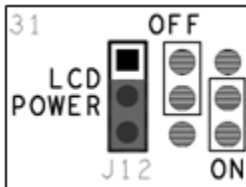

**J2-J5 - VDDIO Power Select.** Default Position: VDD (upper left two pins)

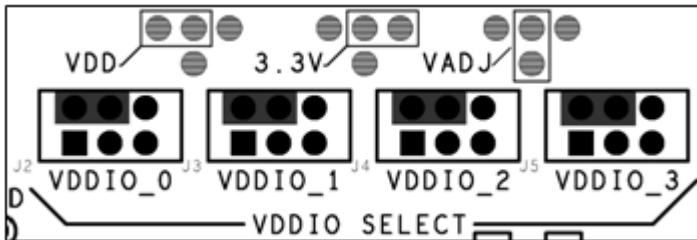

**J10 - RS-232 Power (Serial Communications).** Default Position: Installed



**J14 - Radio Power.** Default Position: Installed



**J11 - Variable Resistor Power.** Default Position: Installed



#### 1.4.1.1 AC/DC Adaptor Specifications

Use adaptors with the following specifications:

- Input voltage: 100 to 240 VAC, 50 Hz to 60 Hz, 1 A
- Output voltage: 12 VDC, 1 A
- Power output: 12 W
- Polarization: Positive center
- Certification: CE certified

Some recommended part numbers include EPSA120100U-P5P-EJ (CUI Inc.) and LTE12W-S2 (Li Tone Electronics Co. Ltd).

#### 1.4.1.2 Battery Specifications

Use batteries with the following specifications:

- Battery type: 9 V
- Output voltage: 9 VDC
- Type: Non-rechargeable alkaline consumer batteries
- RoHS status: RoHS compliant
- Lead free status: Pb-free

Some recommended part numbers include 6LR61XWA/1SB (Panasonic), MN1604 (Duracell), and 6LR61 (Energizer).

## 1.5 Kit Revision

To know the kit revision, look for the white sticker on the bottom left on the back of the kit box. If the revision reads CY8CKIT-001C Rev \*\*, then congratulations, you own the latest version.

To upgrade CY8CKIT-001B to CY8CKIT-001C, the main DVK and kit DVD must be updated. Purchase the latest development board and download the latest DVD ISO image at <http://www.cypress.com/go/CY8CKIT-001>.

To upgrade CY8CKIT-001A to CY8CKIT-001C, besides the upgrades stated above, you need to update the PSoC 3 processor module and kit DVD. Purchase the latest processor module at <http://www.cypress.com/go/CY8CKIT-009> and download the latest DVD ISO image at <http://www.cypress.com/go/CY8CKIT-001>.

To upgrade CY8CKIT-001 to CY8CKIT-001C, besides the upgrades stated above, you need to purchase the latest PSoC 5LP process module at <http://www.cypress.com/go/CY8CKIT-010>.

## 1.6 Additional Resources

Visit <http://www.cypress.com/go/training> for additional learning resources in the form of datasheets, technical reference manual, and application notes.

### 1.6.1 Beginner Resources

[AN54181 - Getting Started with PSoC® 3](#)

[AN77759 - Getting Started with PSoC® 5LP](#)

[AN79953 - Getting Started with PSoC® 4](#)

[PSoC Designer Training](#)

[PSoC Designer FAQ](#)

[PSoC Creator Training](#)

### 1.6.2 Engineers Looking for More

[AN54460 - PSoC 3®, PSoC 4, and PSoC 5LP Interrupts](#)

[AN52705 - PSoC 3® and PSoC 5LP - Getting Started with DMA](#)

[AN52701 - PSoC 3® and PSoC 5LP - Getting Started with Controller Area Network \(CAN\)](#)

[AN54439 - PSoC 3® and PSoC 5LP External Crystal Oscillators](#)

[AN52927 - PSoC 3® and PSoC 5LP - Segment LCD Direct Drive](#)

Cypress continually strives to provide the best support. Click [here](#) to view a growing list of application notes for PSoC 1, PSoC 3, PSoC 4, and PSoC 5LP.


### 1.6.3 Learning from Peers

[Cypress Developer Community Forums](#)

### 1.6.4 More Code Examples


PSoC Creator provides several example projects that make code development fast and easy. To access these example projects, click **Find Example Project...** under the **Example and Kits** section in the **Start Page** of PSoC Creator or navigate to **File** → **Example Project...**

Figure 1-1. Find Example Project

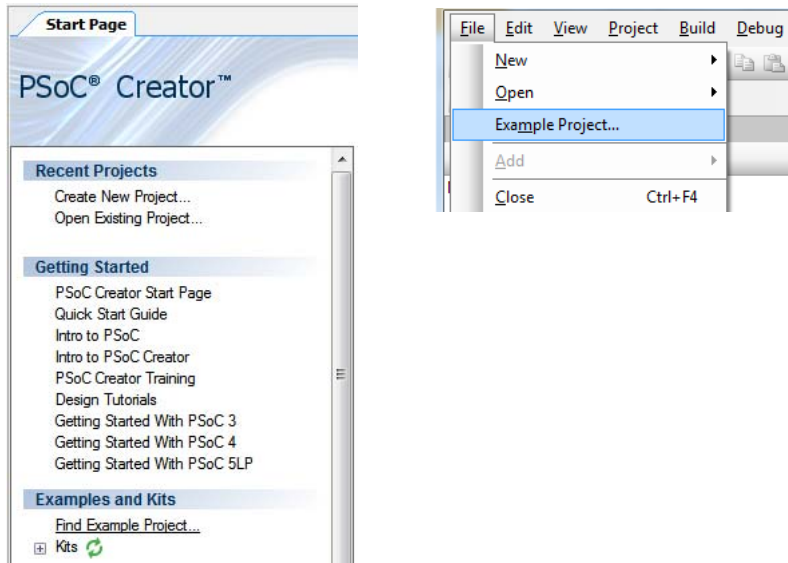

The Find Example Project section has various filters that help you locate the most relevant project. PSoC Creator provides several starter designs. These designs highlight features that are unique to PSoC devices. They allow you to create a design with various components, instead of creating an empty design; the code is also provided. To use a starter design for your project, navigate to **File** → **New** → **Project** and select the design required.

Figure 1-2. New Project

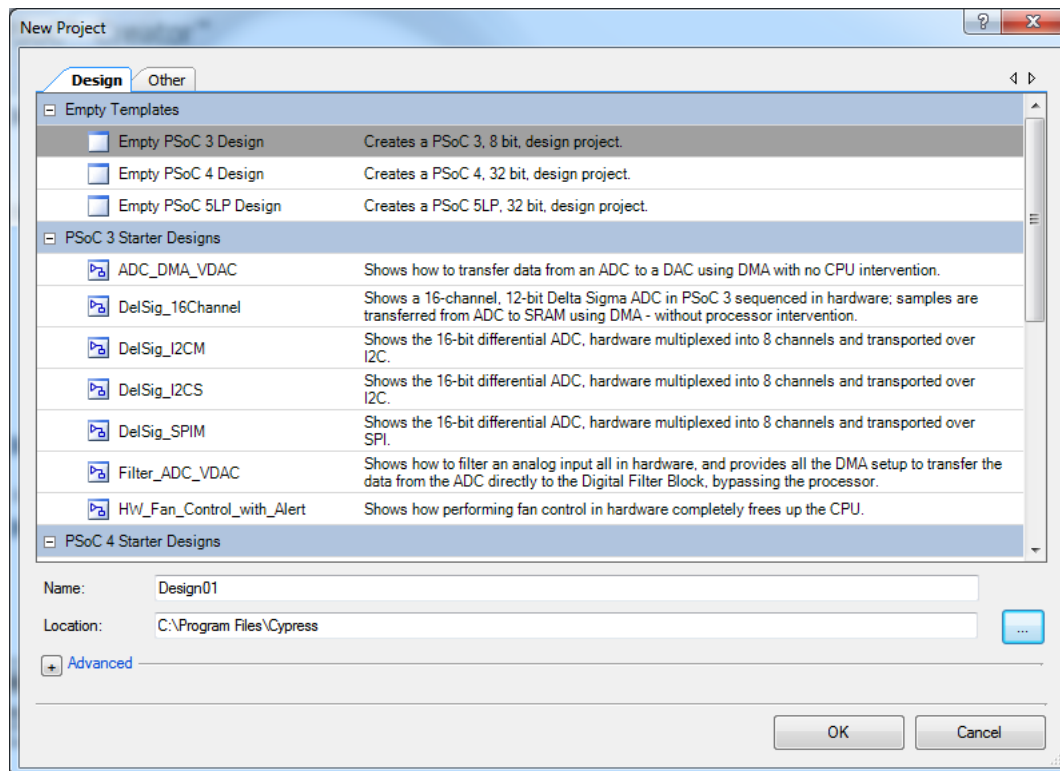

The example projects and starter designs are designed for the CY8CKIT-001 PSoC Development Kit. However, these projects can be converted for use with the CY8CKIT-030 PSoC 3 Development Kit or CY8CKIT-050 PSoC 5LP Development Kit by following the procedure in the knowledge base article [Migrating project from CY8CKIT-001 to CY8CKIT-030 or CY8CKIT-050](#).

## 1.7 Document Conventions

Table 1-1. Documentation Conventions

Convention	Usage
Courier New Size 12	Displays file locations and source code: C:\ ...cd\icc\.
<i>Italics</i>	Displays file names and reference documentation: <i>sourcefile.hex</i>
[bracketed, bold]	Displays keyboard commands in procedures: [Enter] or [Ctrl] [C]
<b>Bold → With → Arrows</b>	Represents menu paths, user entered text: <b>File → New Project → Clone</b>
<b>Bold</b>	Displays commands and selections, and icon names in procedures: Click the <b>Debugger</b> icon, and then click <b>Next</b> .
<b>Note</b>	Displays functionality unique to PSoC Designer, PSoC Creator, or the PSoC device.
<b>WARNING:</b>	Displays cautions that are important to the subject.

## 1.8 Document Revision History

Document Title: CY8CKIT-001 PSoC® Development Kit Guide			
Document Number: 001-48651			
Revision	Issue Date	Origin of Change	Description of Change
**	6/23/09	AESA	New Guide
*A	7/22/09	AESA	CDT based updates
*B	11/19/09	AESA	CDT based updates
*C	05/21/10	AESA	Updated with PSoC 5LP.
*D	01/05/11	RKAD	Updated images. Updated PSoC Creator and PSoC Programmer versions
*E	02/10/11	RKAD	Updated images. Added Kit Revision section
*F	12/16/11	RKAD	Content updates throughout the document.
*G	12/30/11	RKAD	Updated installation directory path. Added Figure 2-4 and Figure 2-10. Added note on Keil compilers in section 1.3.4.
*H	01/13/12	RKAD	Added note on USB cable in section 1.2 - Kit Contents. Appended to note in section A.1.4 - LCD Module
*I	01/18/12	RKAD	Minor ECN to include attachments in pdf. No content updates made.
*J	05/03/12	SASH	Added the Additional Resources section

<b>Document Title: CY8CKIT-001 PSoC® Development Kit Guide</b>			
<b>Document Number: 001-48651</b>			
<b>Revision</b>	<b>Issue Date</b>	<b>Origin of Change</b>	<b>Description of Change</b>
*K	07/04/12	SASH	Added Appendix D for PSoC Creator DWR. Updated images for PSoC Creator version 2.1.
*L	11/08/12	SASH	Added A.1.7.4 Protection Circuit. Updated 1.5 Kit Revision. Updated figures in Chapter 3.
*M	07/25/13	KUK/ SASH	Updated all PSoC 1 images in Section 2 and Section 3. Added note relating to OCD parts in sections 3.1 and 3.2
*N	11/20/13	SASH	Updated PSoC Creator images. Added information on PSoC 4

## 2. Loading My First PSoC Project



The CY8CKIT-001 PSoC Development Kit supports projects across the PSoC 1, PSoC 3, PSoC 4, and PSoC 5LP architectures. This section walks you through the high-level design process for opening, building, programming, and running your first PSoC project using this kit.

**Note** The PSoC 4 processor module is not packaged with this kit. Refer to the CY8CKIT-038 PSoC 4200 Family Processor Module Kit User Guide in <http://www.cypress.com/go/cy8ckit-038> for more details on the PSoC 4 processor module.

Before beginning, follow each of these steps to make certain that your software and hardware environments are properly configured and ready for these projects:

1. Install PSoC Designer using the steps listed in [Installing PSoC 1 Development Software on page 8](#).
2. Install PSoC Creator using the steps listed in [Installing PSoC 3 Development Software on page 8](#).
3. Connect the MiniProg3 into your PC using the supplied USB cable. When you connect the MiniProg3, Microsoft Windows® may indicate that it has found new hardware. All required drivers are installed as part of the PSoC Programmer installation process; however, if Windows opens the driver installation dialog boxes, accept the defaults and allow Windows to automatically find the appropriate driver.
4. Close any open PSoC Creator or PSoC Designer applications and projects.
5. Configure the PSoC development board (jumper settings and switches) in its default configuration, as described in [Default Switch and Jumper Settings on page 10](#).
6. Use the PSoC CY8C28 family processor module or PSoC CY8C29 family processor module for the PSoC 1 version of your first PSoC project ([My First PSoC 1 \(CY8C28\) Project on page 18](#) or [My First PSoC 1 \(CY8C29\) Project on page 23](#)).
7. Use the PSoC CY8C38 family processor module for the PSoC 3 version of your first PSoC project ([My First PSoC 3 \(CY8C38\) Project on page 28](#)).
8. Use the PSoC CY8C58LP family processor module for the PSoC 5LP version of your first PSoC project ([My First PSoC 5LP \(CY8C58LP\) Project on page 31](#)).
9. For a PSoC 1 project, use the ISSP header on the PSoC CY8C28 family processor module or PSoC CY8C29 family processor module and connect the MiniProg3 ISSP port.
10. For a PSoC 3 or PSoC 5LP project, use the JTAG ribbon cable. Connect the ribbon cable to the MiniProg3 and the CY8C38 family processor module or CY8C58LP family processor module into the header labeled PROG on the processor module.

**Note** The MiniProg3 should not be "hot plugged" into processor modules that are attached to the PSoC development board. In other words, do not plug the ribbon cable of the MiniProg3 into the processor module while code is actively running on the module. Doing so may cause the PSoC device to unintentionally reset. Power down the PSoC development board and module by unplugging the power supply from the development board before attaching the MiniProg3 device to the module board. When the ribbon cable is attached to the module board, power the system by plugging in the power supply to the PSoC development board. This will avoid any undesirable PSoC device resets.

11. Power the PSoC development board using the 12-V AC power supply adapter.


## 2.1 My First PSoC 1 (CY8C28) Project

This is a simple PSoC 1 project using a pulse width modulator (PWM) peripheral inside PSoC, and software to control the blinking rates of two different LED outputs. For this project, be sure you have the PSoC CY8C28 family processor module inserted into the PSoC development board and the appropriate software installed. This section walks you through the steps to open, build, and program a project.

### 2.1.1 Loading My First PSoC 1 Project

1. Open PSoC Designer.
2. In the **Start Page**, navigate to **File** → **Open Project/Workspace**
3. Navigate to the project directory: <Install\_Directory>\PSoC Development Kit CY8C28\<version>\Firmware\CY8C28.
4. Open the folder Ex1\_LED\_with\_PWM.
5. Double-click **Ex1\_LED\_with\_PWM.app**.
6. The project opens in the Chip Editor view. All project files are in the **Workspace Explorer**.


Figure 2-1. Chip Editor View

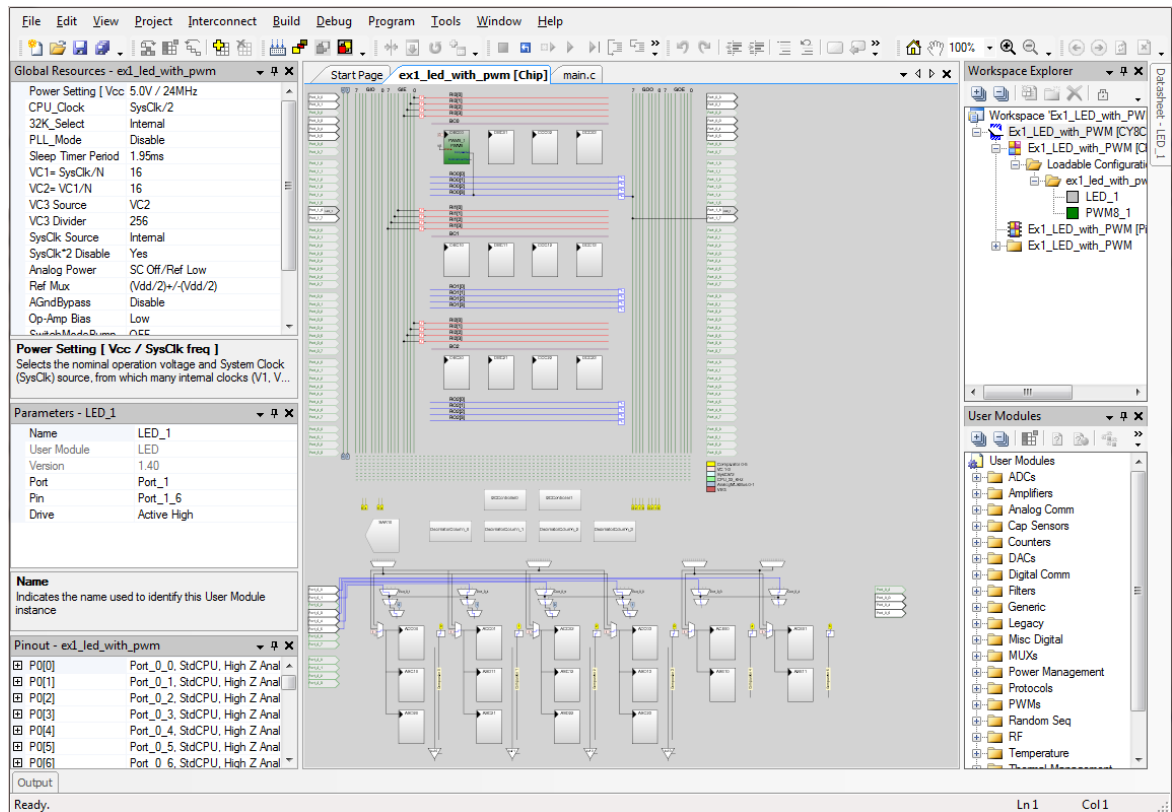

## 2.1.2 Building My First PSoC 1 Project


1. Select **Build** → **Generate/Build 'Ex1\_LED\_with\_PWM' Project**.

Figure 2-2. Build Project

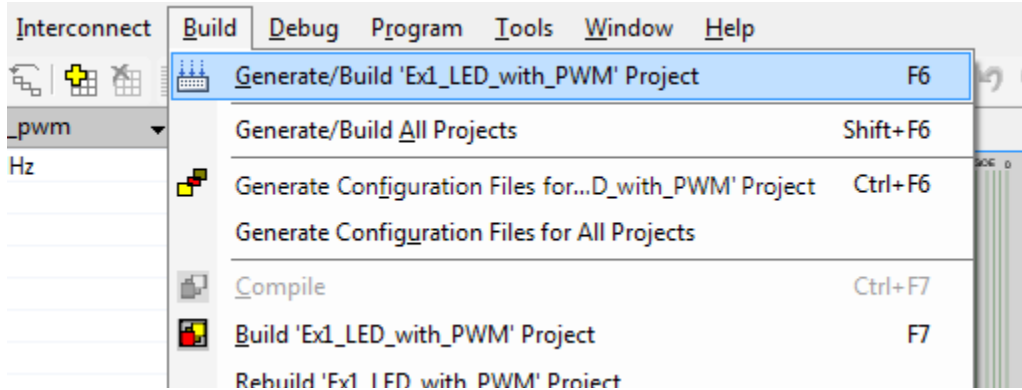


2. PSoC Designer builds the project and displays comments in the **Output** window. When you see the message that the project is built with 0 errors and 0 warnings, you are ready to program the device.

Figure 2-3. Output Window

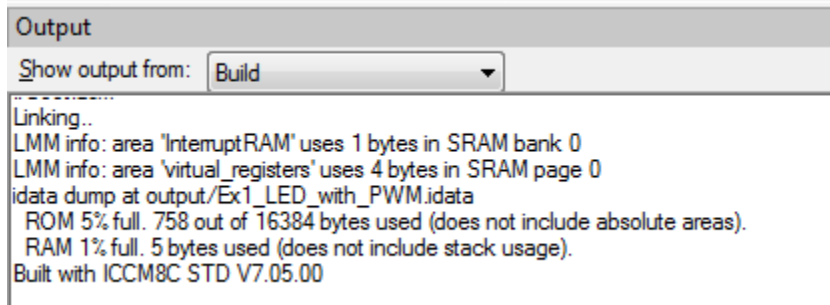

### 2.1.3 Programming My First PSoC 1 Project

Figure 2-4. Connect MiniProg3 to J5 on CY8C28 Family Processor Module

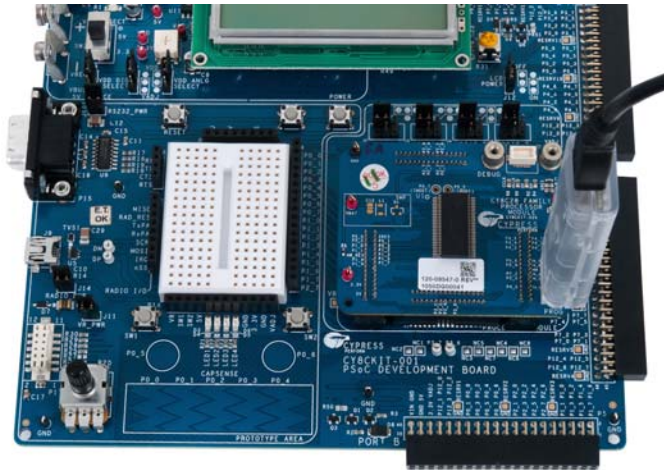

#### Programming using PSoC Designer

1. Open **Program Part** from within PSoC Designer by selecting **Program** → **Program Part**.
2. In the **Program Part** window, ensure that **MiniProg3** is selected in the **Port Selection** box.
3. In the **Program Part** window, set **Acquire Mode** to **Reset**.
4. In the **Program Part** window, set **Verification** to **On**. This ensures that downloaded checksum matches the actual checksum.
5. In the **Program Part** window, click the program arrow to program the device.

#### Programming using PSoC Programmer

6. In PSoC Programmer, set **AutoDetection** to **On** to enable the software to automatically detect and configure for the target device family and device. If PSoC Programmer is properly configured, AutoDetection reports a device family of 28xxx.


**Note** Make sure **ISSP protocol** is selected.

7. Wait until programming is completed, to continue.

**Note** For debugging purposes, the CY8C28 family processor module is designed to accommodate the use of the CY3215-DK In-Circuit Emulator (ICE-Cube). When using the ICE-Cube debugger, make certain that PSoC Designer is configured so that the ICE-Cube does not provide power to the processor module. Within the PSoC Designer application, select **Project** → **Settings** and select **Debugger** from the tree. Make sure that **External only** is selected under the **Pod Power Source** section and select **Execute Program** from the **Debug** menu to start debugging.

Connect the processor module to the CY3215-DK ICE-Cube, as shown in [Figure 2-5](#).


Figure 2-5. ICE-Cube Connected to CY8C28 (PSoC 1) Processor Module

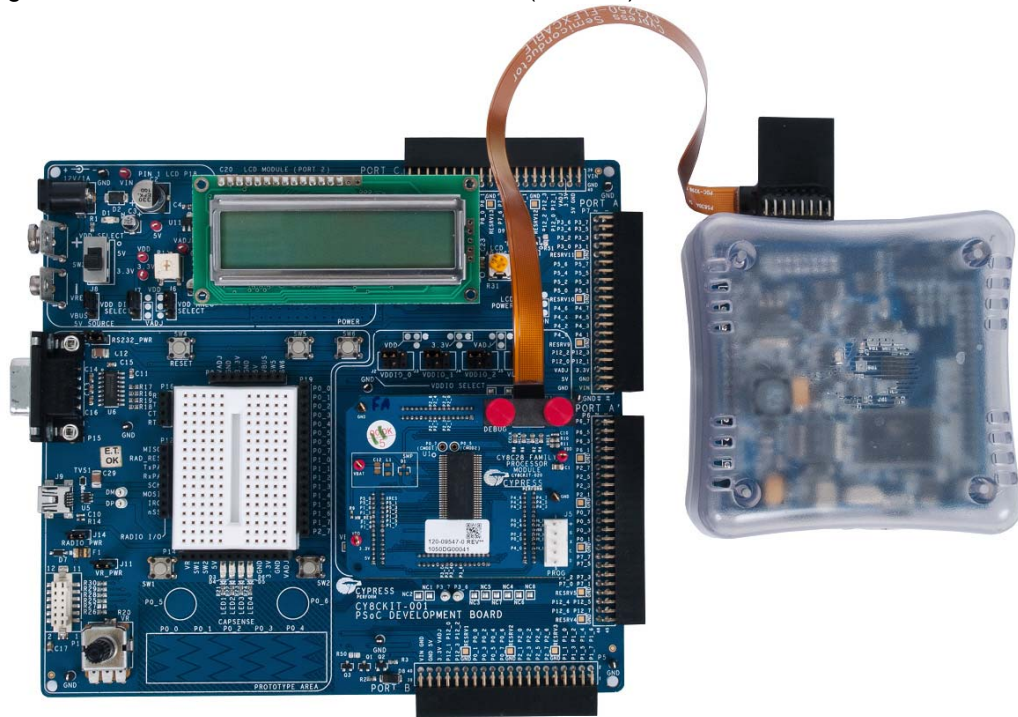

### 2.1.4 Running My First PSoC 1 Project

1. Connect P1[6] to LED1 and P1[7] to LED2. Verify that LED1 and LED2 are blinking based on the project's use of the PWM and software. Now that the PSoC 1 device is programmed, reset the PSoC development board by pressing and releasing the reset switch (SW4).
2. LED1 blinks approximately once every second and LED2 blinks about three times a second.

Figure 2-6. Connect P1[6] to LED1 and P1[7] to LED2

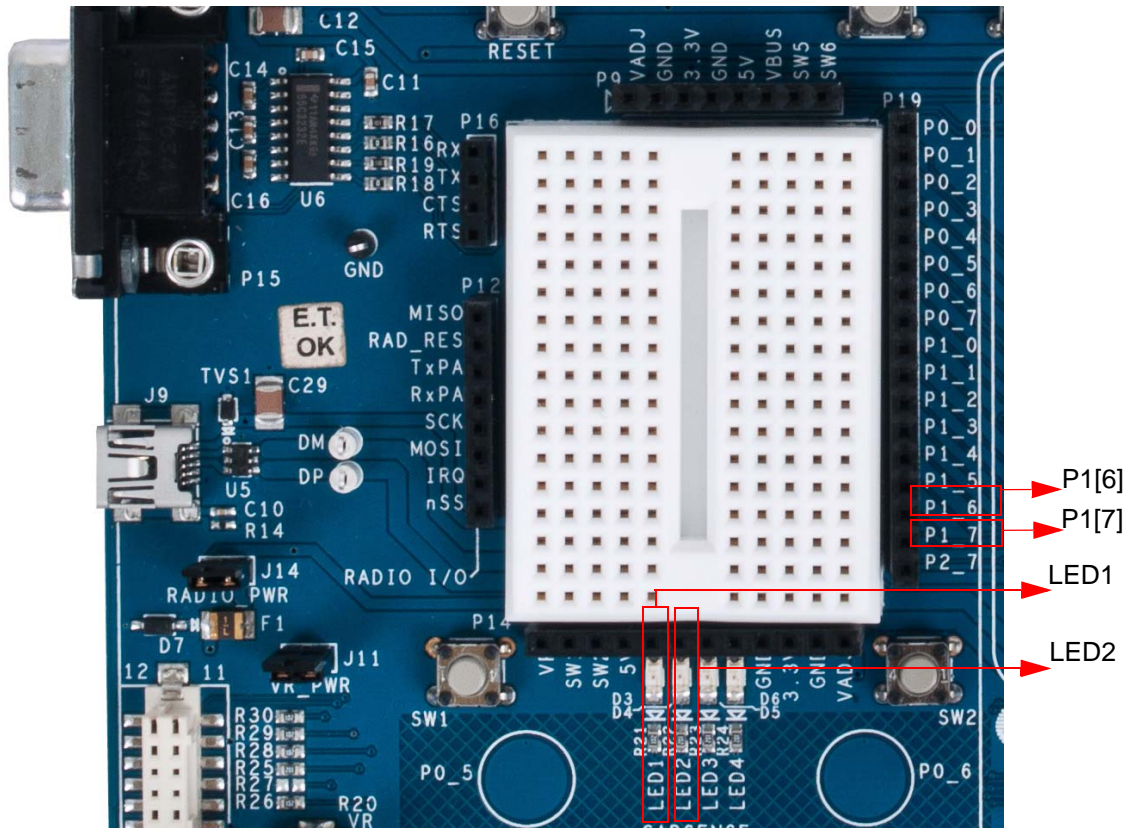

3. For more details regarding this project, see the detailed project instructions in [My First PSoC 1 \(CY8C28\) Project on page 37](#).


## 2.2 My First PSoC 1 (CY8C29) Project

This is a simple PSoC 1 project using a PWM peripheral inside PSoC, and software to control the blinking rates two different LED outputs. For this project, be sure you have the PSoC CY8C29 family processor module inserted into the PSoC development board and the appropriate software installed. This section walks you through the steps to open, build, and program a project.

### 2.2.1 Loading My First PSoC 1 Project

1. Open PSoC Designer.
2. In the **Start Page**, navigate to **File** → **Open Project/Workspace**.
3. Navigate to the project directory: C:\Cypress\CY8CKIT-001\CY8C29 Projects.
4. Open the folder Example\_My\_First\_PSoC\_Project.
5. Double-click **Example\_My\_First\_PSoC\_Project.app**.
6. The project opens in the Chip Editor view. All project files are in the **Workspace Explorer**.


Figure 2-7. Chip Editor View

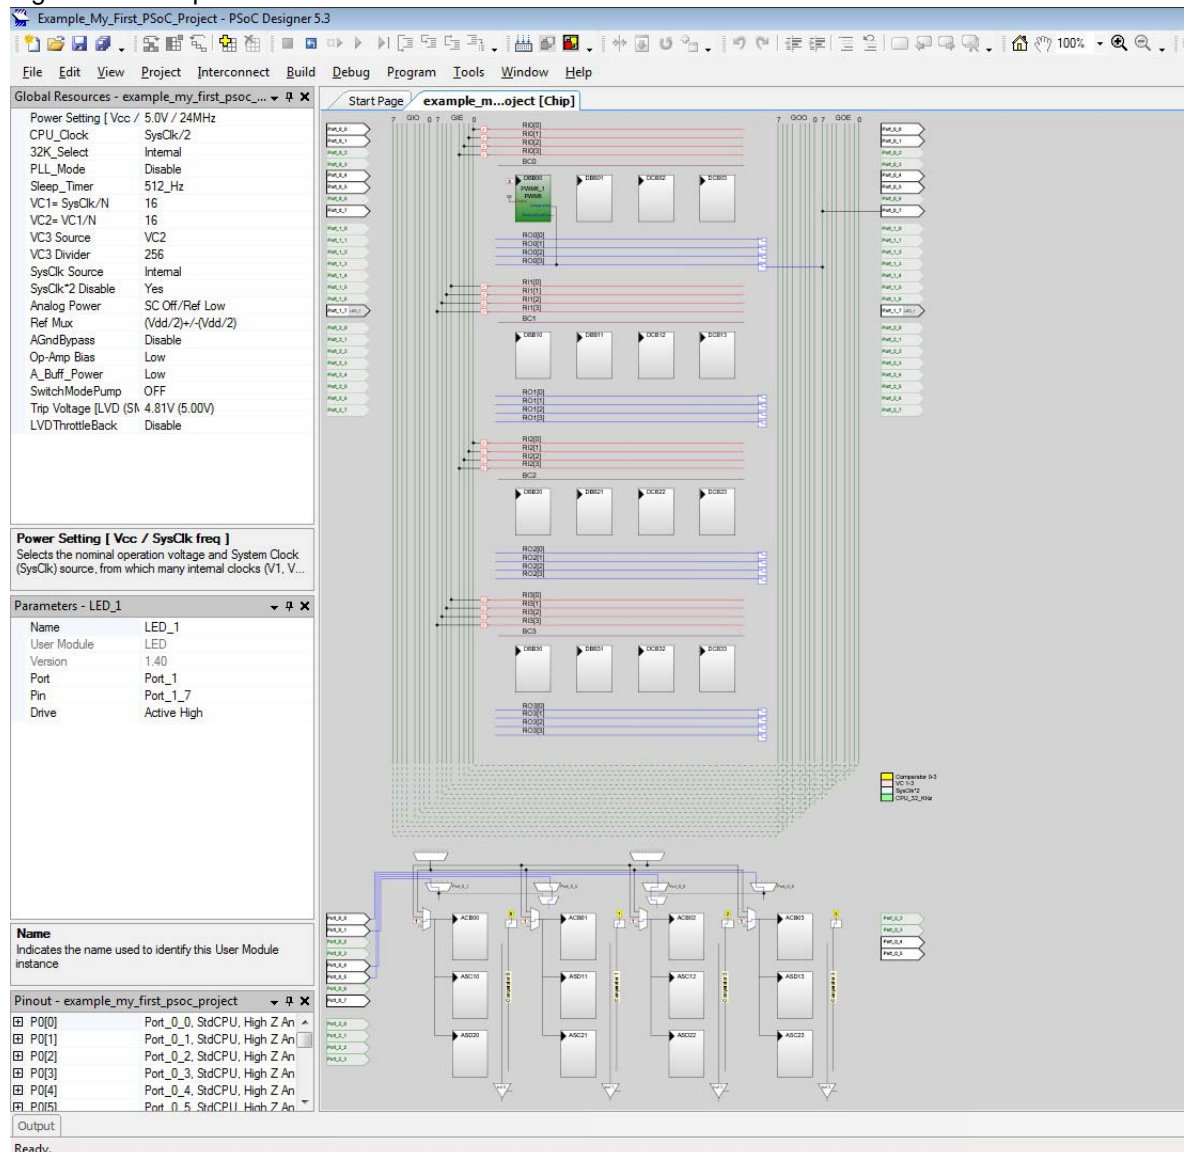

## 2.2.2 Building My First PSoC 1 Project


1. Select **Build** → **Generate/Build 'Example\_My\_First\_PSoC\_Project' Project**.

Figure 2-8. Build Project

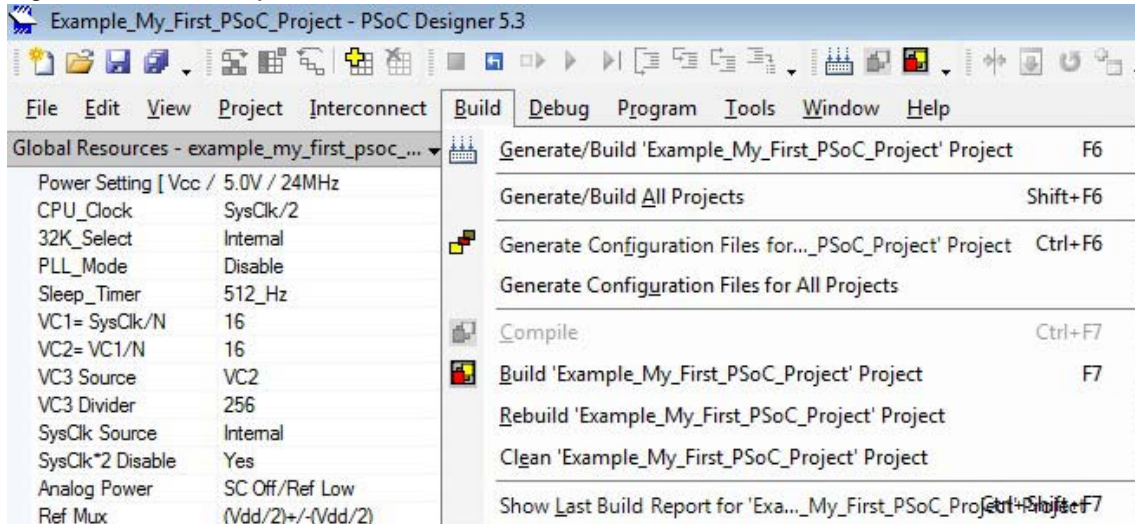


2. PSoC Designer builds the project and displays comments in the **Output** window. When you see the message that the project is built with 0 errors and 0 warnings, you are ready to program the device.

Figure 2-9. Output Window

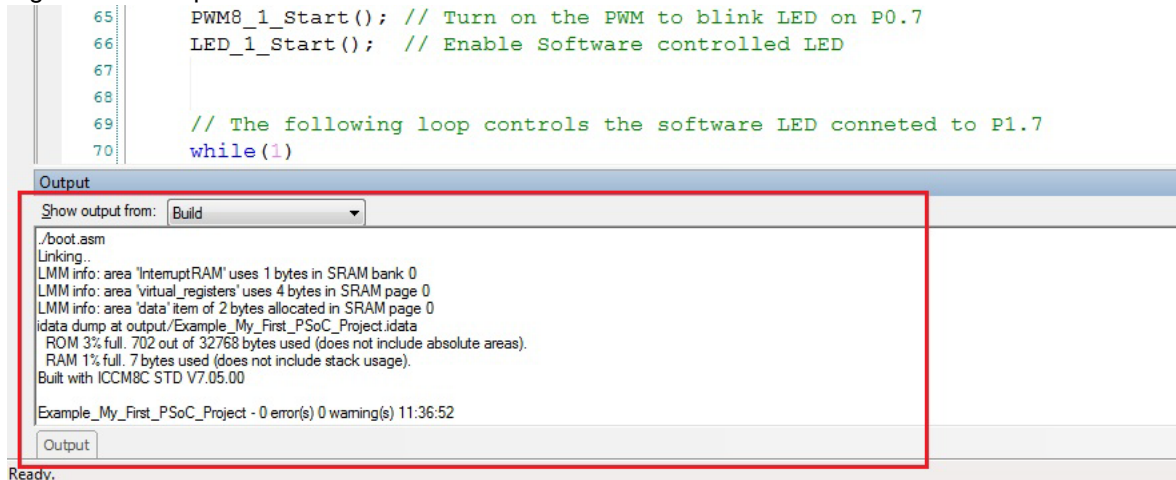

### 2.2.3 Programming My First PSoC 1 Project

Figure 2-10. Connect MiniProg3 to J5 on CY8C29 Family Processor Module

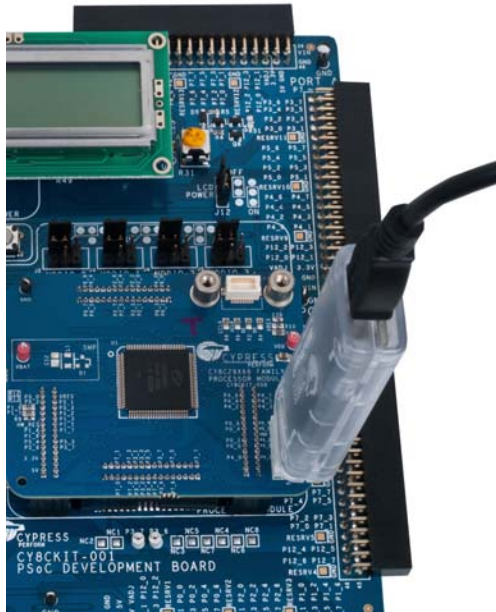


1. Open PSoC Programmer from within PSoC Designer by selecting **Program** → **PSoC Programmer**.
2. In PSoC Programmer, make sure that **MiniProg3** is selected in the **Port Selection** box.
3. In PSoC Programmer, set **Programming Mode** to **Reset**.
4. In PSoC Programmer, set **Verification** to **On** so that the software verifies that the downloaded program's checksum matches the actual checksum of the flash memory after programming. This is a precautionary check to verify that there is no data corruption during programming.
5. In PSoC Programmer, set **AutoDetection** to **On** to enable the software to automatically detect and configure for the target device family and device. If PSoC Programmer is properly configured, AutoDetection reports a device family of 29x66 and device of CY8C29466.  
**Note** Make sure ISSP protocol is selected.
6. With these settings configured, click **Program** to program your PSoC 1 device.
7. Wait until programming is complete before continuing.

**Note** For debugging purposes, the CY8C29 family processor module is designed to accommodate the use of the CY3215-DK In-Circuit Emulator (ICE-Cube). When using the ICE-Cube debugger, make certain that PSoC Designer is configured so that the ICE-Cube does not provide power to the processor module. Within the PSoC Designer application, select **Project** → **Settings** and select **Debugger** from the tree. Make sure that **External only** is selected under the **Pod Power Source** section and select **Execute Program** from the **Debug** menu to start debugging.

Connect the processor module to the CY3215-DK ICE-Cube, as shown in [Figure 2-11](#).

Connect USB cable between ICE-Cube and PC. Also Connect 12 V power supply to ICE-Cube separately.


Figure 2-11. ICE-Cube Connected to CY8C29 (PSoC 1) Processor Module

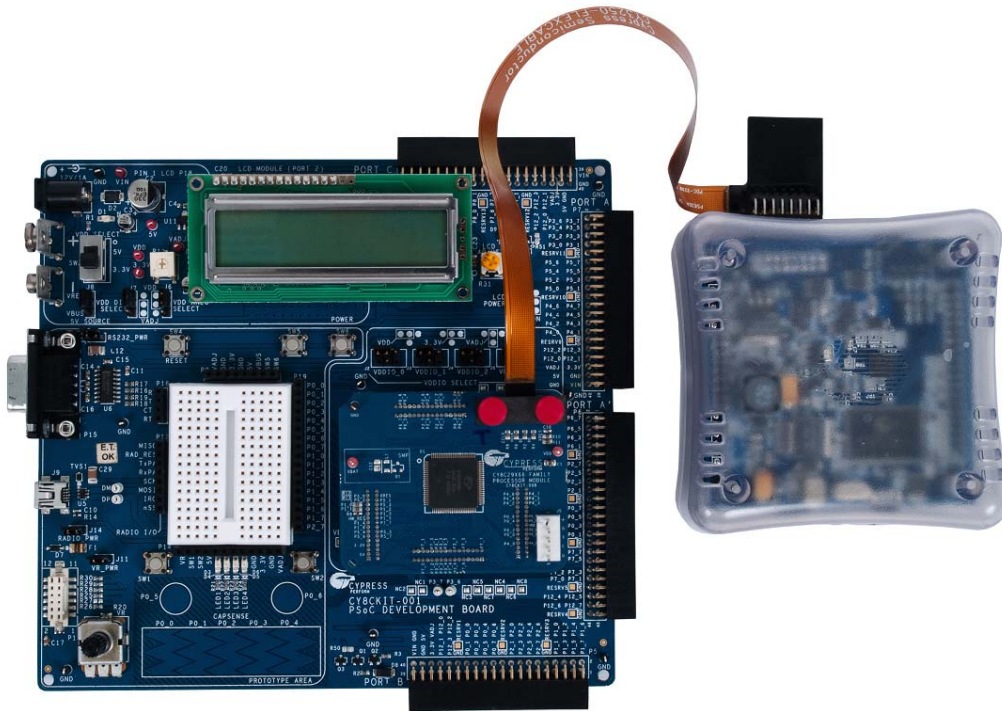

## 2.2.4 Running My First PSoC 1 Project

1. Connect P0[7] to LED1 and P1[7] to LED2. Verify that LED1 and LED2 are blinking based on the project's use of the PWM and software. Now that the PSoC 1 device is programmed, reset the PSoC development board by pressing and releasing the reset switch (SW4).
2. LED1 blinks approximately once every second and LED2 blinks about three times a second.

Figure 2-12. Connect P0[7] to LED1 and P1[7] to LED2

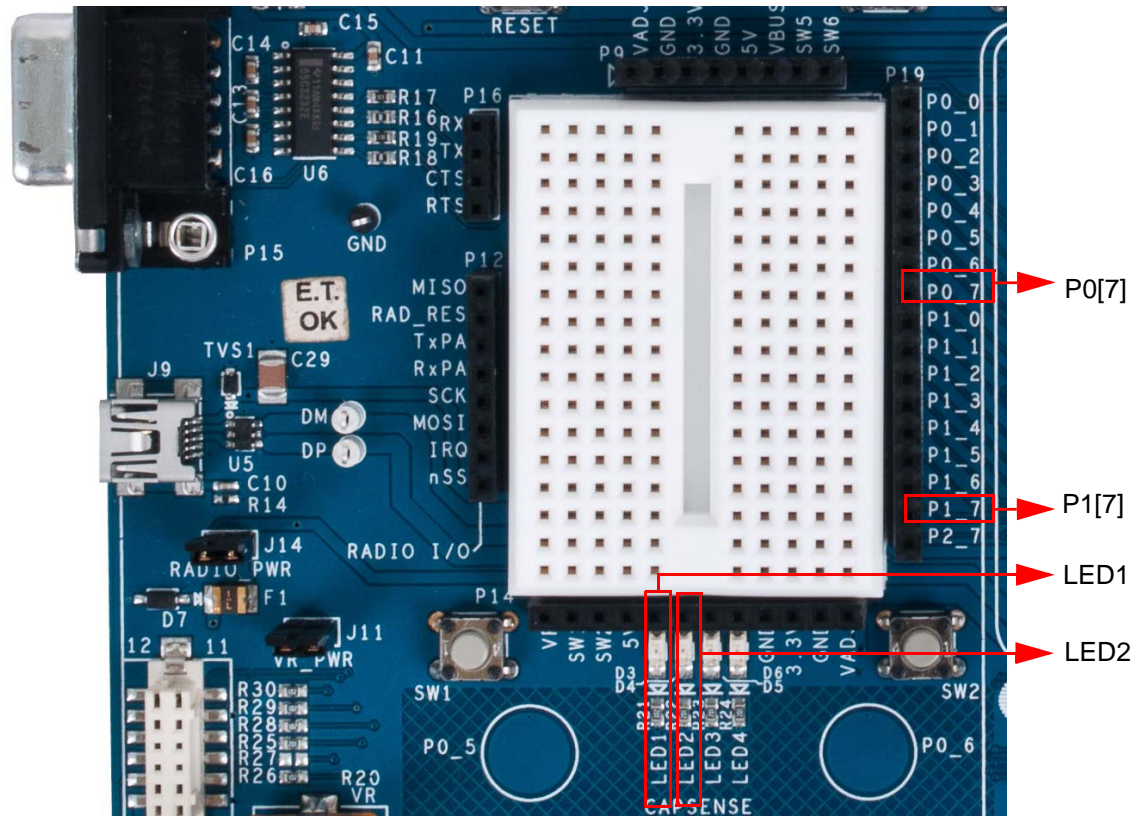

3. For more details regarding this project, see the detailed project instructions in [My First PSoC 1 \(CY8C29\) Project on page 73](#).


## 2.3 My First PSoC 3 (CY8C38) Project

This is a PSoC 3 project using a PWM peripheral inside the PSoC 3 device to control the blinking rates of two different LED outputs. For this project, insert the PSoC CY8C38 family processor module in the PSoC development board and install the appropriate software. This section shows you the steps to open, build, and program a project.

### 2.3.1 Loading My First PSoC 3 Project


1. Open PSoC Creator.
2. In the **Start Page**, under **Examples and Kits** expand **Kits**.
3. Under **Kits**, expand **CY8CKIT-009A 3.0**.
4. Click **Ex1\_LED\_with\_PWM.cywrk** to open the project.

Figure 2-13. Kits List

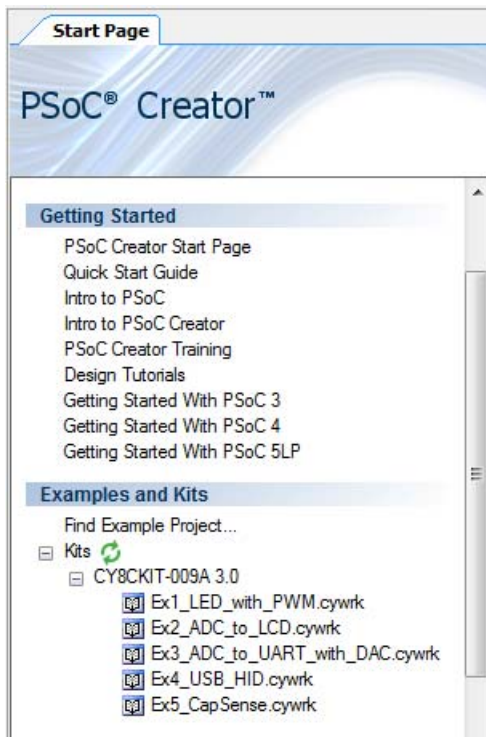

5. Select the directory to store the project.
6. After the project opens, you can see the project files in **Workspace Explorer** (see [Figure 2-14](#)).


Figure 2-14. Workspace Explorer

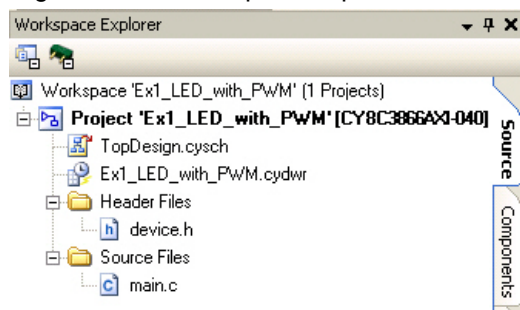

### 2.3.2 Building My First PSoC 3 Project


1. Select **Build** → **Build Ex1\_LED\_with\_PWM**.

Figure 2-15. Build Window

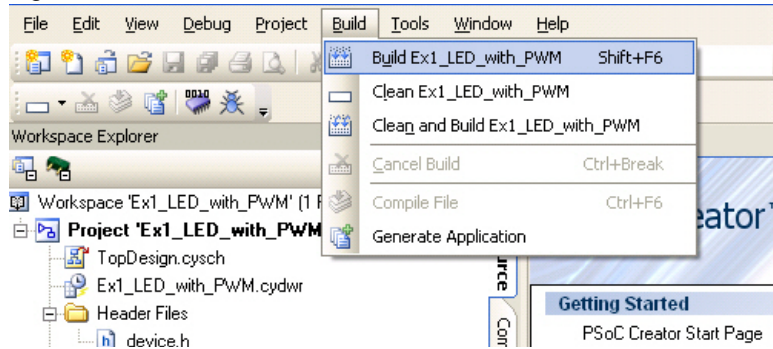


2. PSoC Creator builds the project and displays the comments in the **Output** window. When you see the message "Build Succeeded", you are ready to program the device.

Figure 2-16. Output Window

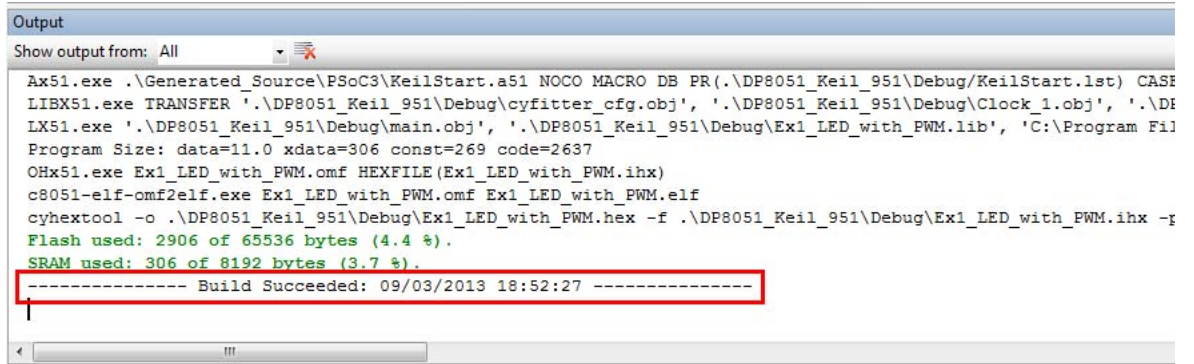

### 2.3.3 Programming My First PSoC 3 Project

Figure 2-17. Connect MiniProg3 to J5 on CY8C38 Family Processor Module

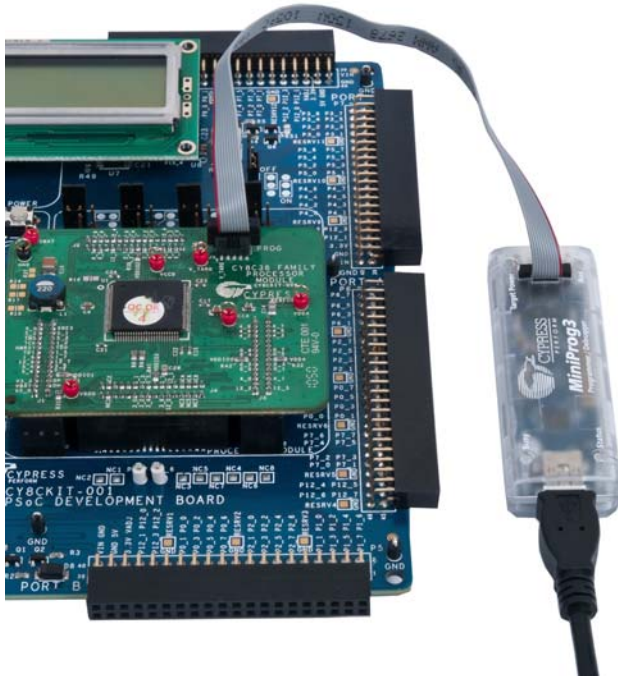

1. If this is your first time running PSoC Creator, follow these steps to configure the MiniProg3 device for these PSoC development kit projects. If these configurations are set, skip to the next step and begin programming.
 


**Note** VTARG of the MiniProg3 is wired exclusively to VDDIO1 of the chip on the PSoC CY8C38 family processor module. Because of this, you cannot perform power cycle mode programming.

  - From the **Tools** menu in PSoC Creator, click **Options**. The **Options** window opens.
  - In the **Options** window, select **Program/Debug** → **Port Configuration** → **MiniProg3** from the list.
    - Set **Power** to **3.3 V**
    - Set **Active Protocol** to **SWD**
    - Set **Connector** to **10 Pin**
    - Set **Acquire Mode** to **Reset**
    - Set **Clock Speed** to **3.2 MHz**
    - Click **OK**.
  - From the **Debug** menu, select **Select Debug Target**. The **Select Debug Target** dialog box opens.
    - Expand the tree under **MiniProg3** and click **Port Acquire**.
    - Select the appropriate device and click **Connect**.
    - Click **OK**.
2. In PSoC Creator, from the **Debug** menu, click **Program**.
3. The PSoC Creator status bar indicates that the device is programming.
4. Wait until programming is complete before continuing.

### 2.3.4 Running My First PSoC 3 Project

1. Unplug the development board, switch SW3 to 3.3 V and then reapply power to the board.
2. Connect P1[6] to LED1 and P1[7] to LED2. Verify that LED1 and LED2 are blinking based on the project's use of the PWMs.
3. LED1 blinks approximately once every second and LED2 blinks about three times a second.

Figure 2-18. Connect P1[6] to LED1 and P1[7] to LED2

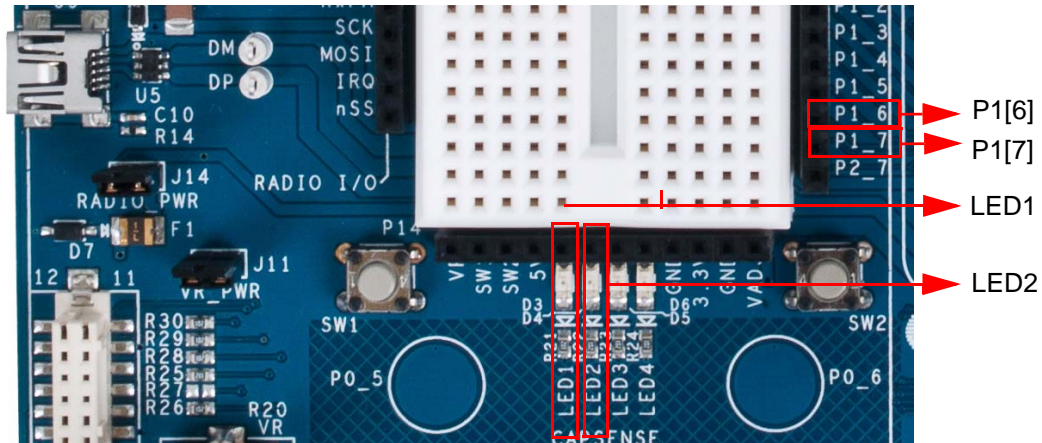

4. For more details regarding this project, review the detailed project instructions in [My First PSoC 3/PSoC 5LP Project \(LED\\_with\\_PWM\)](#) on page 104.


## 2.4 My First PSoC 5LP (CY8C58LP) Project

This project uses a PWM peripheral programmed from inside PSoC 5LP to control the blinking rates of two different LED outputs. For this project, insert the PSoC CY8C58LP family processor module in the PSoC development board and install the appropriate software. This section shows the steps to open, build, and program a project.

### 2.4.1 Loading my First PSoC 5LP Project


1. Open PSoC Creator.
2. In the **Start Page**, under **Examples and Kits** expand **Kits**.
3. Under **Kits**, expand **CY8CKIT-010A 3.0**.
4. Click **Ex1\_LED\_with\_PWM.cywrk** to open the project.

Figure 2-19. Kits List

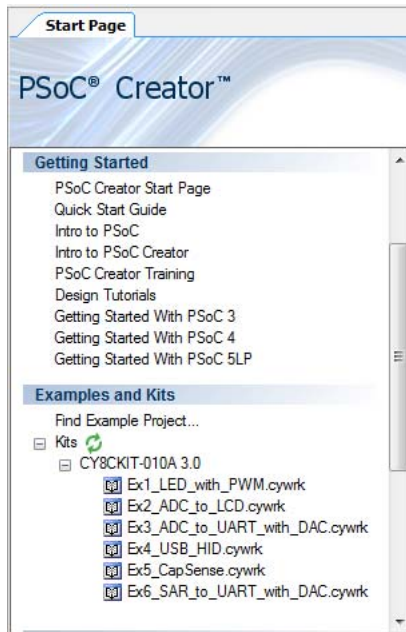

5. Select the directory to store the project.
6. After the project opens, you can see the project files in Workspace Explorer.


Figure 2-20. Workspace Explorer

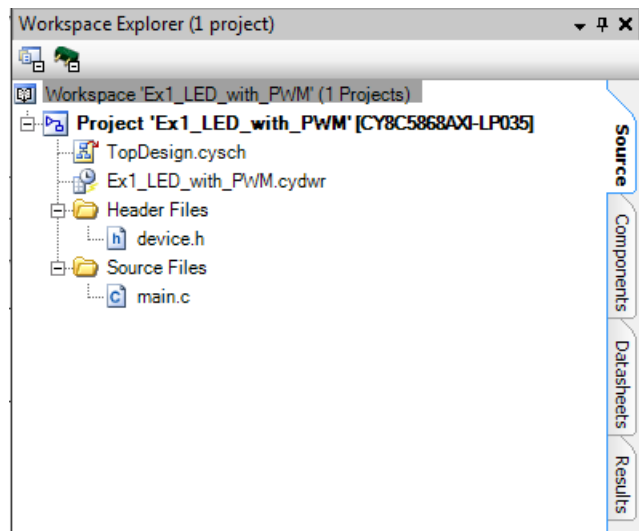

## 2.4.2 Building My First PSoC 5LP Project


1. Select **Build** → **Build Ex1\_LED\_with\_PWM**.

Figure 2-21. Build Window

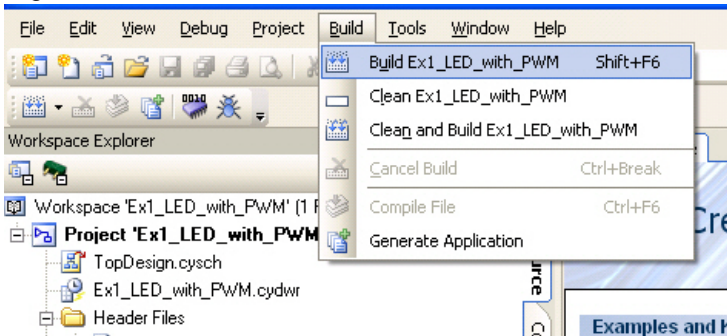


2. PSoC Creator builds the project and displays the comments in the Output window. When you see the message "Build Succeeded", you are ready to program the device.

Figure 2-22. Output Window

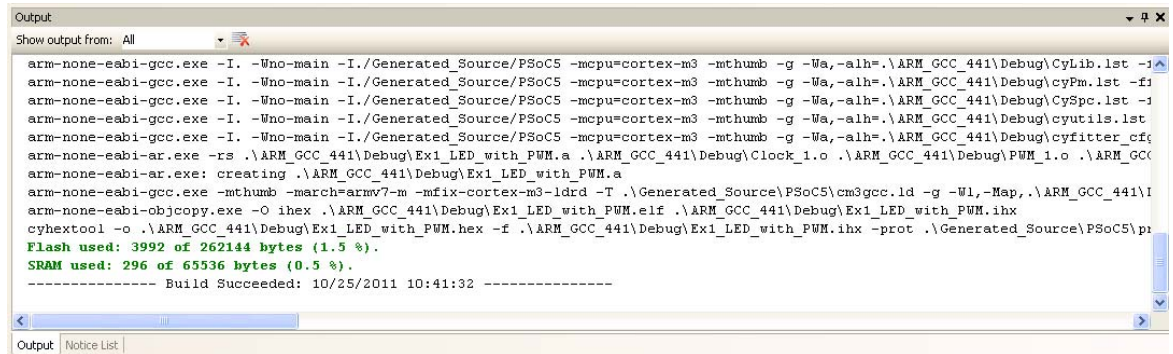

### 2.4.3 Programming My First PSoC 5LP Project

Figure 2-23. Connect MiniProg3 to J5 on CY8C58LP Family Processor Module

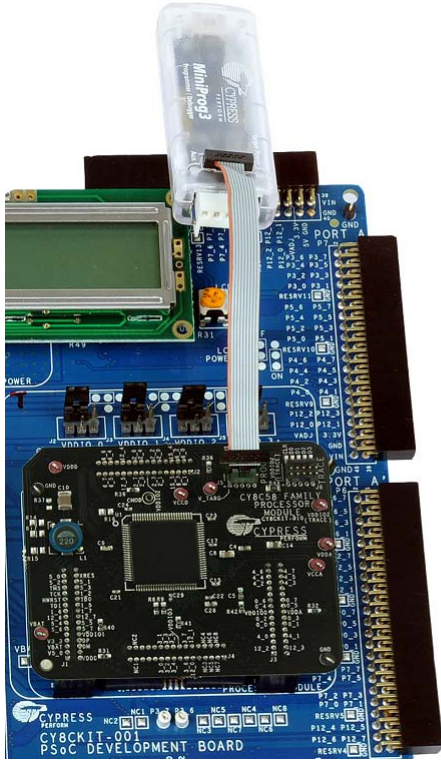

1. If this is your first time running PSoC Creator, follow these steps to configure the MiniProg3 device for these PSoC development kit projects. If these configurations are set, skip to the next step and begin programming.

**Note** VTARG of the MiniProg3 is wired exclusively to VDDIO1 of the chip on the PSoC CY8C58LP family processor module. Because of this, you cannot perform power cycle mode programming.


- From the **Tools** menu in PSoC Creator, click **Options**.
  - In the Options window, select **Program/Debug** → **Port Configuration** → **MiniProg3** from the list.
    - Set **Power** to **3.3 V**
    - Set **Active Protocol** to **SWD**
    - Set **Connector** to **10 Pin**
    - Set **Acquire Mode** to **Reset**
    - Set **Clock Speed** to **3.2 MHz**
    - Click **OK**
  - From the **Debug** menu, select **Select Debug Target**.
  - Expand the tree under **MiniProg3** and click **Port Acquire**.
  - Select the appropriate device and click **Connect**.
  - Click **Close**.
2. In PSoC Creator, from the **Debug** menu, click **Program**.
  3. The PSoC Creator status bar indicates that the device is programming.

4. Wait until programming is complete before continuing.

### 2.4.4 Running My First PSoC 5LP Project

1. Unplug the development board, switch SW3 to 3.3 V and then reapply power to the board.
2. Connect P1[6] to LED1 and P1[7] to LED2. Verify that LED1 and LED2 are blinking based on the project's use of the PWMs.
3. LED1 blinks approximately once every second and LED 2 blinks about three times a second.

Figure 2-24. Connect P1[6] to LED1 and P1[7] to LED2

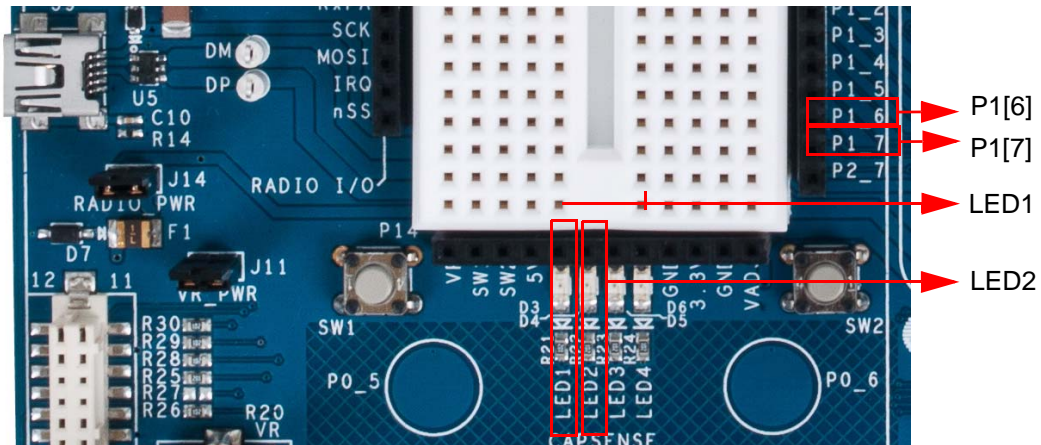



## 3. Sample Projects



This chapter shows you how to create the sample projects included with this kit.

Read these precautions before you create code examples:

- All CY8C28 and CY8C29 family processor module code examples are configured for 5 V.
- All CY8C38 and CY8C58LP family processor module code examples are configured for 3.3 V.
- Close any open project in PSoC Creator before loading or creating a code example.
- When working with code examples, use the 12-V power supply adapter.
- Remove power before changing board jumpers for each code example. Reapply power after you place jumpers on the breadboard.
- When you complete each project make certain to save the project.

### 3.1 CY8C28 Family Processor Module Code Examples


**Note** The PSoC device on the module is CY8C28000. This is an on-chip debug (OCD) part, which can be used to emulate any PSoC from the CY8C28xxx family.

#### 3.1.1 My First PSoC 1 (CY8C28) Project

##### 3.1.1.1 *Creating My First PSoC 1 (CY8C28) Project*


1. Open PSoC Designer.
2. To create a new project, click **File** → **New Project**. The **New Project** window opens.
3. In the **New Project** window, select **Chip-Level Project**. Name the project **Ex1\_LED\_with\_PWM**.
4. In the **Location** field, click **Browse** and navigate to the appropriate directory.

Figure 3-1. New Project Window

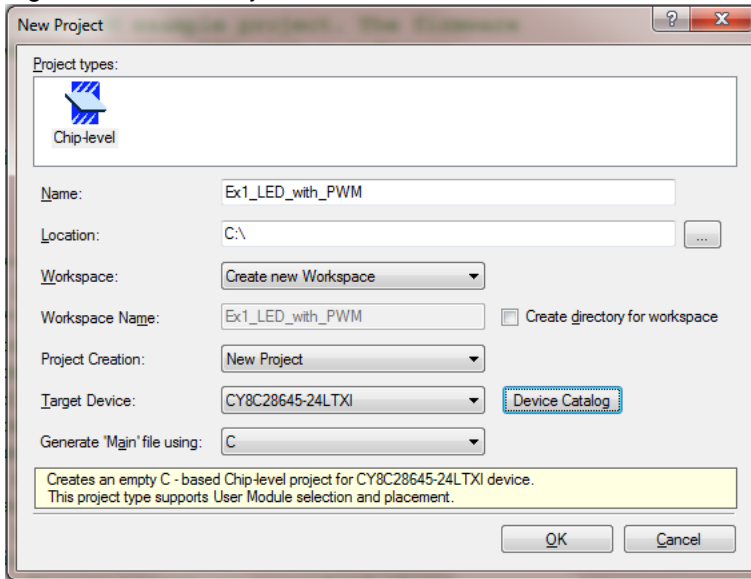


5. In project creation drop down menu, select **New Project**.

Figure 3-2. Select Project Type

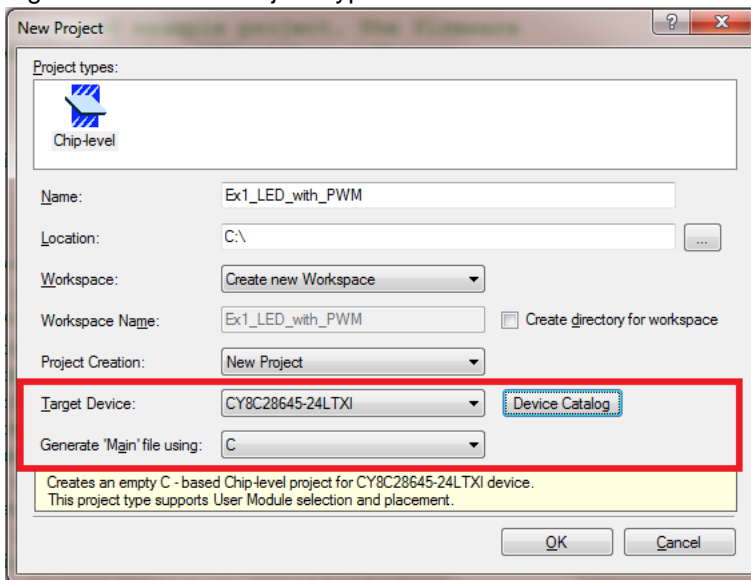

6. Under **Select Target Device**, click **Device Catalog**.
7. The **Device Catalog** window opens.
8. Click the **CY8C28645-24LTXI** device; click **Create Project with CY8C28645-24LTXI**.


Figure 3-3. Device Catalog Window

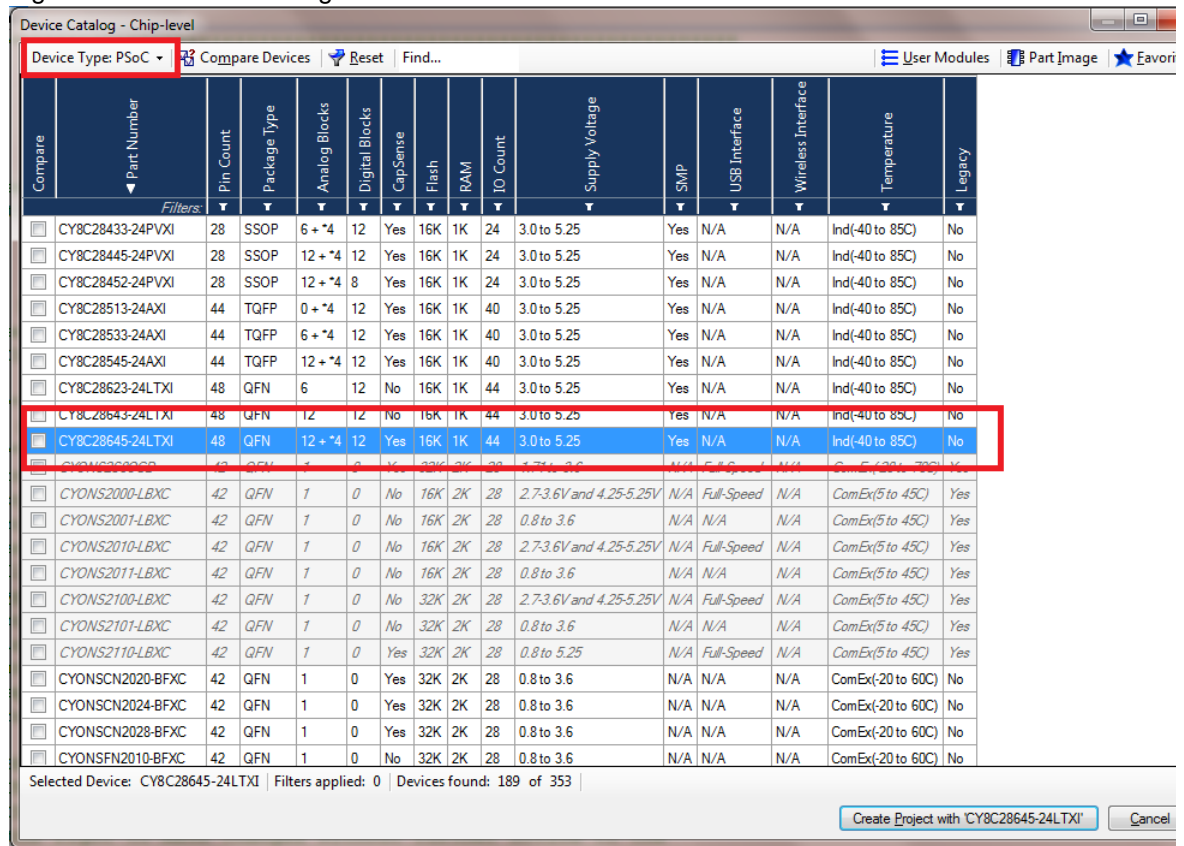

9. Under **Generate 'Main' File Using:**, select **C**; then, click **OK**.


10. By default, the project opens in Chip view.

Figure 3-4. Default View

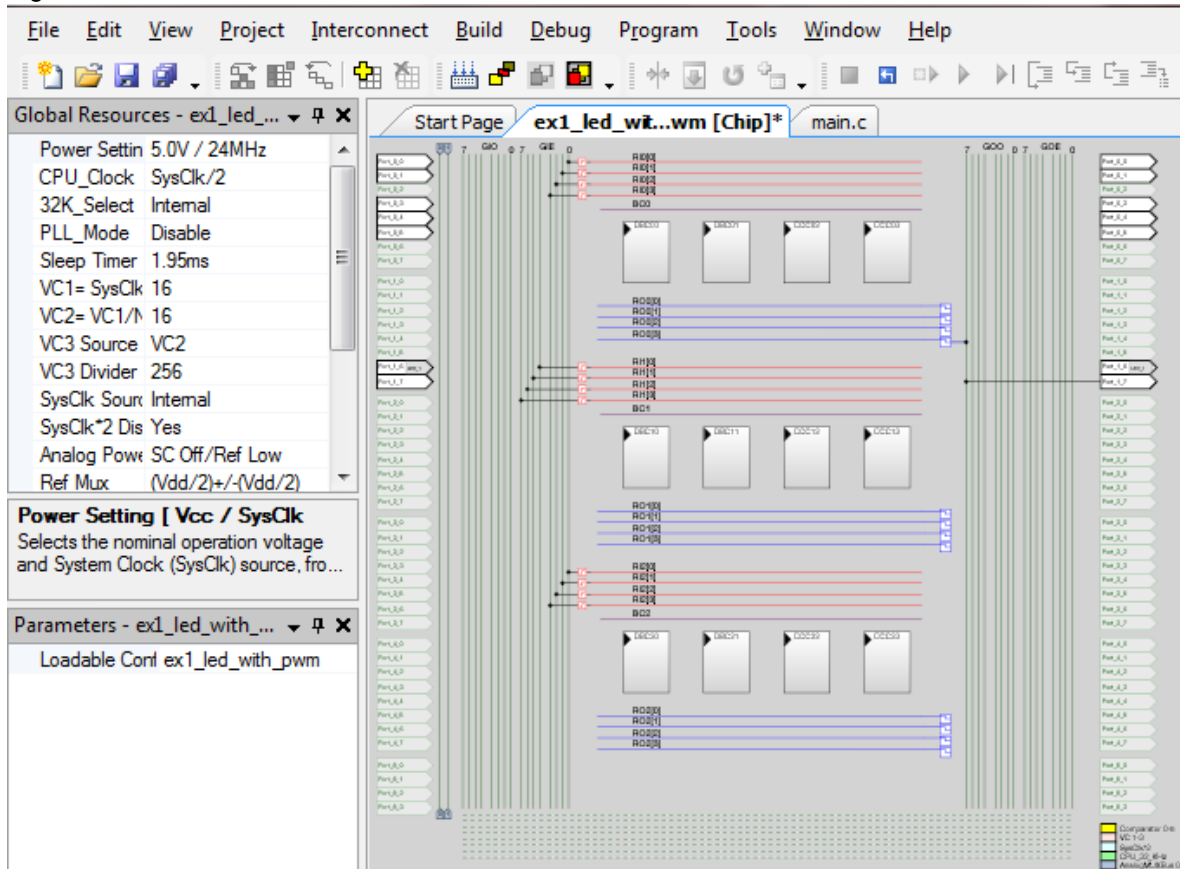


11. In the **User Modules** window, expand the **PWMs** folder.

Figure 3-5. User Modules Window

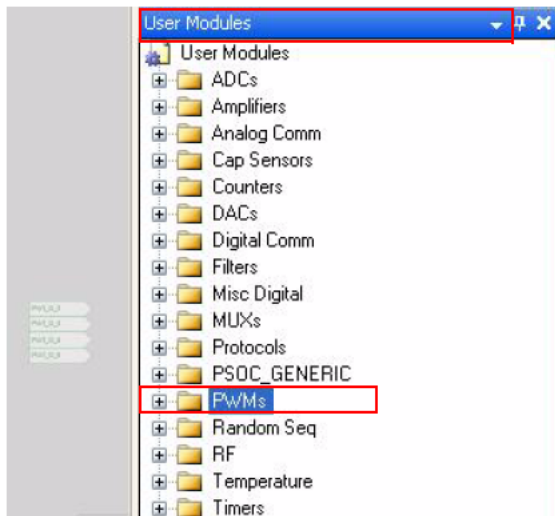

12. In this folder, right-click on **PWM8** and select **Place**. The user module (UM) is placed in the first available digital block.

Figure 3-6. Place User Module PWM8

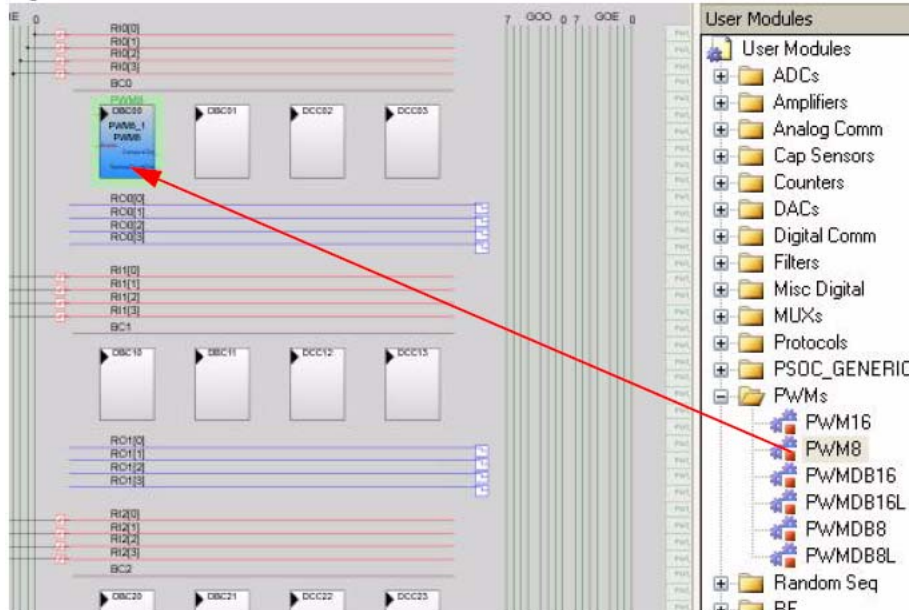


13. Click the placed PWM8\_1 UM; the **Properties** window opens on the left side of the screen. Configure the PWM with the settings shown in the following figure. If the **Properties** window does not appear, click **View** → **Properties Window**.

Figure 3-7. Properties Window

Parameters - PWM8_1	
Name	PWM8_1
User Module	PWM8
Version	2.60
Clock	VC3
Enable	High
CompareOut	Row_0_Output_3
TerminalCountOut	None
Period	100
PulseWidth	50
Compare Type	Less Than Or Equal
Interrupt Type	Terminal Count
ClockSync	Sync to SysClk
InvertEnable	Normal

14. Next, route the PWM **CompareOut** signal to P1[7]. The first step is to configure the lookup table (LUT) on **Row\_0\_Output3**.


Figure 3-8. Route PWM8 CompareOut Signal to P1[7]

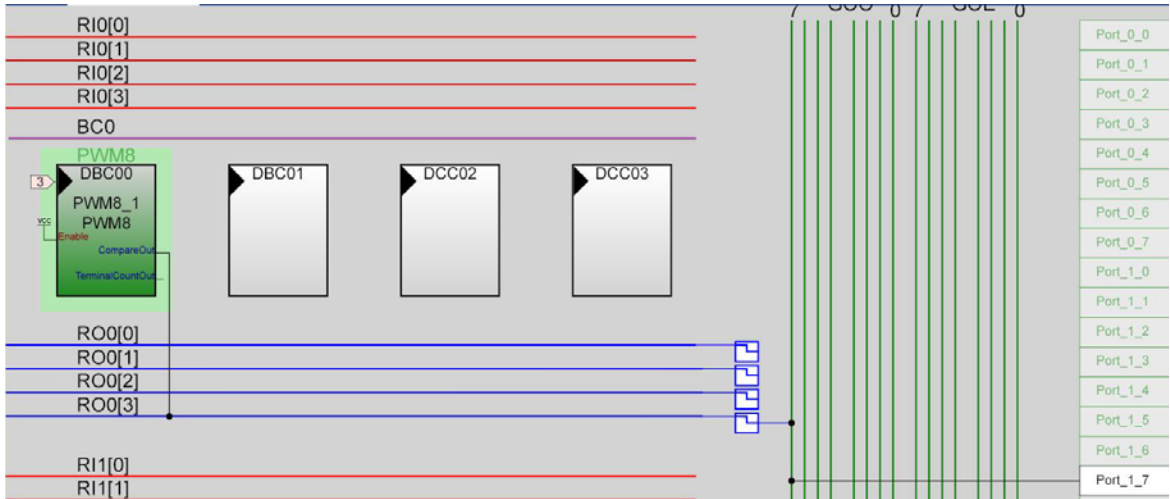

15. Double-click the LUT, the **Digital Interconnect** window opens.

16. In this window, enable **Row\_0\_Output\_3\_Drive\_3** to connect to **GlobalOutOdd\_7**.


Figure 3-9. Digital Interconnect Window

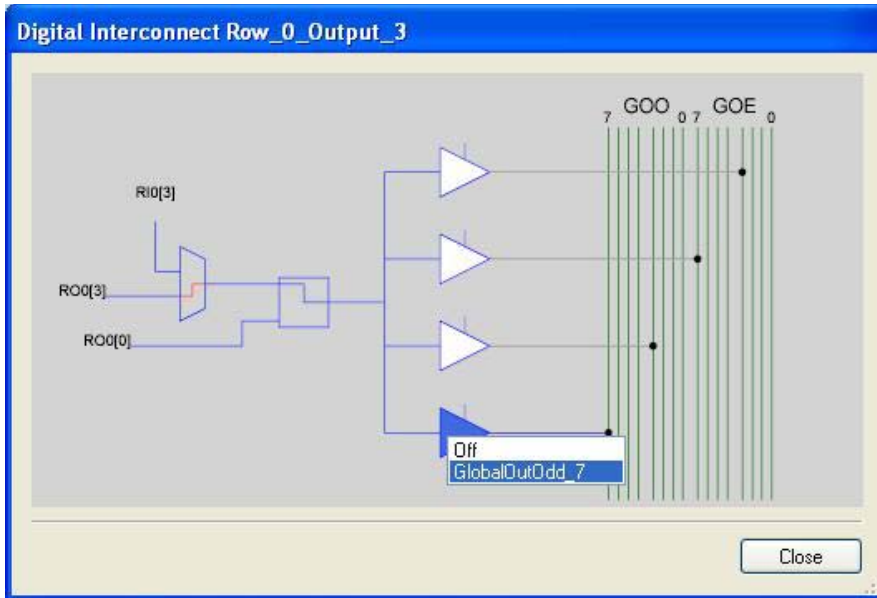

17. Click **Close**.

18. Click **GlobalOutOdd\_7**. In the window that appears, configure **Pin** for **Port\_1\_7**.


Figure 3-10. Configure Pin for Port\_1\_7

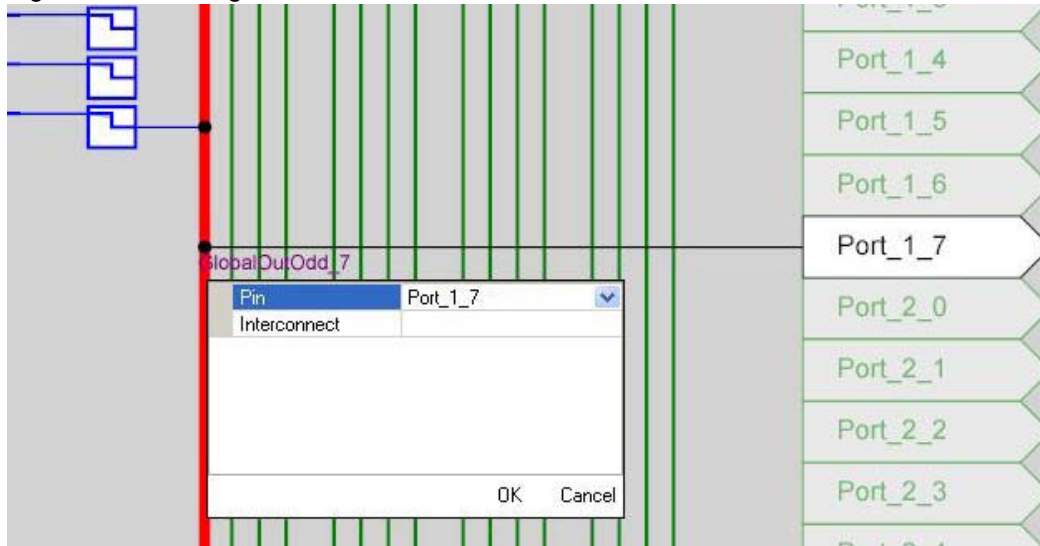

19. Click **OK** to continue.


20. In the **User Modules** window, expand the **Misc Digital** folder. In this folder, right-click **LED** and select **Place**; this adds the UM to the project. This UM does not use digital or analog blocks. It appears in **Workspace Explorer** → **Ex1\_LED\_with\_PWM[CY8C28]** → **Ex1\_LED\_with\_PWM[Chip]** → **Loadable Configurations** → **Ex1\_LED\_with\_PWM - 2 User Modules**.

Figure 3-11. Workspace Explorer

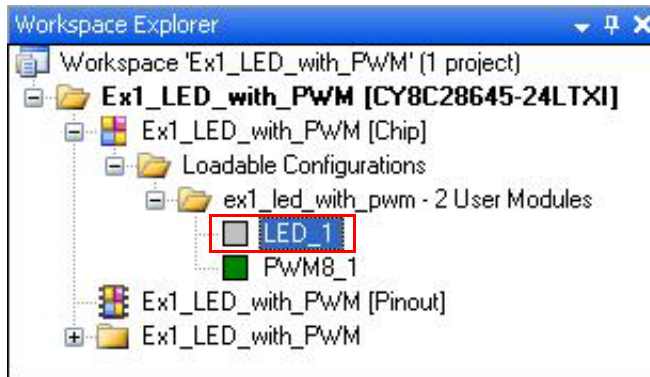

21. Click the **LED\_1** UM and navigate to the **Properties** window. Configure the LED for **P1[6]**.

Figure 3-12. Properties Window

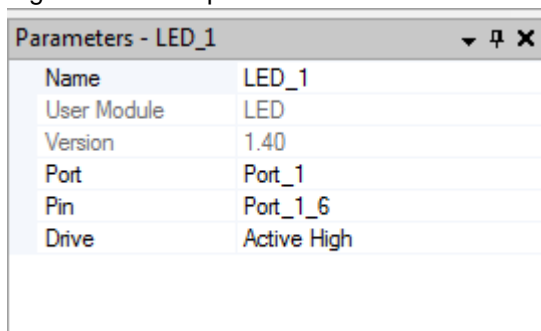


22. Configure the **Global Resources** window to match the following figure.

Figure 3-13. Global Resources Window

Global Resources - ex1_led_with_pwm	
Power Setting [ Vcc / Sy]	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep Timer Period	1.95ms
VC1= SysClk/N	16
VC2= VC1/N	16
VC3 Source	VC2
VC3 Divider	256
SysClk Source	Internal
SysClk*2 Disable	Yes
Analog Power	SC Off/Ref Low
Ref Mux	(Vdd/2)+/(Vdd/2)
AGndBypass	Disable
Op-Amp Bias	Low
SwitchModePump	OFF
Trip Voltage [LVD (SMP)]	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable

23. Open the existing *main.c* file in Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex1.c* file, which is available within the attachments feature of this PDF document.

Figure 3-14. Workspace Explorer

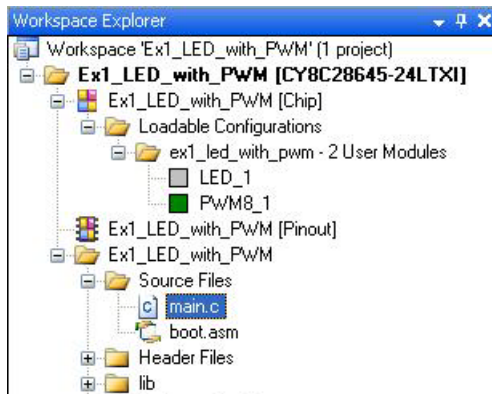

24. Save the project.

25. To build the project, click **Build** → **Generate/Build 'Ex1\_LED\_with\_PWM' Project**.

26. Disconnect power to the board.

27. Configure the DVK board SW3 to 5 V.

28. Configure the DVK breadboard using the included jumper wires:

- P1[6] to LED1
- P1[7] to LED2

29. Reapply power to the board.

30. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 20](#) to program the device.

31. Reset the DVK and observe the blinking LEDs.

32. Save and close the project.

### 3.1.1.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex1.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```
#include <m8c.h>          /* Part specific constants and macros */
#include "PSoCAPI.h"     /* PSoC API definitions for all User Modules */

/*****
 * Function Name: main
 *****/
*
* Summary:
* The main function initializes the PWM and starts the PWM clock which will
* blink LED1. Then the main loop is entered which delays enough for LED2 to
* blink at a quicker rate than LED1.
*
* Parameters:
* void
*
* Return:
* void
*
*****/
void main(void)
{
    WORD i;              /* Variable used for delay */

    PWM8_1_Start();     /* Turn on the PWM to blink LED on P1.6 */
    LED_1_Start();      /* Enable Software controlled LED */

    /* The following loop controls the software LED connected to P1.7 */
    while(1)
    {
        /* Delay time depends on compiler optimization levels and CPU clock */
        for (i = 0; i < 60000; i++); // Gives approximately 450 msec delay with Image-
Craft
        // and 170 msec with HiTech
        #ifdef HI_TECH_C
            for (i = 0; i < 60000; i++); // Give some more delay if HiTech compiler is used.
            for (i = 0; i < 40000; i++);
        #else
            #endif
        /* Switch the state of Software LED (on or off) */
        LED_1_Invert();
    } /* End of while(1) */
} /* End of main */

/* [] END OF FILE */
```


### 3.1.2 ADC to LCD Project

This project demonstrates a 9-bit delta-sigma analog-to-digital converter (ADC) by measuring the voltage of the potentiometer center tap wiper and displaying the result on the LCD. Connect the voltage potentiometer (VR) to the ADC input P0[1]. The program reads the 9-bit ADC result and prints it to the LCD.

#### 3.1.2.1 Creating ADC to LCD Project


1. Follow steps 1 to 10 in the section [Creating My First PSoC 1 \(CY8C28\) Project on page 37](#); change the project name to **Ex2\_ADC\_to\_LCD**.
2. In the **User Modules** window, expand the **ADCs** folder and right-click **DelSigPlus**; select **Place**. A window opens with multiple options for the DelSigPlus UM. Here, the **DS1128** configuration is used. Scroll down in the window to verify that this is the case.

Figure 3-15. Multiple User Module Window

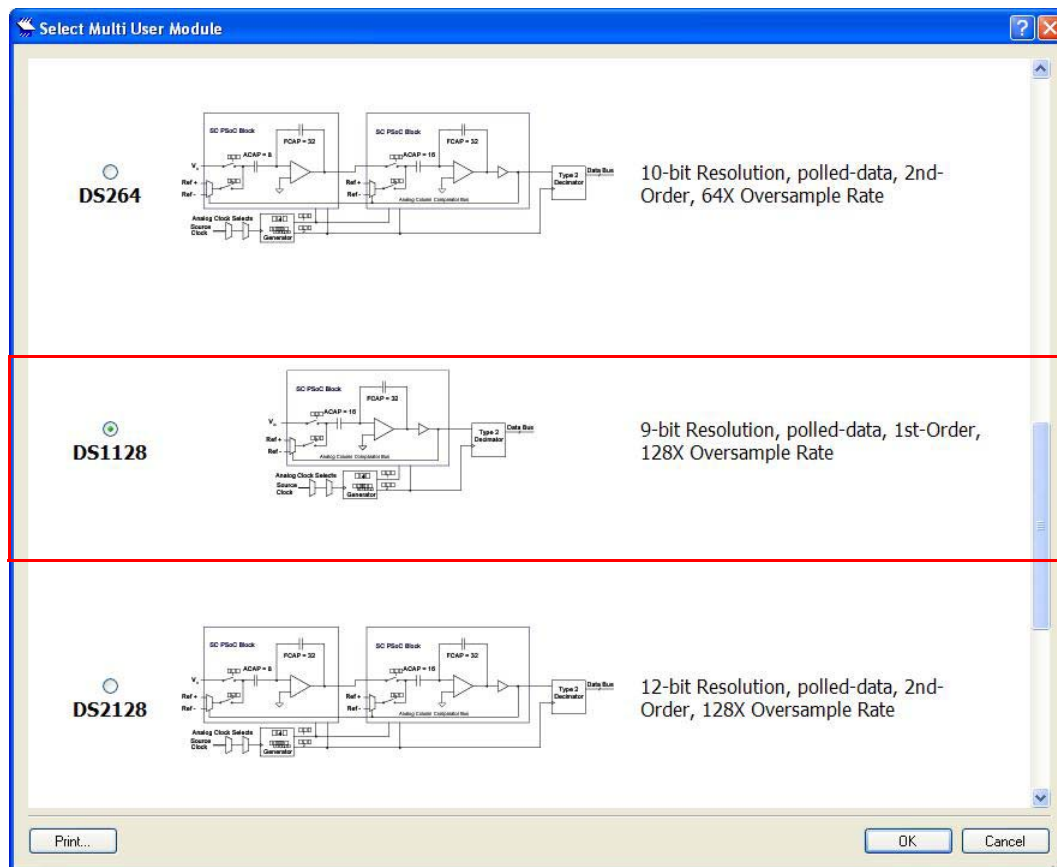

3. Click **OK**.
4. Verify that the **DelSigPlus\_1** UM is placed in **ASC10**.
5. In the **User Modules** window, expand the **Amplifiers** window. Right-click **PGA** and select **Place**. Ensure that the **PGA** is placed in **ACC00**.

Figure 3-16. Place PGA in ACC00

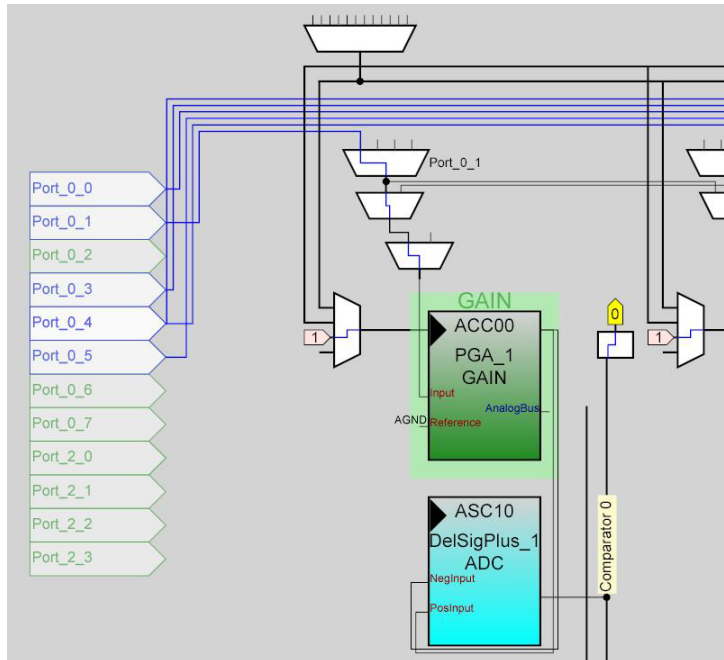

6. In the **User Modules** window, expand **Misc Digital**; right-click **LCD** and click **Place**.
7. Click **PGA\_1** and configure the properties to match this figure.

Figure 3-17. PGA\_1 Properties

Properties - PGA_1	
Name	PGA_1
User Module	PGA
Version	3.2
Gain	1.000
Input	AnalogColumnMUXBusSwitch_0
Reference	AGND
AnalogBus	Disable

8. Click **DelSigPlus\_1** and configure the properties to match this figure.

Figure 3-18. DelSigPlus\_1 Properties

Properties - DelSigPlus_1	
Name	DelSigPlus_1
User Module	DelSigPlus
Version	1.0
DataFormat	Unsigned
ClockPhase	Normal
PosInput	ACC00
NegInput	ACC00
NegInputGain	Disconnected

9. Click **LCD\_1** and configure the properties to match this figure.

Figure 3-19. LCD\_1 Properties

Properties - LCD_1	
Name	LCD_1
User Module	LCD
Version	1.5
LCDPort	Port_2
BarGraph	Disable


10. Configure the **Global Resources** to match the following figure.

Figure 3-20. Global Resources

Global Resources - ex2_adc_to_lcd	
Power Setting [ Vcc / Sy	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep Timer Period	1.95ms
VC1= SysClk/N	12
VC2= VC1/N	16
VC3 Source	VC2
VC3 Divider	256
SysClk Source	Internal
SysClk*2 Disable	Yes
Analog Power	SC On/Ref High
Ref Mux	(2 BandGap)+/-BandGap
AGndBypass	Disable
Op-Amp Bias	High
SwitchModePump	OFF
Trip Voltage [LVD (SMP)	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable


11. Ensure that **AnalogColumn\_InputMUX\_0** is connected to **Port\_0\_1**. If it is not configured for this port, double-click the mux and choose **Port\_0\_1**.

Figure 3-21. AnalogColumn\_InputMUX\_0 Connected to Port\_0\_1

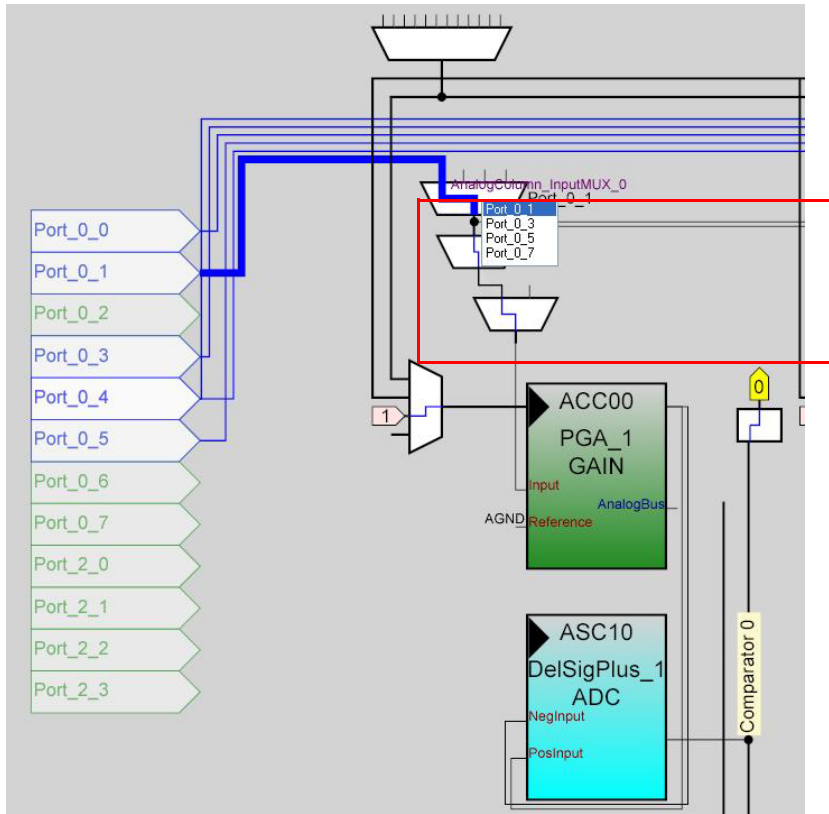


12. Ensure that **AnalogColumn\_Clock\_0** is connected to **VC1**. If it is not, double-click the mux and choose **VC1**.

Figure 3-22. AnalogColumn\_Clock\_0 Connected to VC1

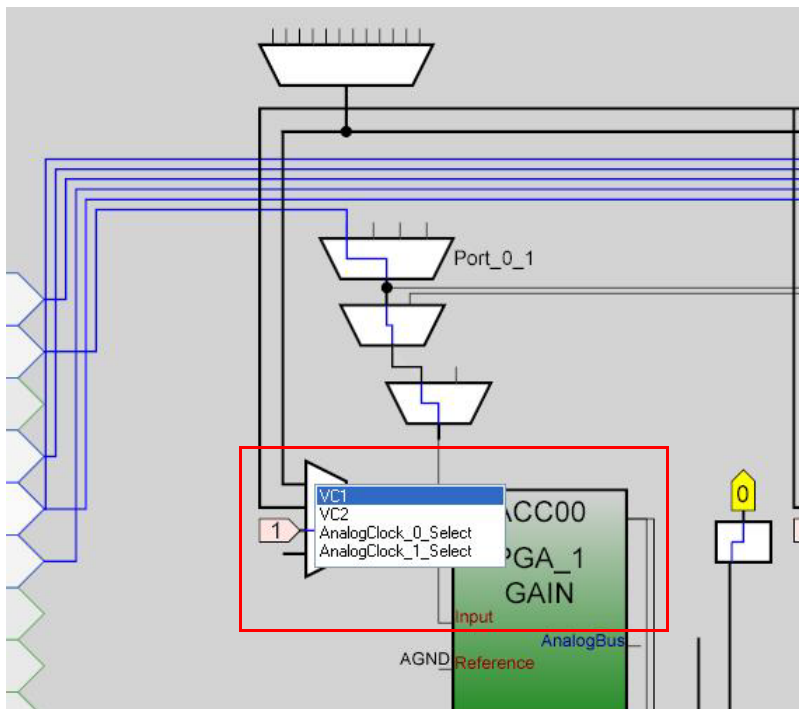

13. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex2.c* file, which is available within the attachments feature of this PDF document.
14. Save the project.
15. To build the project, click **Build** → **Generate/Build 'Ex2\_ADC\_to\_LCD' Project**.
16. Disconnect power to the board.
17. Configure the DVK SW3 to 5 V.
18. Configure the DVK breadboard using the included jumper wires:
  - P0[1] to VR

Figure 3-23. Connect P0[1] to VR

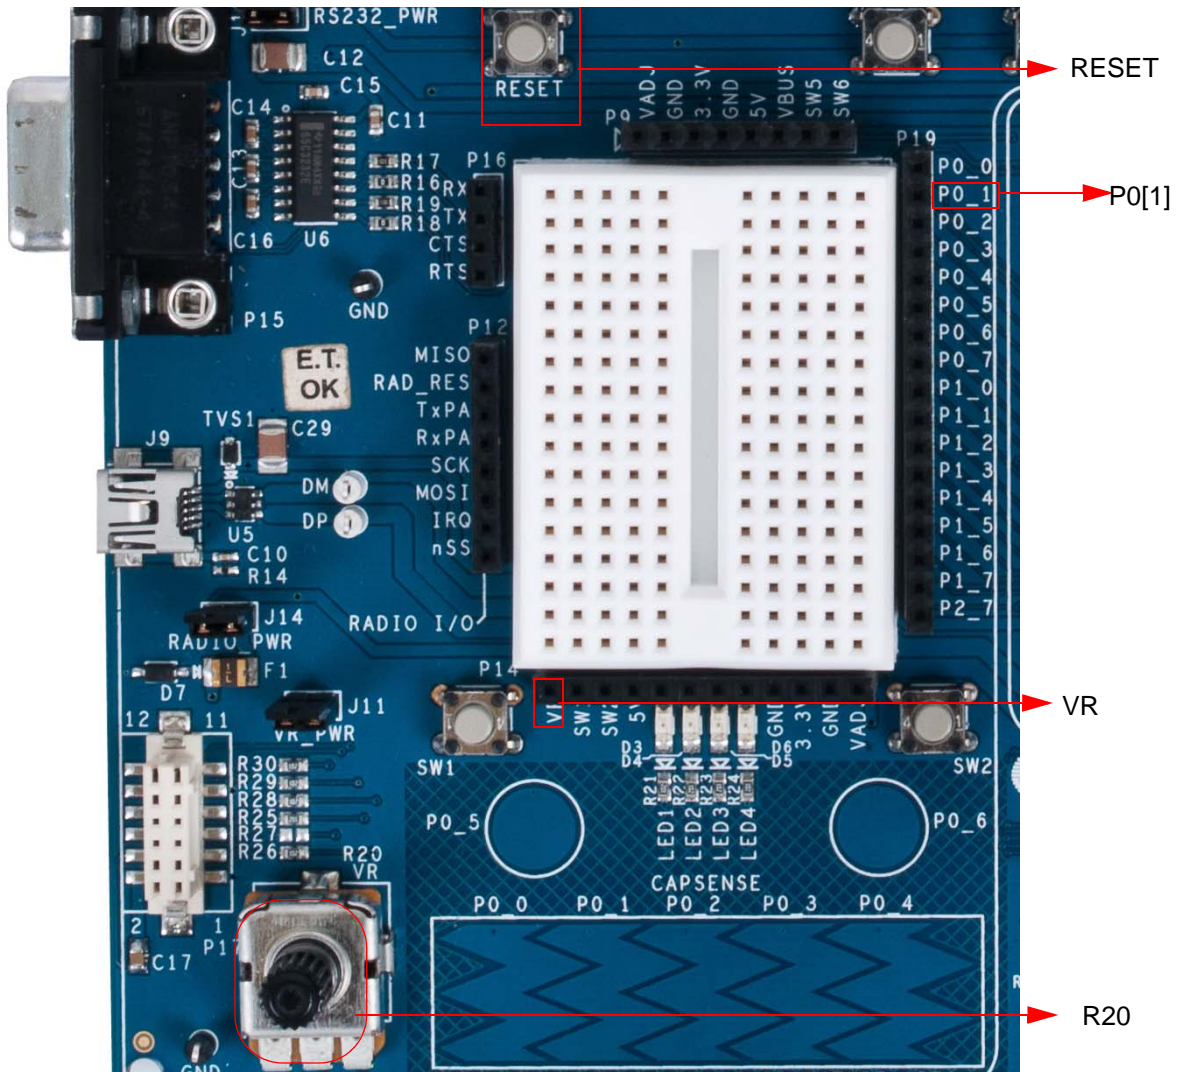

19. Reapply power to the board.
20. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 20](#) to program the device.
21. After programming the device, press the reset button and vary the potentiometer (R20) to see the results on the LCD.

**Note** The ADC output values may not reach full range due to potentiometer and ADC limitations. ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.

22. Save and close the project.

### 3.1.2.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex2.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```
#include <m8c.h>          /* part specific constants and macros */
#include "PSoCAPI.h"     /* PSoC API definitions for all User Modules */

/* LCD specific */
#define ROW_0    0 /* LCD row 0 */
#define ROW_1    1 /* LCD row 1 */
#define COLUMN_0 0 /* LCD column 0 */
#define COLUMN_9 9 /* LCD column 9 */

/*****
 * Function Name: main
 *****/
*
* Summary:
*   The main function initializes both the ADC and LCD, starts and waits for an
*   ADC conversion, then it displays the raw counts to the LCD.
*
* Parameters:
*   void
*
* Return:
*   void
*
*****/
void main(void)
{
    WORD adcResult; /* Holds the integer ADC result */

    /* Initialize the PGA used to buffer input from the potentiometer (VR) on
       P0.1 to the ADC */
    PGA_1_Start(PGA_1_HIGHPOWER);
    DelSigPlus_1_Start(DelSigPlus_1_HIGHPOWER); /* Initialize the ADC */
    LCD_1_Start(); /* Initialize the LCD */

    LCD_1_Position(ROW_0, COLUMN_0); /* Set the LCD to (Row=0,Column=0) */
    LCD_1_PrCString("V Count: ");

    DelSigPlus_1_StartAD(); /* Start gathering conversions from the ADC */

    M8C_EnableGInt; /* Enable Global interrupts */

    /* This loop waits for a valid ADC result, and displays it on the LCD */
```

```

while (1)
{
    /* Is there ADC data? */
    if(DelSigPlus_1_fIsDataAvailable())
    {
        /* Store result from ADC */
        adcResult = DelSigPlus_1_wGetDataClearFlag();
        LCD_1_Position(ROW_0, COLUMN_9); /* Set LCD to (Row=0,Column=9) */
        LCD_1_PrHexInt(adcResult); /* Print ADC result on LCD */
    }
} /* End of while(1) */
} /* End of main */

/* [] END OF FILE */

```


### 3.1.3 ADC to UART with DAC

This project demonstrates sine wave generation by using a 6-bit digital-to-analog converter (DAC). The sine wave period is based on the current value of the ADC. The firmware reads the voltage output by the DVK board potentiometer and displays the raw counts on the DVK board character LCD display similar to those shown in the previous project. A 6-bit DAC outputs a table generated sine wave at a frequency proportional to the ADC count. The frequency outputs to an oscilloscope. A 38400 Baud UART outputs the current ADC count as ASCII formatted into a hexadecimal number.

#### 3.1.3.1 *Creating ADC to UART with DAC Project*


1. Follow steps 1 to 10 in the section [Creating My First PSoC 1 \(CY8C28\) Project on page 37](#); change the project name to **Ex3\_ADC\_to\_UART\_with\_DAC**.
2. In the **User Modules** window expand the **ADCs** folder and right-click **DelSigPlus**; select **Place**. A window opens with multiple options for the DelSigPlus UM. Here, the **DS1128** configuration is used. Scroll down in the window to verify that this is the case.
3. Click **OK**.
4. Verify that the UM is placed in **ASC10**.
5. In the **User Modules** window, expand the **Amplifiers** window. Right-click **PGA** and select **Place**. Ensure that the **PGA** is placed in **ACC00**.

Figure 3-24. Place PGA in ACC00

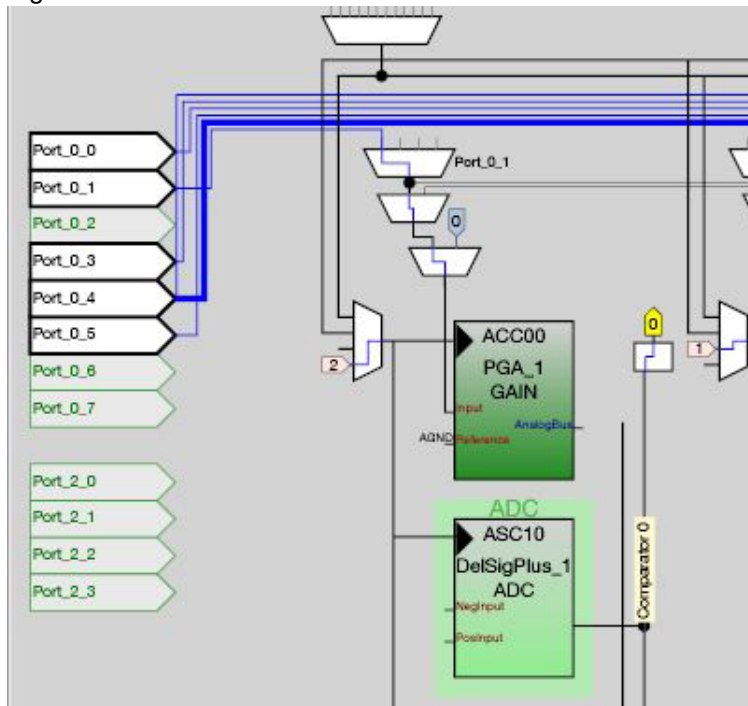

6. In the **User Modules** window, expand **Misc Digital**, right-click **LCD**, and select **Place**.
7. In the **User Modules** window, expand **Counters**, right-click **Counter16**, and select **Place**.
8. In the **User Modules** window, expand **Digital Comm**, right-click **TX8**, and select **Place**.
9. In the **User Modules** window, expand **DACs**, right-click **DAC6**, and select **Place**. User module is placed in ASD20 analog block by default. Drag and drop it to ASC21 block.
10. Move the UMs so that they match the configuration shown in [Figure 3-25](#).

Figure 3-25. Configure User Modules

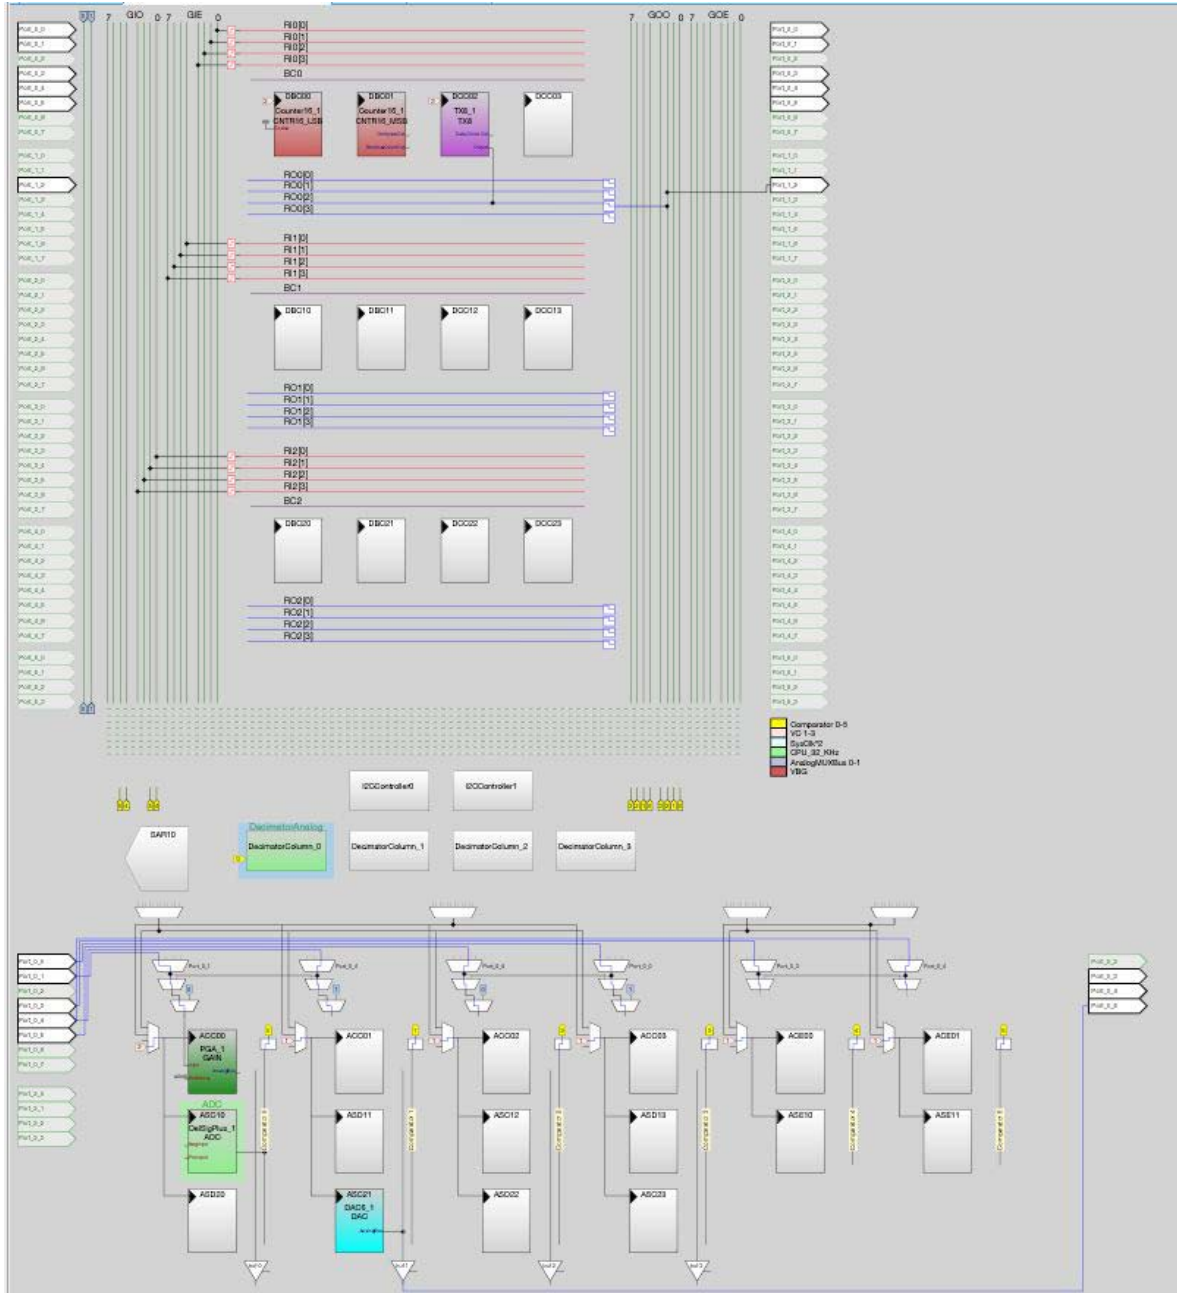

11. Click **DelSigPlus\_1** and configure it to match this figure.

Figure 3-26. DelSigPlus\_1 Properties

Properties - DelSigPlus_1	
Name	DelSigPlus_1
User Module	DelSigPlus
Version	1.0
DataFormat	Unsigned
ClockPhase	Normal
PosInput	ACC00
NegInput	ACC00
NegInputGain	Disconnected

12. Click **PGA\_1** and configure it to match this figure.

Figure 3-27. PGA\_1 Properties

Properties - PGA_1	
Name	PGA_1
User Module	PGA
Version	3.2
Gain	1.000
Input	AnalogColumnMUXBusSwitch_0
Reference	AGND
AnalogBus	Disable

13. Click **DAC6\_1** and configure it to match this figure.

Figure 3-28. DAC6\_1 Properties

Properties - DAC6_1	
Name	DAC6_1
User Module	DAC6
Version	4.3
AnalogBus	AnalogOutBus_1
ClockPhase	Normal
DataFormat	OffsetBinary

14. Click **LCD\_1** and configure it to match this figure.

Figure 3-29. LCD\_1 Properties

Properties - LCD_1	
Name	LCD_1
User Module	LCD
Version	1.5
LCDPort	Port_2
BarGraph	Disable

15. Click **Counter16\_1** and configure it to match this figure.

Figure 3-30. Counter16\_1 Properties

Properties - Counter16_1	
Name	Counter16_1
User Module	Counter16
Version	2.5
Clock	VC2
Enable	High
CompareOut	None
TerminalCountOut	None
Period	0
CompareValue	0
CompareType	Less Than Or Equal
InterruptType	Terminal Count
ClockSync	Sync to SysClk
InvertEnable	Normal


16. Click **TX8\_1** and configure it to match this figure.

Figure 3-31. TX8\_1 Properties

Properties - TX8_1	
Name	TX8_1
User Module	TX8
Version	3.3
Clock	VC3
Output	Row_0_Output_2
TX Interrupt Mode	TXComplete
ClockSync	Sync to SysClk
Data Clock Out	None


17. Click **RO0[2]** LUT, enable **Row\_0\_Output\_2\_Drive\_2** to connect **GlobalOutOdd\_2**.

Figure 3-32. Digital Interconnect Window

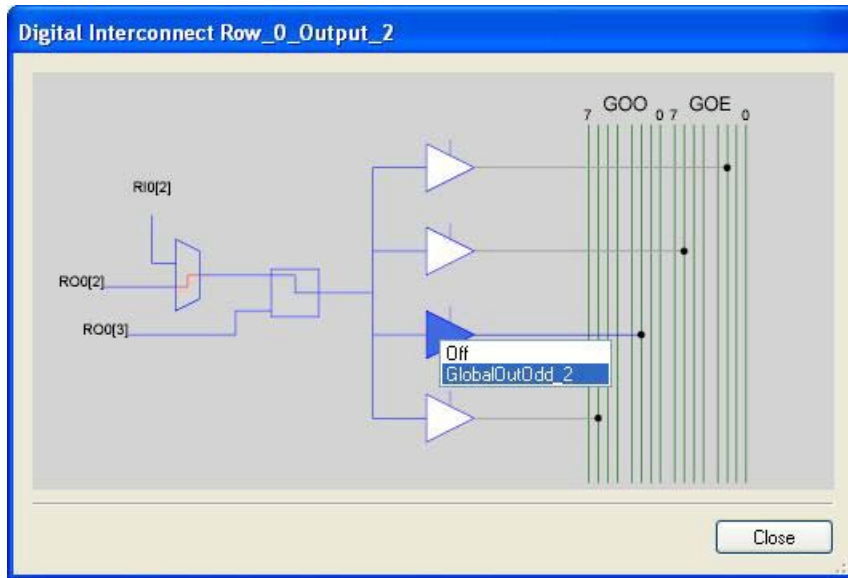

18. Click **GlobalOutOdd\_2**. In the window that appears, configure **Pin** for **Port\_1\_2**.


Figure 3-33. Configure Pin for Port\_1\_2

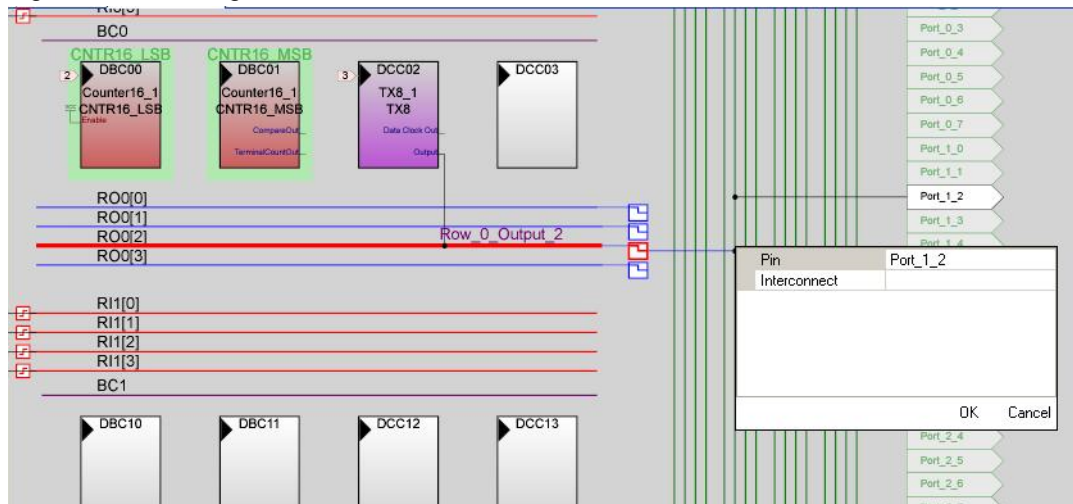

19. Click **OK** to continue.


20. Click **AnalogOutBuf\_1** and configure it for **Port\_0\_5**.

Figure 3-34. Configure AnalogOutBuf\_1

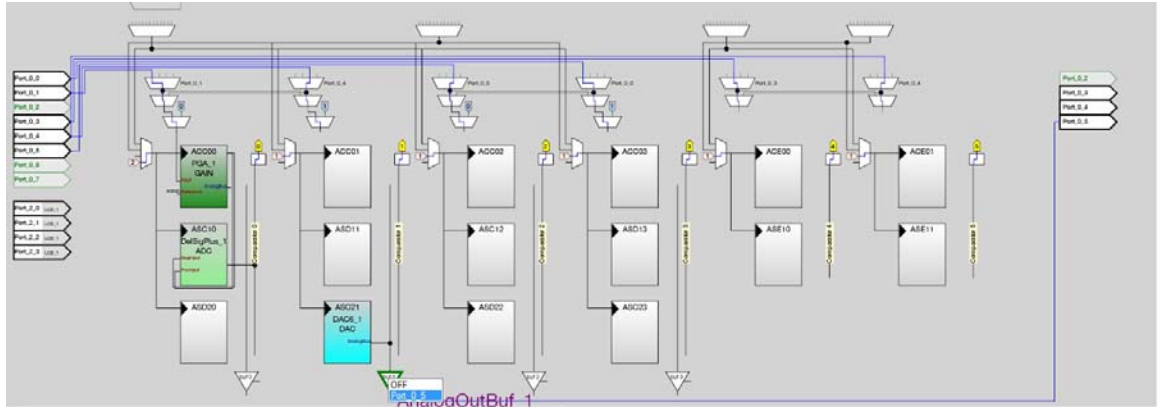


21. Verify that **AnalogColumn\_InputMUX\_0** is connected to **Port\_0\_1**. If it is not configured for this port, double-click the mux and choose **Port\_0\_1**.

Figure 3-35. AnalogColumn\_InputMUX\_0 Connection

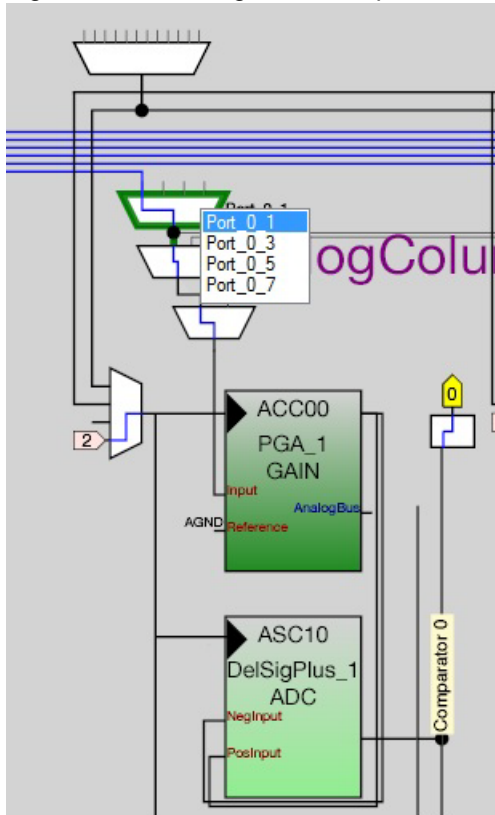

22. Verify that **AnalogColumn\_Clock\_0** and **AnalogColumn\_Clock\_1** are connected to **VC2**. If it is not, double-click the mux and chose **VC2**.

Figure 3-36. AnalogColumn\_Clock\_0 Connection

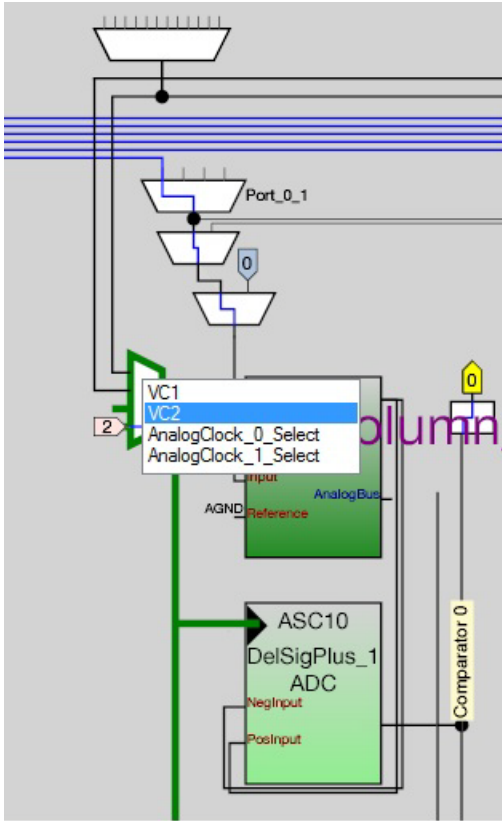

23. Configure **Global Resources** to match the following figure.

Figure 3-37. Configure Global Resources

Global Resources - ex3_adc_to_uart_with_dac	
Power Setting [ Vcc / Sy	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep Timer Period	1.95ms
VC1= SysClk/N	16
VC2= VC1/N	6
VC3 Source	SysClk/1
VC3 Divider	78
SysClk Source	Internal
SysClk*2 Disable	No
Analog Power	SC On/Ref High
Ref Mux	(2 BandGap)+/-BandGap
AGndBypass	Disable
Op-Amp Bias	High
SwitchModePump	OFF
Trip Voltage [LVD (SMP)	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable


24. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex3.c* file, which is available within the attachments feature of this PDF document.

25. Save the project.
26. To generate the project, click **Build** → **Generate/Build 'Ex3\_ADC\_to\_UART\_with\_DAC' Project**.
27. Open your *boot.tpl* file in the project folder **Files** → **Open File**. Select **All Files** for **Files of the type**.
28. Select *boot.tpl* in the list of files and click **Open**.
29. Find the line '@INTERRUPT\_9' (for PSoC Block DBC01) and replace that line with:  

```
ljump _Counter16_C_ISR
```
30. Save the project.
31. To build the project, click **Build** → **Build 'Ex3\_ADC\_to\_UART\_with\_DAC' Project**.
32. Disconnect power to the board.
33. Configure the DVK SW3 to 5 V.
34. Configure the DVK breadboard using the included jumper wires as follows:
  - P0[1] to VR
  - P1[2] to TX
  - P0[5] to Oscilloscope

**Note** An LED (P0[5] to LED1) by nature does not accurately show the changes in frequency the best way to see this is to use a Oscilloscope (P0[5] to Oscilloscope).

Figure 3-38. Connect P0[1] to VR, P1[2] to TX, and P0[5] to LED1

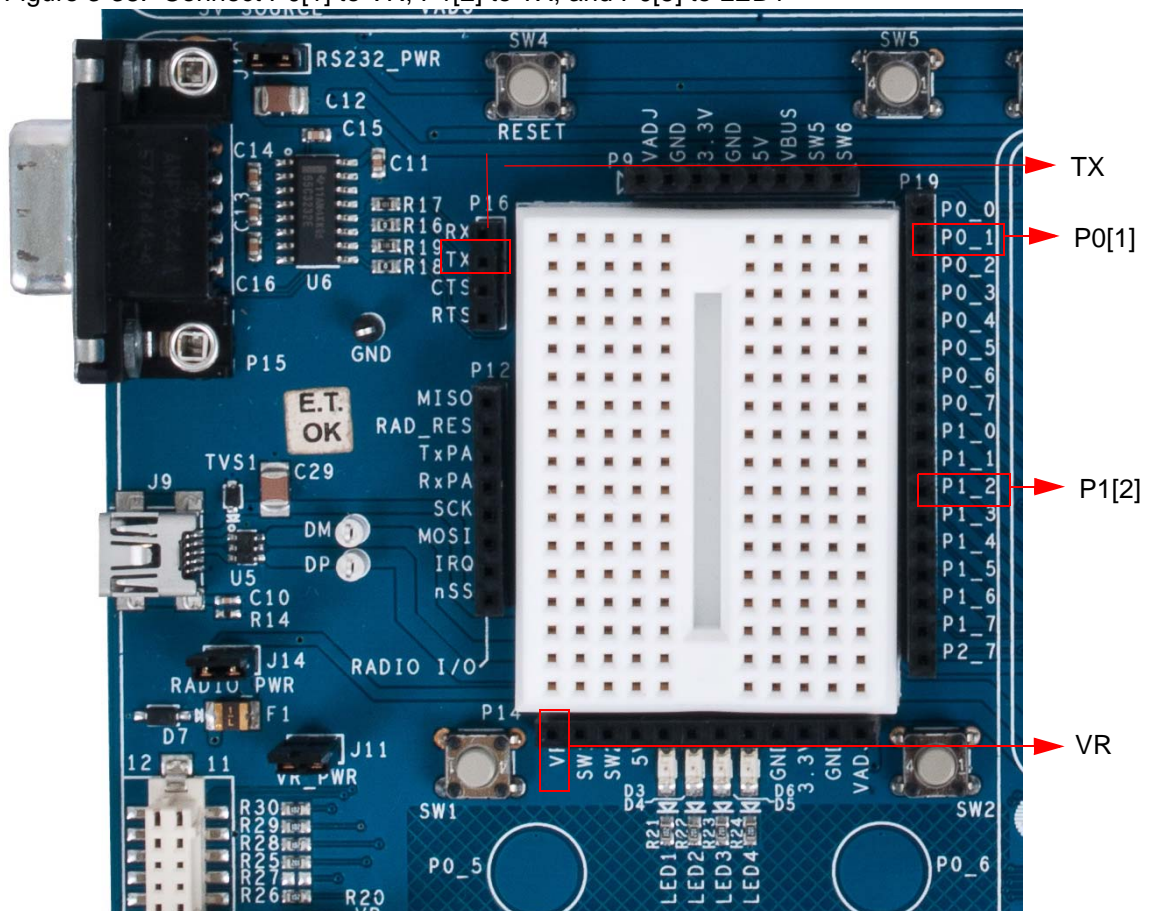

35. Connect a serial cable to the PC and the DVK board.

36. On the DVK board, verify that **RS232\_PWR(J10)** is jumpered to **ON**.
37. Reapply power to the board.
38. Use a terminal application such as TeraTerm or HyperTerminal with these setup parameters.
  - Baud Rate: 38400
  - Data: 8-bit
  - Parity: none
  - Stop: 1bit
  - Flow Control: none
39. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 20](#) to program the device.

After programming the device, press Reset and vary the pot to see the result on the LCD as well as in the terminal application. View the DAC output on a scope or with an LED.

**Note** The ADC output values may not reach full range due to potentiometer and ADC limitations. ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.
40. Save and close the project.

### 3.1.3.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex3.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```
#include <m8c.h>          /* part specific constants and macros */
#include "PSoCAPI.h"     /* PSoC API definitions for all User Modules */

/* Counter16 Interrupt Handler */
#pragma interrupt_handler Counter16_C_ISR

/* LCD specific */
#define ROW_0    0 /* LCD row 0 */
#define ROW_1    1 /* LCD row 1 */
#define COLUMN_0 0 /* LCD column 0 */
#define COLUMN_9 9 /* LCD column 9 */

const BYTE sinTable[]=
{
    0,  0,  1,  2,  3,  4,  6,  7, 10, 12, 14, 17, 20, 23, 26, 29,
    31, 33, 36, 39, 41, 44, 46, 49, 51, 53, 55, 56, 58, 59, 59, 60,
    60, 60, 59, 59, 58, 56, 55, 53, 51, 49, 47, 44, 42, 39, 36, 33,
    31, 28, 25, 22, 19, 16, 13, 11,  9,  7,  5,  3,  2,  1,  0,  0
};

BYTE tablePos = 0;

/*****
 * Function Name: main
 *****/
*
* Summary:
*   The main function initializes the ADC, PGA, LCD, Counter, DAC and UART.
*   In the main loop, it continuously checks for an ADC conversion. If there is
*   one then it displays the ADC raw count to the LCD, transmits the raw count
*   serially, and updates the Counter16 period (based on the raw count) for the
*   DAC output.
*
* Parameters:
*   void
*
* Return:
*   void
*
 *****/
void main(void)
{
    /* Variable for holding ADC result, and updating counter period */
    WORD adcResult;

    Counter16_1_Start();          /* Enable the counter used for DAC update rate */
    Counter16_1_EnableInt();     /* Enable DAC update interrupt */
}
```

```

/* Start the TX8 UM with no parity (baud rate = 38400) */
TX8_1_Start(TX8_1_PARITY_NONE);

/* Enable to PGA to buffer signal from VR to ADC */
PGA_1_Start(PGA_1_HIGHPOWER);

DAC6_1_Start(DAC6_1_HIGHPOWER);      /* Start the DAC */
DelSigPlus_1_Start(DelSigPlus_1_HIGHPOWER); /* Start the ADC */
DelSigPlus_1_StartAD();              /* Start reading values on the ADC */
LCD_1_Start();                       /* Start the character LCD */

LCD_1_Position(ROW_0, COLUMN_0);     /* Set the LCD to (Row=0,Column=0) */
LCD_1_PrCString("V Count: ");

M8C_EnableGInt;                      /* Enable Global Interrupts */

while(1)
{
    /* Step 1: Get BYTE data from the ADC
    Step 2: Write BYTE data from ADC to the counter to
            change the DAC update rate
    Step 3: Move the LCD cursor back to the beginning and display new
            ADC data
    Step 4: Write ADC data out the TX port, and then send a return
    */

    /* Is new data available from the ADC? */
    if (DelSigPlus_1_fIsDataAvailable())
    {
        adcResult = DelSigPlus_1_wGetDataClearFlag(); /* Get new ADC data */

        /* Change DAC update rate counter */
        Counter16_1_WritePeriod((adcResult << 4) + 200);

        LCD_1_Position(ROW_0, COLUMN_9); /* Move LCD (row=0,column=0) */
        LCD_1_PrHexInt(adcResult);      /* Print ADC result to LCD */
        TX8_1_PutSHexInt(adcResult);    /* Write LCD result to TX8 -> PC */
        TX8_1_PutCRLF();                /* Write return character to TX8 */
    }
} /* End of while(1) */
} /* End of Main */

/*****
* Function Name: Counter16_C_ISR
*****/
*
* Summary:
* This is the interrupt service routine for the Counter16 usermodule written
* in C. The boot.tpl has been modified to jump to this ISR every terminal
* count. The related #pragma above is necessary for the boot.asm file to jump
* to it. Every time a terminal count is reached the DAC will get the next
* value from the sinTable.
*
* Parameters:
* void
*
* Return:
* void

```

```

*
*****/
#ifdef HI_TECH_C
void Counter16_C_ISR(void) @ 0x24
#else
void Counter16_C_ISR(void)
#endif
{
    // Check to see if we have reached the //
    if (tablePos >= sizeof(sinTable))
    {
        tablePos = 0;
    }
    DAC6_1_WriteBlind(sinTable[tablePos++]);
}

/* [] END OF FILE */

```

### 3.1.4 CapSense


This project demonstrates CapSense. The firmware displays the CapSense button presses on the LCD (row 1) and associated LEDs. It also displays the CapSense slider position on the LCD (row 2).

Note that this project uses IDAC. But if you are using an external Rb with CSD, then populate R15 (connected to P3[1]). Rb can range from 2 k to 10 k. See the CapSense user module datasheet for more information on using Rb.

#### 3.1.4.1 Creating CapSense Project


1. Follow steps 1 to 10 in the section [Creating My First PSoC 1 \(CY8C28\) Project on page 37](#); change the project name to **Ex4\_CapSense**.
2. In the User Modules window, expand the **Cap Sensors** folder. Right-click **CSD** and select **Place**. A window appears with the option to use the default configuration.

Figure 3-39. Select Multi User Module Window

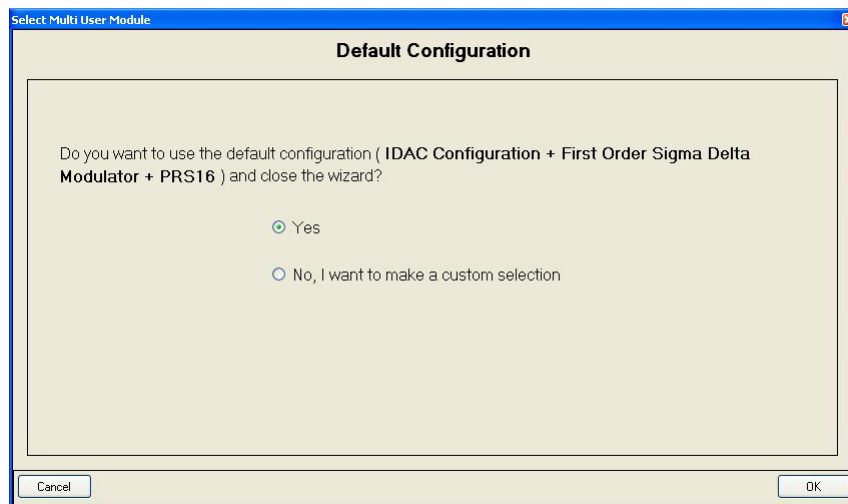


3. Select **Yes** and click **OK**.
4. Right-click the **CSD** user module in the workspace explorer and select **CSD Wizard**.

Figure 3-40. Select CSD Wizard

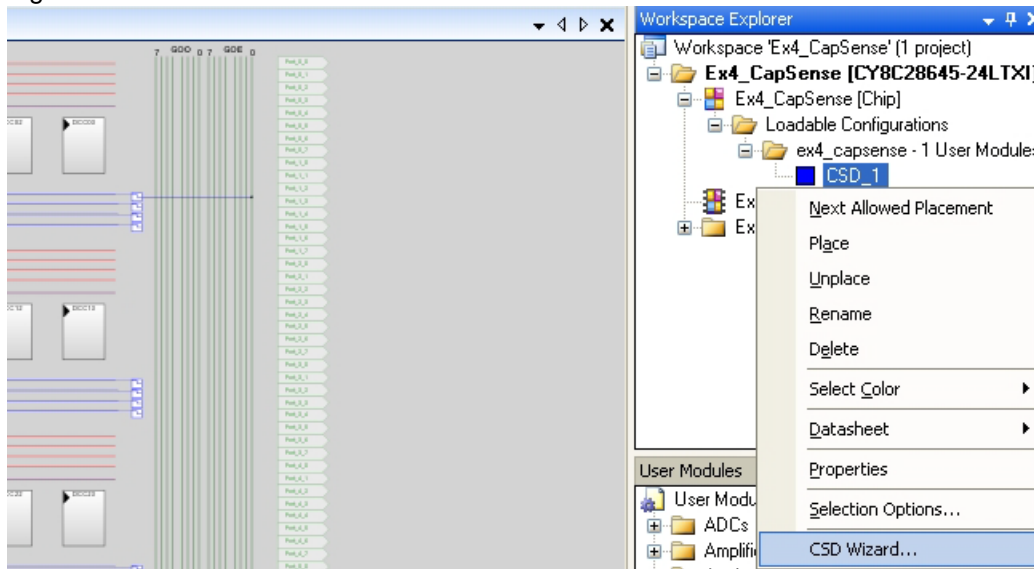

5. The CapSense Wizard window opens.


Figure 3-41. CapSense Wizard

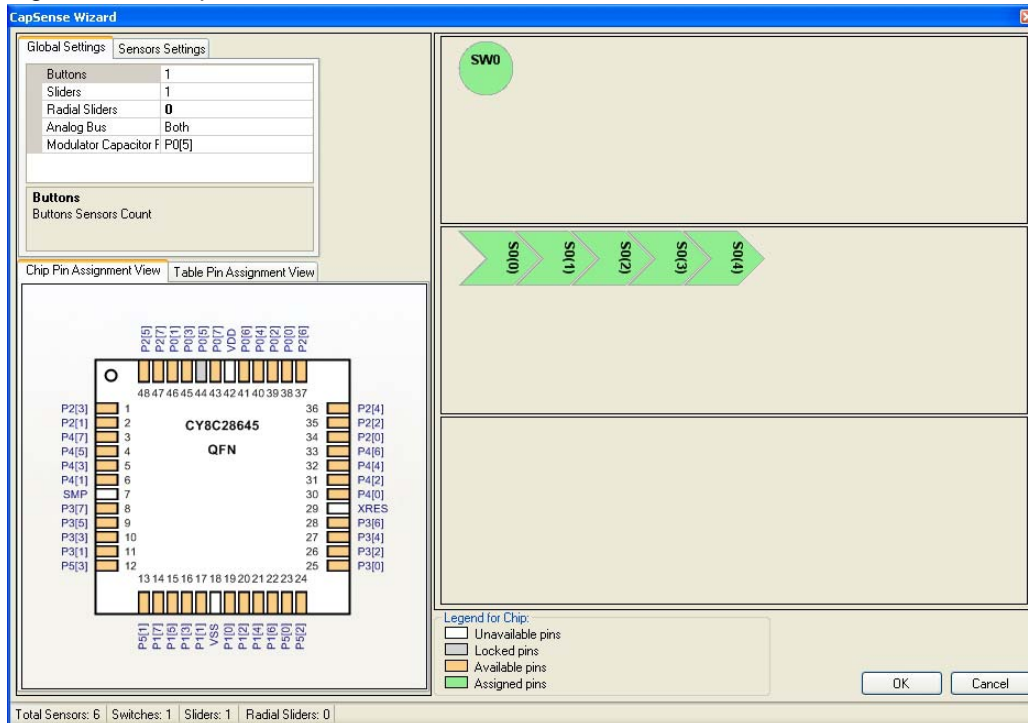

6. In the CapSense Wizard window, under the **Global Settings** tab, set the # of buttons to '2'.


7. Select P0[7] as the Modulator Capacitor Pin.

Figure 3-42. CapSense Wizard Place Buttons

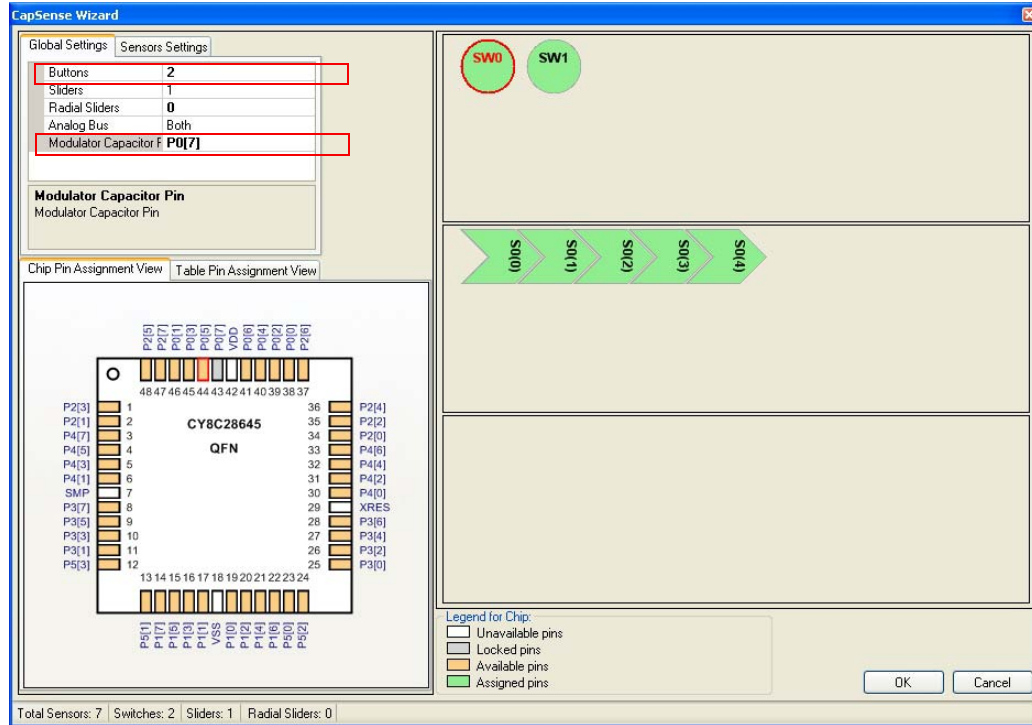

8. Click and hold **SW0** and drag it to P0[5].
9. Click and hold **SW1** and drag it to P0[6].

Figure 3-43. CapSense Wizard Slider Sensors

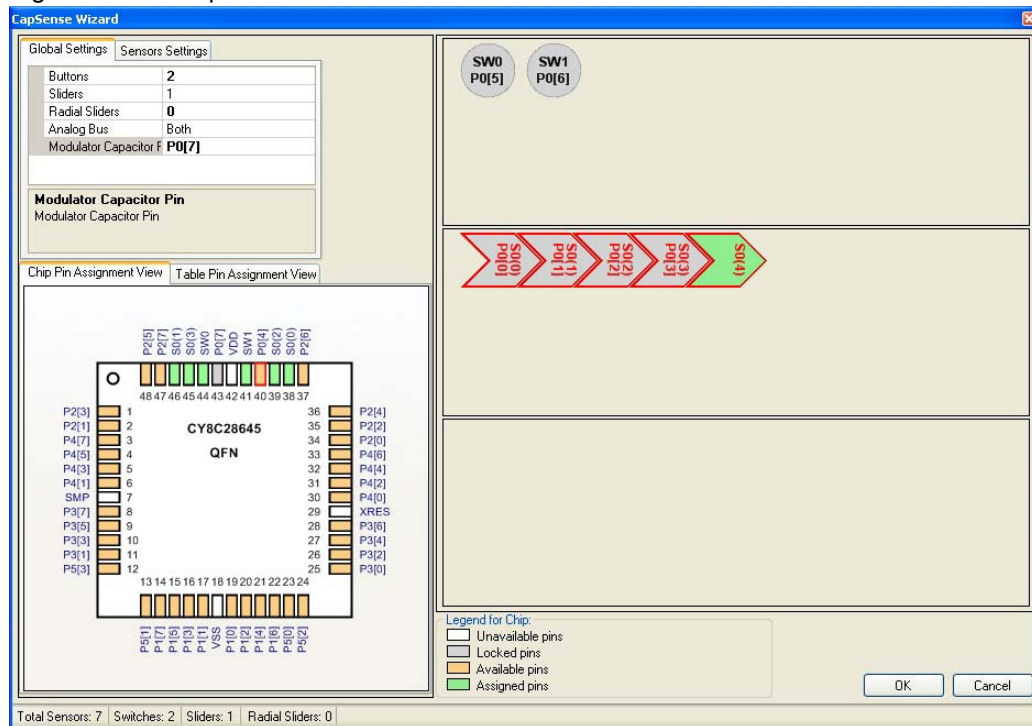


10. Repeat for each slider sensor and corresponding pin.

- S0[0] to P0[0]
- S0[1] to P0[1]
- S0[2] to P0[2]
- S0[3] to P0[3]
- S0[4] to P0[4]

11. Select the **Sensors Settings** tab.

12. Set the **Resolution** to 80.

Figure 3-44. Sensors Settings Tab

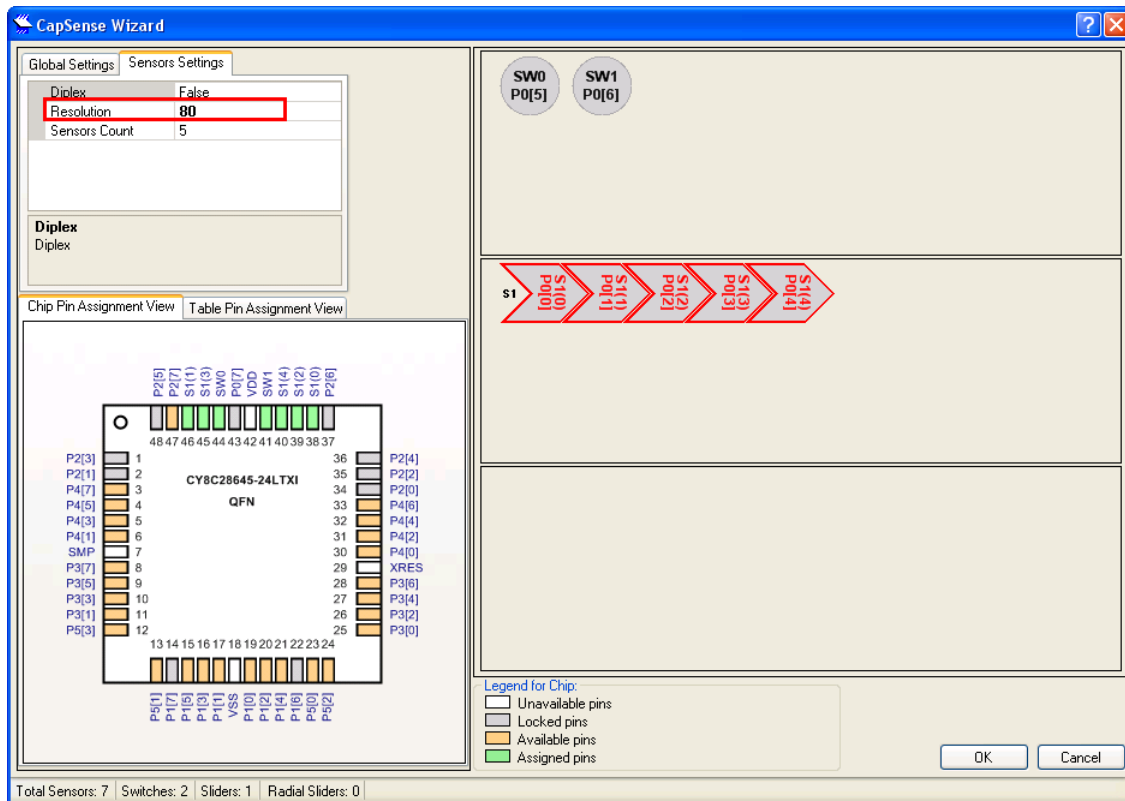

13. Click **OK**.

14. In the **User Modules** window, expand **Misc Digital**, right-click **LCD**, and select **Place**.

15. In the **User Modules** window, expand **Misc Digital**, right-click **LED**, and select **Place**.

16. In the **User Modules** window, expand **Misc Digital**, right-click **LED**, and select **Place**.

17. Click **CSD\_1** and configure it to match this figure.

Figure 3-45. CSD\_1 Properties

Parameters - CSD_1	
Name	CSD_1
User Module	CSD
Version	1.80
FingerThreshold	100
NoiseThreshold	80
BaselineUpdateThre	100
Sensors Autoreset	Disabled
Hysteresis	10
Debounce	3
NegativeNoiseThres	20
LowBaselineReset	50
Scanning Speed	Normal
Resolution	12
Compensation IDAC	0
IDAC	225
IDAC Range	x32
Reference	ASE10
Ref Value	2
PRS_Polynomial	Long
ShieldElectrodeOut	None
Auto Calibration	Enabled

18. Click **LCD\_1** and configure it to match this figure.

Figure 3-46. LCD\_1 Properties

Properties - LCD_1	
Name	LCD_1
User Module	LCD
Version	1.5
LCDPort	Port_2
BarGraph	Enable

19. Click **LED\_1** and configure it to match this figure.

Figure 3-47. LED\_1 Properties

Properties - LED_1	
Name	LED_1
User Module	LED
Version	1.2
Port	Port_1
Pin	Port_1_6
Drive	Active High

20. Click **LED\_2** and configure it to match this figure.

Figure 3-48. LED\_2 Properties

Properties - LED_2	
Name	LED_2
User Module	LED
Version	1.2
Port	Port_1
Pin	Port_1_7
Drive	Active High
<b>Name</b>	Indicates the name used to identify this User Module instance

21. Configure Global Resources to match the following figure.

Figure 3-49. Configure Global Resources

Global Resources - ex4_capsense	
Power Setting [ Vcc	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep Timer Period	1.95ms
VC1= SysClk/N	1
VC2= VC1/N	1
VC3 Source	SysClk/1
VC3 Divider	26
SysClk Source	Internal
SysClk*2 Disable	No
Analog Power	SC On/Ref High
Ref Mux	BandGap+/-BandGap
AGndBypass	Disable
Op-Amp Bias	High
SwitchModePump	OFF
Trip Voltage [LVD (S	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable

22. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex4.c* file, which is available within the attachments feature of this PDF document.

23. Save the project.

24. To generate and build the project, click **Build** → **Generate/Build 'Ex4\_CapSense' Project**.

25. Disconnect power to the board.

26. Configure the DVK board SW3 to 5 V.

27. Configure the DVK breadboard using the included jumper wires:

- P1[6] to LED1
- P1[7] to LED2

28. Ensure that P0[1], P0[5], and P0[7] are disconnected.

29. Reapply power to the board.

30. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 20](#) to program the device.

31. Reset the DVK. An LED lights up when either CapSense button is pushed. If B1 (P0[5]) is pushed, it also displays "Button1" in the top row of the LCD display. Similarly, if B2 (P0[6]) is pushed, it displays "Button2" in the top row of the LCD display. The bottom row of the LCD displays the slider position with a horizontal bargraph.

32. Save and close the project.

### 3.1.4.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C28\_main\_Ex4.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```
#include <m8c.h>          /* part specific constants and macros */
#include "PSoC_API.h"    /* PSoC API definitions for all User Modules */

/* LCD specific */
#define ROW_0      0 /* LCD row 0 */
#define ROW_1      1 /* LCD row 1 */
#define COLUMN_0   0 /* LCD column 0 */
#define NUM_CHARACTERS 16 /* Number of characters on LCD */

/* For clearing a row of the LCD*/
#define CLEAR_ROW_STR      "          "
/* Button 1 only string for row 0 of the LCD */
#define BUTTON_1_STR      "Button1   "
/* Button 2 only string for row 0 of the LCD */
#define BUTTON_2_STR      "          Button2"
/* Button 1 and 2 string for row 0 of the LCD */
#define BUTTON_1_2_STR    "Button1 Button2"
/* Default string for button row of the LCD */
#define DEFAULT_ROW_0_STR "Touch Buttons  "
/* Default string for slider row of the LCD */
#define DEFAULT_ROW_1_STR "Touch The Slider"

/* CapSense specific */
#define SLIDER_RESOLUTION 80
#define SCANSENSOR_BTN_B1 0
#define SCANSENSOR_BTN_B2 1

void UpdateButtonState(BYTE sensor_1, BYTE sensor_2);
void UpdateSliderPosition(BYTE value);

/*****
 * Function Name: main
 *****/
*
* Summary:
* The main function initializes CapSense and the LCD. Then it continuously
* scans all CapSense sensors (slider sensors and buttons), gets the state of
* the buttons and slider and updates the LCD with the current state.
*
* Parameters:
* void
*
* Return:
* void
*
*****/
void main(void)
{
```

```

BYTE pos;          /* Slider Position */
BYTE stateB_1;    /* Button1 State */
BYTE stateB_2;    /* Button2 State */

M8C_EnableGInt; /* Enable Global Interrupts */

/* LCD Initialization */
LCD_1_Start();
/* For Bargraph display on LCD */
LCD_1_InitBG(LCD_1_SOLID_BG);

/* LED1 Initialization */
LED_1_Start();
/* LED2 Initialization */
LED_2_Start();

/* CapSense Initialization */
CSD_1_Start();
/* Initialize the baselines by scanning all sensors and getting the initial
   raw data values */
CSD_1_InitializeBaselines();
/* Load finger thresholds set in user module parameters */
CSD_1_SetDefaultFingerThresholds();

while(1)
{
    /* Scan each CapSense sensor and update their raw data value */
    CSD_1_ScanAllSensors();
    /* Update baselines for each sensor */
    CSD_1_UpdateAllBaselines();

    /* Update state to active/inactive for each button sensor */
    stateB_1 = CSD_1_bIsSensorActive(SCANSENSOR_BTN_B1);
    stateB_2 = CSD_1_bIsSensorActive(SCANSENSOR_BTN_B2);

    /* Get Linear Slider Position */
    pos = CSD_1_wGetCentroidPos(1);

    /* Update LCD and LED's with current Button and Linear Slider states */
    UpdateButtonState(stateB_1, stateB_2);
    UpdateSliderPosition(pos);
}

/*****
* Function Name: UpdateButtonState
*****/
*
* Summary:
* Updates the LCD screen with the current button state by displaying which
* button is being touched on row 0. LED's are also updated according to button
* state.
*
* Parameters:
* sensor_1: Button state for B1
* sensor_2: Button state for B2
*
* Return:

```

```

* void
*
*****/
void UpdateButtonState(BYTE sensor_1, BYTE sensor_2)
{
    LCD_1_Position(ROW_0,COLUMN_0);

    /* Check the state of the buttons and update the LCD and LEDs */
    if (sensor_1 && sensor_2)
    {
        /* Display both Button strings on LCD if both button sensors are active */
        LCD_1_PrCString(BUTTON_1_2_STR);
        /* Both LED's are on in this state */
        LED_1_On();
        LED_2_On();
    }
    else if (sensor_1 || sensor_2)
    {
        if (sensor_1)
        {
            /* Display Button 1 state on LCD and LED1 */
            LCD_1_PrCString(BUTTON_1_STR);
            LED_1_On();
            /* Button 2 is not active */
            LED_2_Off();
        }
        else // sensor_2
        {
            /* Display Button 2 state on LCD and LED2 */
            LCD_1_PrCString(BUTTON_2_STR);
            LED_2_On(); /* Turn on LED2 */
            LED_1_Off(); /* Turn off the LED1 */
        }
    }
    else
    {
        /* Display default string on LCD and set LED's to off */
        LCD_1_PrCString(DEFAULT_ROW_0_STR);
        /* Set both LED's off in this state */
        LED_1_Off();
        LED_2_Off();
    }
}

/*****
* Function Name: UpdateSliderPosition
*****
*
* Summary:
* Updates the LCD screen with the current slider position by displaying the
* horizontal bargraph.
*
* Parameters:
* value: Centroid position from CapSense slider.
*
* Return:
* void
*

```

```
*****/
void UpdateSliderPosition(BYTE value)
{
    /* The slider position is 0xFF if there is no finger present on the slider */
    if (value > SLIDER_RESOLUTION)
    {
        /* Clear old slider position (2nd row of LCD) */
        LCD_1_Position(ROW_1, COLUMN_0);
        LCD_1_PrCString(DEFAULT_ROW_1_STR);
    }
    else
    {
        /* Update the bargraph with the current finger position */
        LCD_1_DrawBG(ROW_1, COLUMN_0, NUM_CHARACTERS, value + 1);
    }
}

/* [] END OF FILE */
```

## 3.2 CY8C29 Family Processor Module Code Examples


**Note** The PSoC device on the module is CY8C29000. This is an on-chip debug (OCD) part, which can be used to emulate any PSoC from the CY8C29xxx family.

### 3.2.1 My First PSoC 1 (CY8C29) Project

#### 3.2.1.1 Creating My First PSoC 1 (CY8C29) Project


1. Open PSoC Designer
2. To create a new project, click **File** → **New Project**. The **New Project** window opens.
3. In the **New Project window**, select the **Chip-Level Project**. Name the project **Example\_My\_First\_PSoC\_Project**.
4. In the **Location** field, click **Browse** and navigate to the appropriate directory.

Figure 3-50. New Project Window

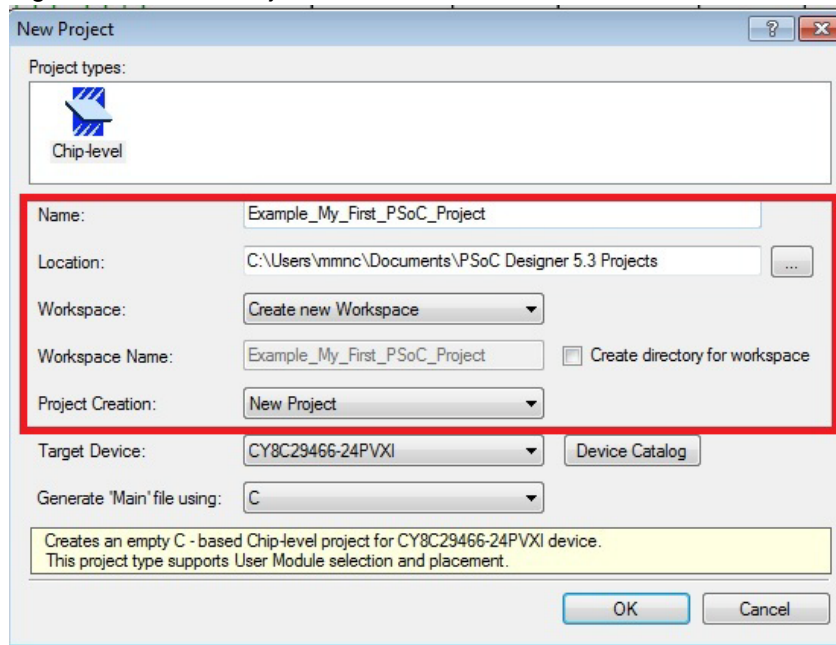

5. In project creation drop down menu, select **New Project**.

Figure 3-51. Select Project Type

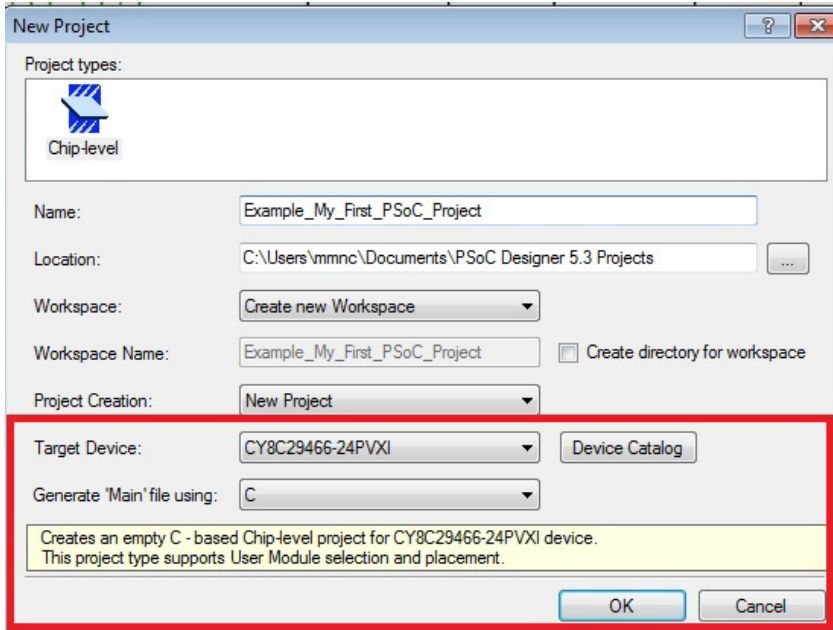

6. In this window, under **Select Target Device**, click **Device Catalog**.
7. The **Device Catalog** window opens. Click on the **PSoC** tab, and scroll down to the **CY8C29466, CY8C29566,...** section.
8. Select device CY8C29466-24PVXI and click **Create Project with CY8C29466-24PVXI** button.

Figure 3-52. Device Catalog Window

Device Catalog - Chip-level

Device Type: All Devices  Compare Devices  Reset Find...

User Modules Part Image Favorites

Compare	Part Number	Pin Count	Package Type	Analog Blocks	Digital Blocks	CapSense	Flash	RAM	IO Count	Supply Voltage	SMP	USB Interface	Wireless Interface	Temperature	Legacy
<input type="checkbox"/>	CY8C28457-24PVXI	28	SSOP	12 + 4	8	Yes	16K	1K	24	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input checked="" type="checkbox"/>	CY8C29466-24PXI	28	PDIP	12	16	No	32K	2K	24	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29466-24PVXI	28	SSOP	12	16	No	32K	2K	24	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29466-24SXI	28	SOIC	12	16	No	32K	2K	24	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29566-24AXI	44	TQFP	12	16	No	32K	2K	40	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29666-24PVXI	48	SSOP	12	16	No	32K	2K	44	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29866-24AXI	100	TQFP	12	16	No	32K	2K	64	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29666-24LTXI	48	MLF	12	16	No	32K	2K	44	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8C29466-12PVXE	28	SSOP	12	16	No	32K	2K	24	4.75 to 5.25	N/A	N/A	N/A	Auto(-40 to 125C)	No
<input type="checkbox"/>	CY8C29666-12PVXE	48	SSOP	12	16	No	32K	2K	44	4.75 to 5.25	N/A	N/A	N/A	Auto(-40 to 125C)	No
<input type="checkbox"/>	CY8C29466-24PVXA	28	SSOP	12	16	No	32K	2K	24	3.0 to 5.25	N/A	N/A	N/A	Auto(-40 to 85C)	No
<input type="checkbox"/>	CY8C29666-24PVXA	48	SSOP	12	16	No	32K	2K	44	3.0 to 5.25	N/A	N/A	N/A	Auto(-40 to 85C)	No
<input type="checkbox"/>	CY8C29866-24LFXI	48	MLF	12	16	No	32K	2K	44	3.0 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	Yes
<input type="checkbox"/>	CY8CLEDD02-08SXI	8	SOIC	4	4	No	4K	256	6	2.4 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	Yes
<input type="checkbox"/>	CY8CLEDD02-16SXI	16	SOIC	4	4	No	4K	256	12	2.4 to 5.25	Yes	N/A	N/A	Ind(-40 to 85C)	Yes
<input type="checkbox"/>	CY8CLEDD02-24LFXI	24	MLF	4	4	No	4K	256	16	2.4 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	Yes
<input type="checkbox"/>	CY8CLEDD04-68LFXI	68	QFN	6	4	No	16K	1K	50	3.0 to 5.25	N/A	Full-Speed	N/A	Ind(-40 to 85C)	Yes
<input type="checkbox"/>	CY8CLEDD01D01-56LTXI	56	QFN	6	8	Yes	16K	1K	14	4.75 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8CLEDD02D01-56LTXI	56	QFN	6	8	Yes	16K	1K	14	4.75 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8CLEDD03D01-56LTXI	56	QFN	6	8	Yes	16K	1K	14	4.75 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	No
<input type="checkbox"/>	CY8CLEDD03D02-56LTXI	56	QFN	6	8	Yes	16K	1K	14	4.75 to 5.25	N/A	N/A	N/A	Ind(-40 to 85C)	No


Selected Device: CY8C29466-24PXI | Filters applied: 0 | Devices found: 353 of 353

Create Project with 'CY8C29466-24PXI' Cancel

9. Under **Generate 'Main' File Using:**, select **C**, then click **OK**.


10. By default, the project opens in Chip view.

Figure 3-53. Default View

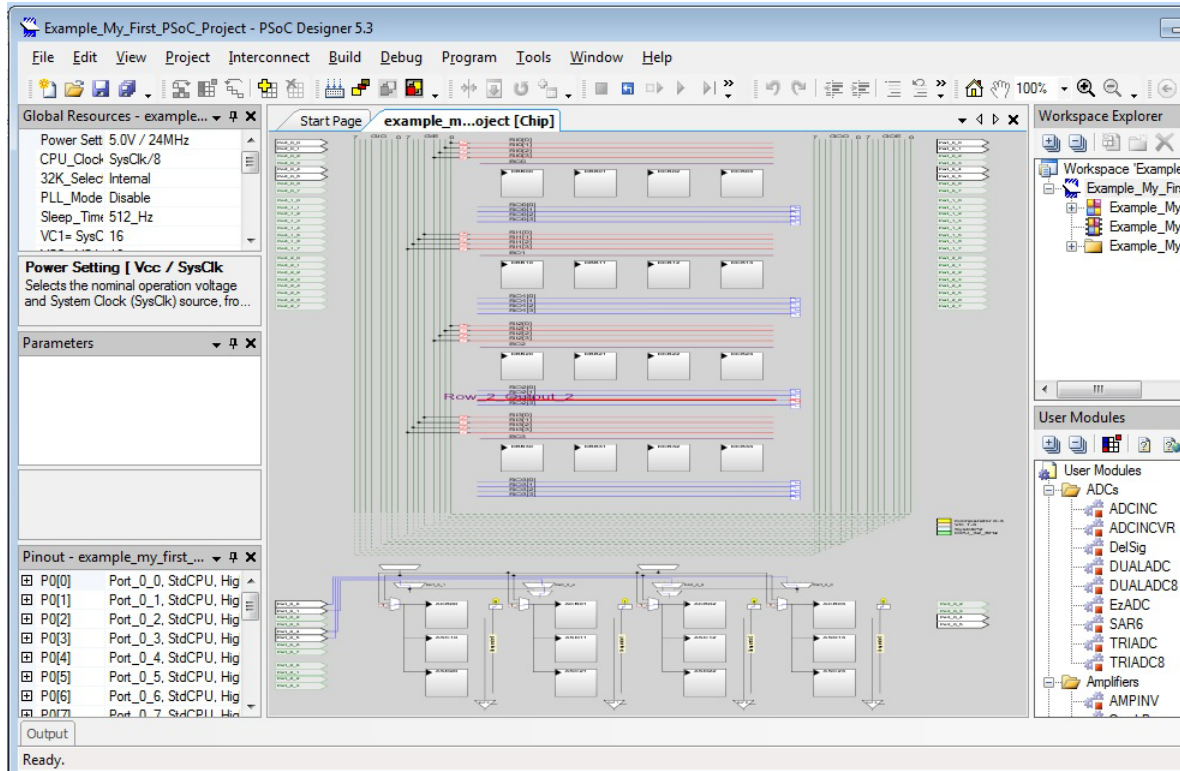


11. In the **User Modules** window, expand the **PWMs** folder.

Figure 3-54. User Modules Window

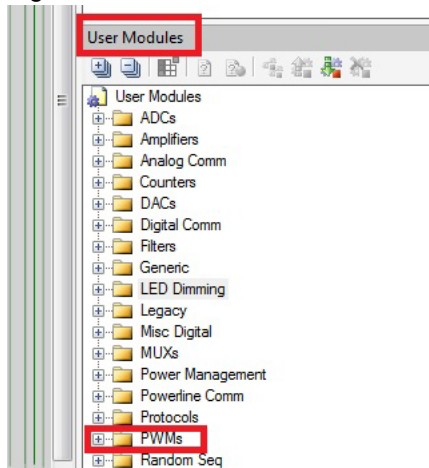

12. In this folder, right-click on **PWM8** and select **Place**. The User Module (UM) is placed in the first available digital block.

Figure 3-55. Place User Module PWM8

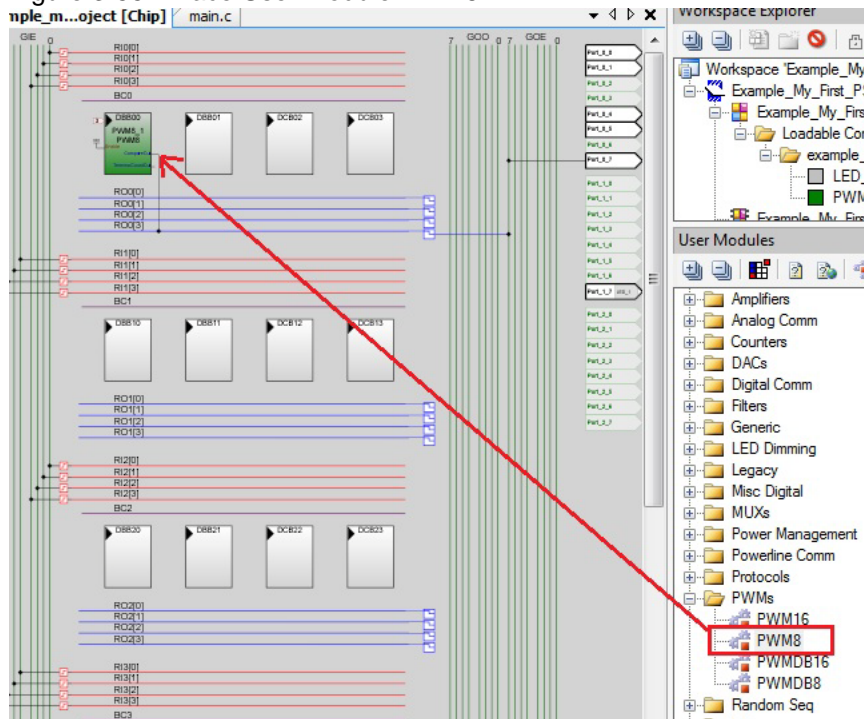

13. Double-click the placed PWM8\_1 UM; the **Properties** window opens on the left side of the screen. Configure the PWM with the settings as in the following figure. If the **Properties** window does not appear, click **View** → **Properties Window**.

Figure 3-56. Properties Window

Parameters - PWM8_1	
Name	PWM8_1
User Module	PWM8
Version	2.60
Clock	VC3
Enable	High
CompareOut	Row_0_Output_3
TerminalCountOut	None
Period	100
PulseWidth	50
CompareType	Less Than Or Equal
Interrupt Type	Terminal Count
ClockSync	Sync to SysClk
InvertEnable	Normal

14. Next, route the PWM **CompareOut** signal to P0[7]. The first step is to configure the lookup table (LUT) on **Row\_0\_Output3**.


Figure 3-57. Route the PWM CompareOut signal to P0[7]



15. Double-click the LUT, the **Digital Interconnect** window opens.

16. In this window, enable **Row\_0\_Output\_3\_Drive\_1** to connect to **GlobalOutEven\_7**.


Figure 3-58. Digital Interconnect Window

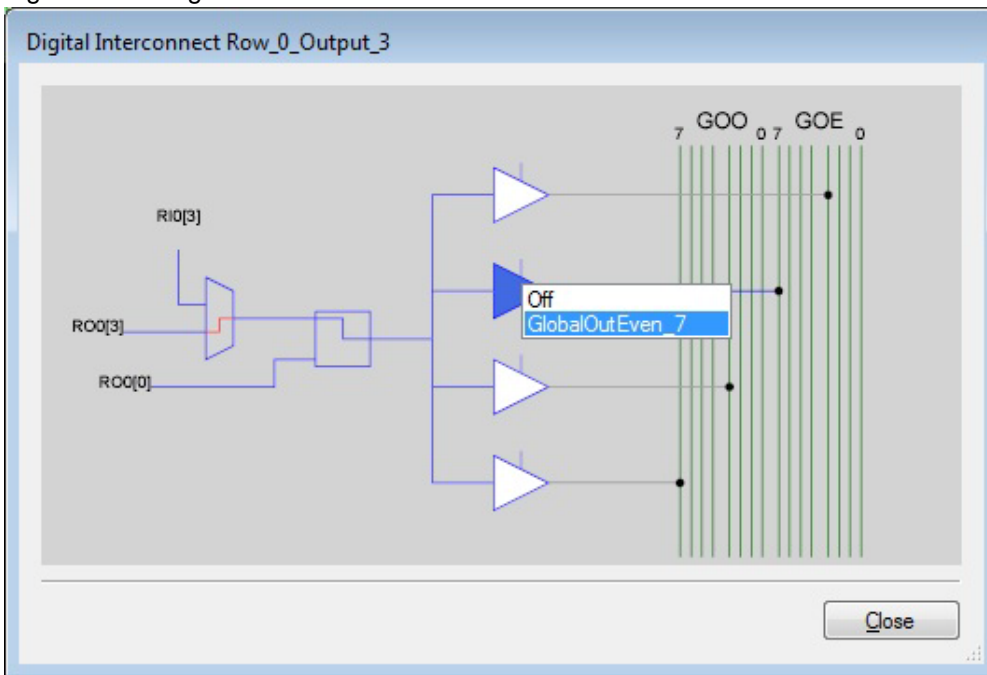

17. Click **Close**.

18. Click **GlobalOutEven\_7**. In the window that appears, configure **Pin** for **Port\_0\_7**.


Figure 3-59. Configure Pin for Port\_0\_7

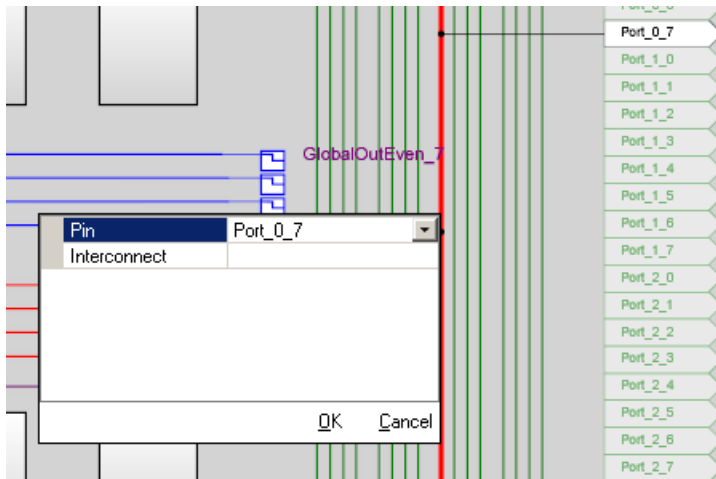

19. Click **OK** to continue.

20. In the **User Modules** window expand the **Misc Digital** folder. In this folder, right-click the **LED** and select **Place**; this adds the UM to the project. This UM does not use digital or analog blocks. It appears in **Workspace Explorer** → **Example\_My\_First\_PSoC\_Project[CX8C29]** → **Example\_My\_First\_PSoC\_Project[Chip]** → **Loadable Configurations** → **example\_my\_first\_psoc\_project - 2 User Modules**.

Figure 3-60. Workspace Explorer

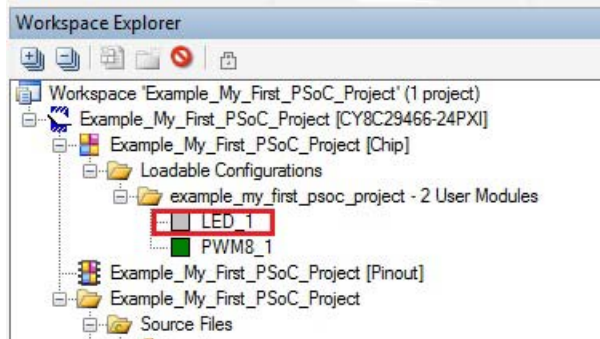

21. Double-click the **LED\_1** UM and navigate to the **Properties** window. Configure the LED for **Port\_1\_7**.

Figure 3-61. Properties Window

Parameters - LED_1	
Name	LED_1
User Module	LED
Version	1.40
Port	Port_1
Pin	Port_1_7
Drive	Active High


22. Configure the **Global Resources** window to match the following figure.

Figure 3-62. Global Resources Window

Global Resources - example_my_first_psoc_project	
Power Setting [ Vcc / SysClk freq ]	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep_Timer	512_Hz
VC1= SysClk/N	16
VC2= VC1/N	16
VC3 Source	VC2
VC3 Divider	256
SysClk Source	Internal
SysClk*2 Disable	Yes
Analog Power	SC Off/Ref Low
Ref Mux	(Vdd/2)+/(Vdd/2)
AGndBypass	Disable
Op-Amp Bias	Low
A_Buff_Power	Low
SwitchModePump	OFF
Trip Voltage [LVD (SMP)]	4.81V (5.00V)
LVDThrottleBack	Disable

23. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex1.c* file, which is available within the attachments feature of this PDF document.

Figure 3-63. Workspace Explorer

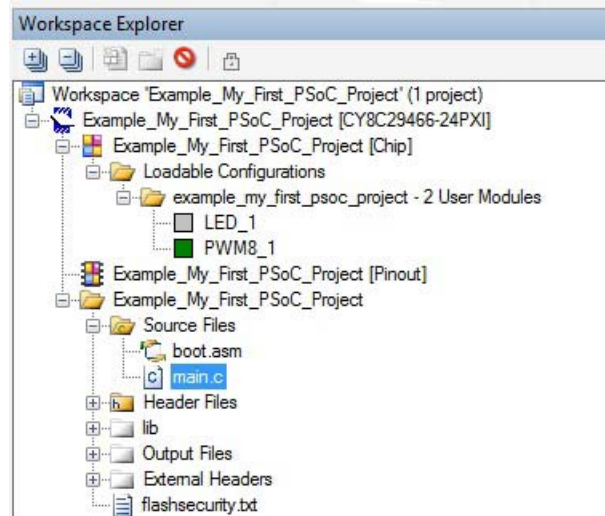

24. Save the project.
25. To build the project, click **Build** → **Generate/Build 'Example\_My\_First\_PSoC\_Project' Project**.
26. Disconnect power to the board.
27. Configure the DVK board SW3 to 5 V.
28. Configure the DVK breadboard using the included jumper wires:
- P0[7] to LED1
  - P1[7] to LED2
29. Reapply power to the board.
30. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 25](#) to program the device.

31. Reset the DVK, and observe the blinking LEDs.
32. Save and close the project.

### 3.2.1.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex1.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```

/*****
* File Name: main.c
*
* Description:
* This file provides source code for My First PSoC Project example. The
* firmware blinks one LED at about 3.6 Hz with a PWM, and blinks another LED
* with a software timing loop.
*
*****/

/*****
* PWM Settings:
*
* Input Clock      = VC3 //VC3 = 24 MHz/16/16/256 =366.2 Hz
* Enable          = High
* CompareOut      = ROW_0_Output_3
* TerminalCountOut = None
* Period          = 100   Output period = (Period+1)*(1/Input Clock) = 101/
366.2 = .275 sec
or 3.6 Hz
* PulseWidth      = 50
* CompareType     = Less Than Or Equal
* InterruptType   = Terminal Count
* ClockSync       = Sync to SysClk
* InvertEnable    = Normal
*
*****/

#include <m8c.h>          // part specific constants and macros
#include "PSOCAPI.h"    // PSoC API definitions for all User Modules

unsigned int i;        // Variable used for delay

void main(void)
{
    PWM8_1_Start();// Turn on the PWM to blink LED on P0.7
    LED_1_Start();// Enable Software controlled LED

    // The following loop controls the software LED connected to P1.7
    while(1)
    {
        for (i=0;i<60000;i++){ //Length of delay depends on compiler and CPU clock
            LED_1_Invert();//Switch the state of Software LED, if on turn it off,
            //if off turn it on
        } //End of while(1)
    } //End of main
}

```


### 3.2.2 ADC to LCD Project

This project demonstrates a 9-bit Delta-Sigma ADC by measuring the voltage of the potentiometer center tap wiper and displaying the result on the LCD. Connect the voltage potentiometer (VR) to the ADC input P0[1]. The program reads the 9-bit ADC result and prints it to the LCD.

#### 3.2.2.1 Creating ADC to LCD Project


1. Follow steps 1 to 10 in the section [Creating My First PSoC 1 \(CY8C29\) Project on page 73](#); change the project name to **Example\_ADC\_to\_LCD**.
2. In the **User Modules** window, expand the **ADCs** folder; right-click **DelSig** and select **Place**. A window opens with multiple options for the DelSig UM. Scroll down, if necessary, and select the **DS1128** configuration. Click **OK**.

Figure 3-64. Select Multi User Module Window

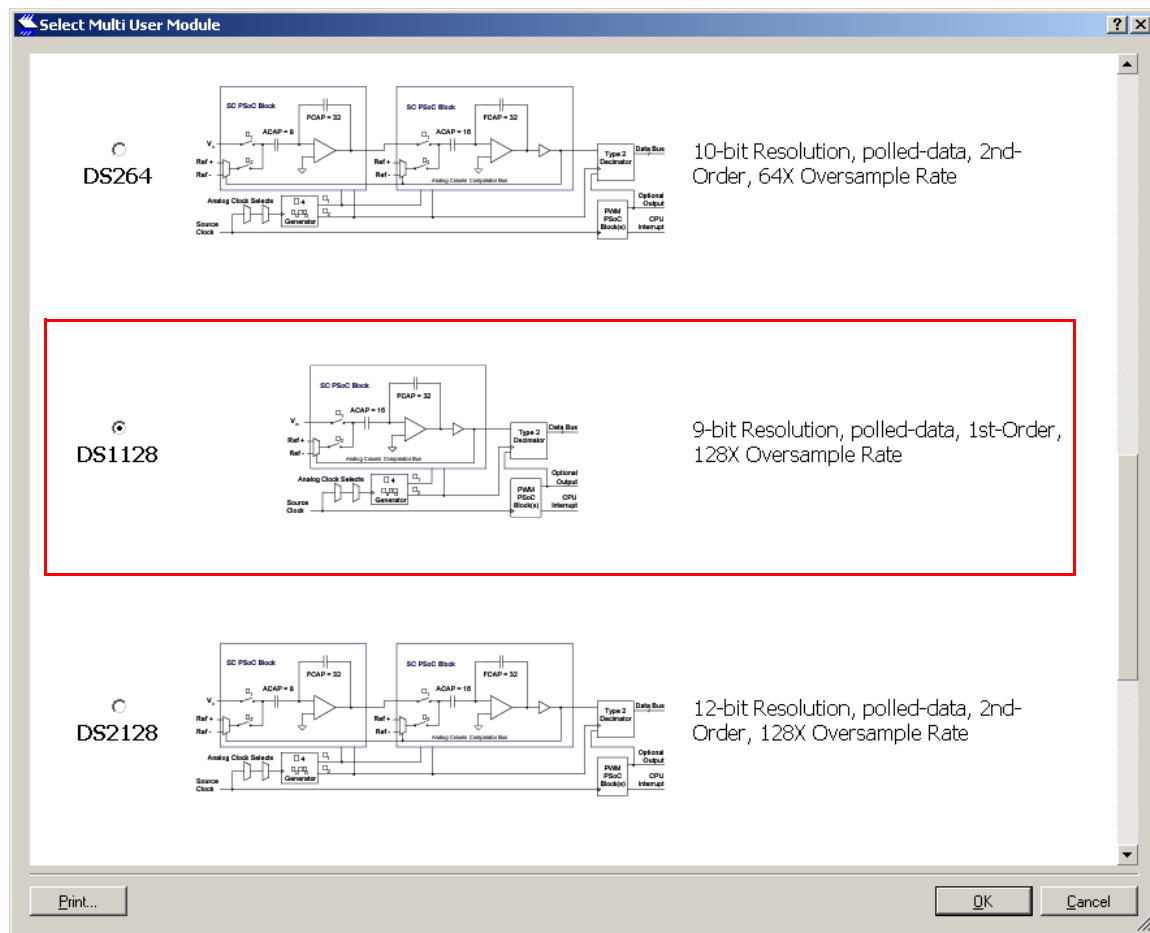

3. Click **OK**.
4. Verify that the **DelSig\_1** UM is placed in **ASC10**.
5. In the **User Modules** window, expand the **Amplifiers** window. Right-click **PGA** and select **Place**. Ensure that the **PGA** is placed in **ACB00**.

Figure 3-65. Place PGA in ACB00

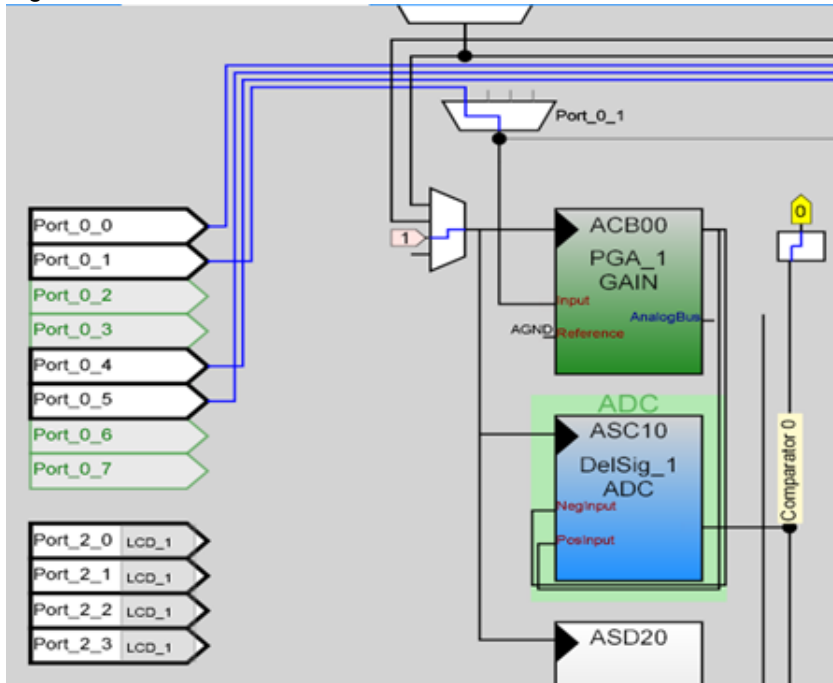

6. In the **User Modules** window, expand **Misc Digital**; right-click **LCD** and select **Place**.
7. Double-click **PGA\_1** and configure the properties to match this figure.

Figure 3-66. PGA\_1 Properties

Parameters - PGA_1	
Name	PGA_1
User Module	PGA
Version	3.2
Gain	1.000
Input	AnalogColumn_InputMUX_0
Reference	AGND
AnalogBus	Disable

8. Double-click **DelSig\_1** and configure the properties to match this figure.

Figure 3-67. DelSig\_1 Properties

Parameters - DelSig_1	
Name	DelSig_1
User Module	DelSig
Version	1.40
DataFormat	Unsigned
Data Clock	VC1
ClockPhase	Normal
PosInput	ACB00
NegInput	ACB00
NegInputGain	Disconnected
PWM Output	None
PulseWidth	1

9. Double-click **LCD\_1** and configure the properties to match this figure.

Figure 3-68. LCD\_1 Properties

Parameters - LCD_1	
Name	LCD_1
User Module	LCD
Version	1.60
LCDPort	Port_2
BarGraph	Disable


10. Configure the **Global Resources** to match the following figure.

Figure 3-69. Global Resources Properties

Global Resources - example_adc_to_lcd	
Power Setting [ Vcc / S	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep_Timer	512_Hz
VC1= SysClk/N	12
VC2= VC1/N	16
VC3 Source	VC2
VC3 Divider	256
SysClk Source	Internal
SysClk*2 Disable	Yes
Analog Power	SC On/Ref High
Ref Mux	(Vdd/2)+/-(Vdd/2)
AGndBypass	Disable
Op-Amp Bias	High
A_Buff_Power	Low
SwitchModePump	OFF
Trip Voltage [LVD (SMF	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable


11. Ensure that **AnalogColumn\_InputMUX\_0** is connected to **Port\_0\_1**. If it is not configured for this port, double-click the mux and choose **Port\_0\_1**.

Figure 3-70. AnalogColumn\_InputMUX\_0 is Connected to Port\_0\_1

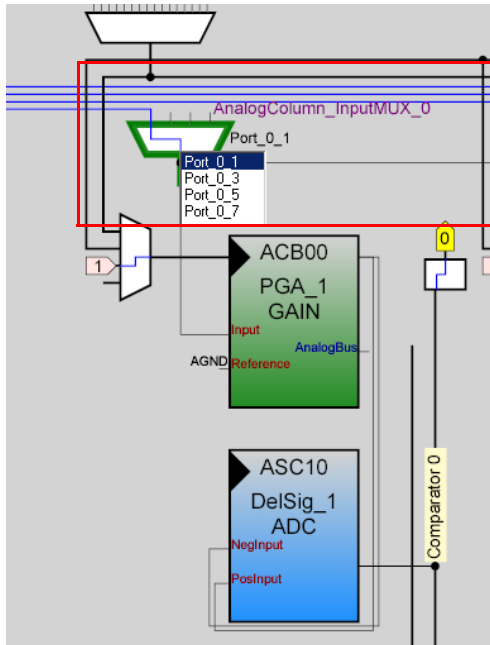

12. Ensure that **AnalogColumn\_Clock\_0**, is connected to **VC1**. If it is not, double-click the mux and chose **VC1**.

Figure 3-71. AnalogColumn\_Clock\_0 is connected to VC1

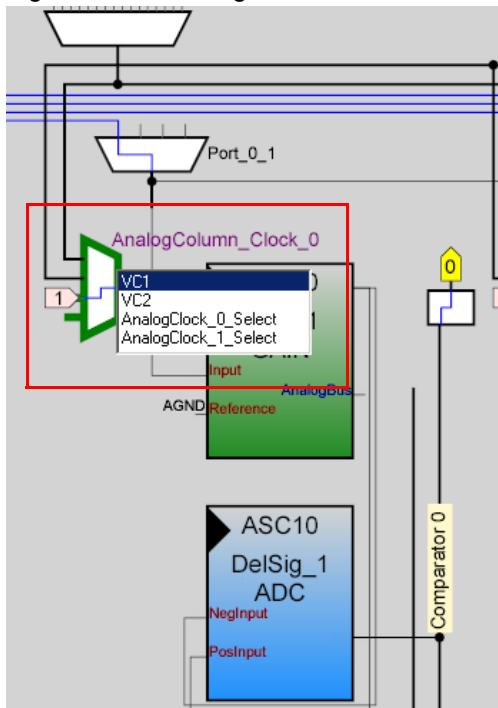


13. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex2.c* file, which is available within the attachments feature of this PDF document.

14. Save the project.

15. To build the project, click **Build** → **Generate/Build 'Example\_ADC\_to\_LCD' Project**.

16. Disconnect power to the board.
17. Configure the DVK SW3 to 5 V.
18. Configure the DVK breadboard using the included jumper wires:
  - P0[1] to VR

Figure 3-72. Connect P0[1] to VR

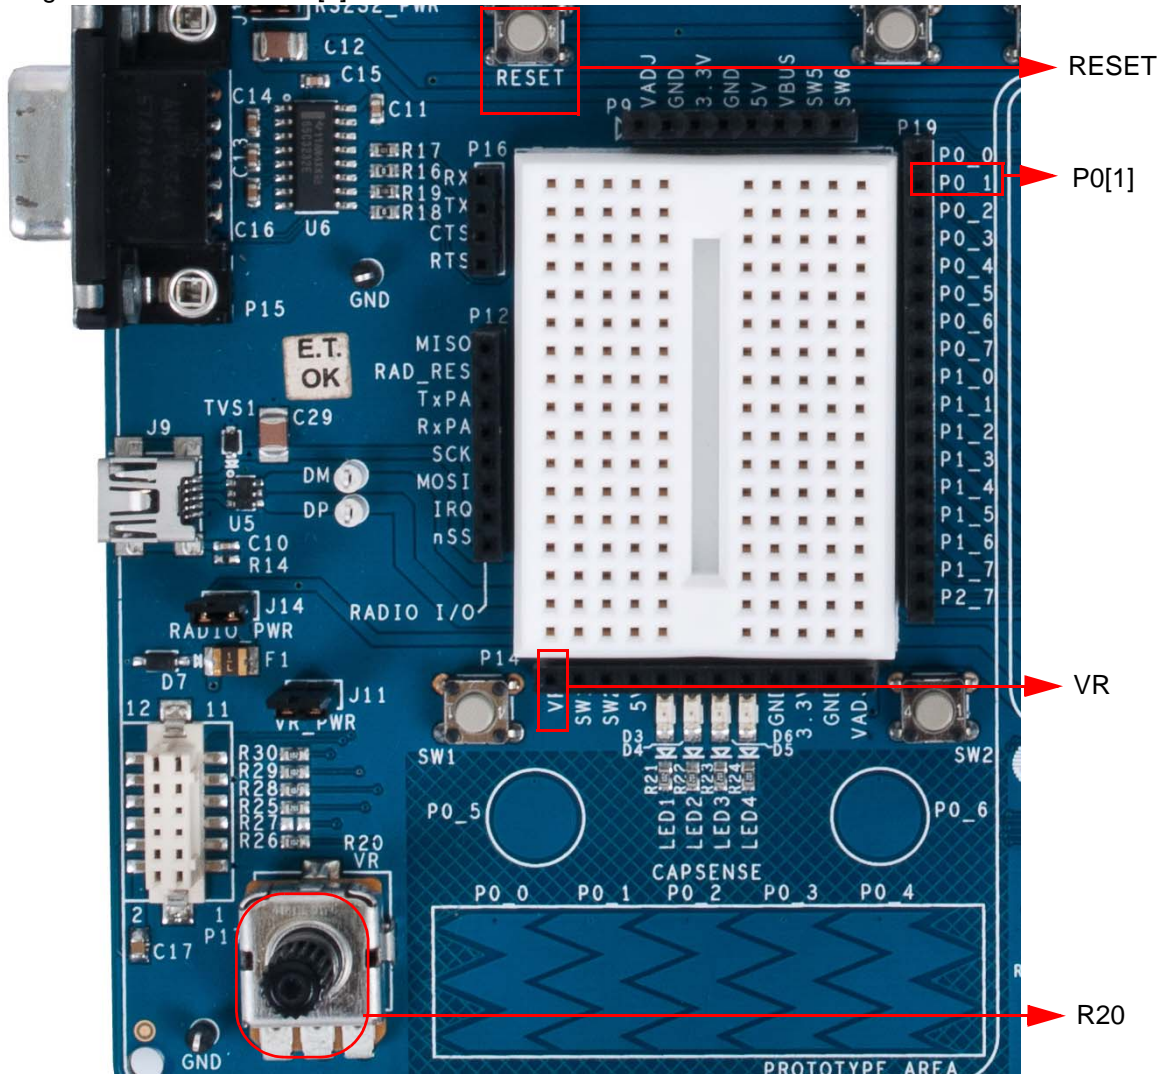

19. Reapply power to the board.
20. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 25](#) to program the device.
21. After programming the device, press the reset button and vary the potentiometer (R20) to see the results on the LCD.
 

**Note** The ADC output values may not reach full range due to potentiometer and ADC limitations. ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.
22. Save and close the project.

### 3.2.2.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex2.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```

/*****
* File Name: main.c
*
* Description:
* This file provides source code for the ADC to LCD code example. The
* firmware takes a voltage output from a potentiometer and displays the raw
* counts on an LCD.
*
*****/

/*****
* PGA Settings:(The PGA buffers the potentiometer voltage on P0.1 into the ADC)
*
* Gain      = 1
* Input     = AnalogColumn_InputMUX_0 (P0.1)
* Reference = AGND
* AnalogBus = Disable
*****/
/*****
* LCD Settings:
* LCDPort  = Port_2
* BarGraph = Disable
*****/
/*****
* DelSig Settings:
* The ADC can read full range values from 0-5 V, if the Ref Mux setting is
selected
* as (Vdd/2)+/- (Vdd/2) and Vdd = 5 V. The ADC is configured for a resolution of
9 bits,
* this is achieved by selecting the appropriate configuration when placing the
UM.
*
* DataFormat   = Unsigned
* DataClock    = VC1      // VC1 = 24MHz/12 = 2MHz
* ClockPhase   = Normal
* PosInput     = ACB00 (PGA_1)
* NegInput     = ACB00 *Note, this parameter is unused
* NegInputGain = Disconnected
* PWM Output   = None
* PulseWidth   = 1       *Note, this parameter is unused
*****/

#include <m8c.h>          // part specific constants and macros
#include "PSoCAPI.h"     // PSoC API definitions for all User Modules

unsigned int wADCResult; // Holds the integer ADC result

void main(void)
{

```

```
    PGA_1_Start(PGA_1_HIGHPOWER); //Initialize the PGA, PGA used to buffer input
    from the VR on P0.1 to the ADC
    DelSig_1_Start(DelSig_1_HIGHPOWER); //Initialize the ADC
    LCD_1_Start(); //Initialize the LCD

    LCD_1_Position(0,0); //Set the LCD to (Row=0,Column=0)

    LCD_1_PrCString("V Count: ");

    DelSig_1_StartAD(); //Start gathering conversions from the ADC

    M8C_EnableGInt; //Enable Global interrupts

    //This loop waits for a valid ADC result, and then displays it on the LCD
    while (1)
    {
        while (!(DelSig_1_fIsDataAvailable())); //Wait for ADC data to be ready
        wADCResult=DelSig_1_wGetDataClearFlag(); //Store result from ADC
        LCD_1_Position(0,9); //Set LCD to (Row=0,Column=9)
        LCD_1_PrHexInt(wADCResult); //Print ADC result on LCD
    }

}
```


### 3.2.3 ADC to LCD with DAC and UART

This project demonstrates sine wave generation by using a 6-bit DAC. The sine wave period is based on the current value of the ADC. The firmware reads the voltage output by the DVK board potentiometer and displays the raw counts on the DVK board character LCD display similar to those shown in the previous project. A 6-bit DAC outputs a table generated sine wave at a frequency proportional to the ADC count. The frequency is in the approximate range of 15 Hz to 350 Hz and outputs to port to observe on scope. A 38400 Baud UART outputs the current ADC count as ASCII formatted into a hexadecimal number.

#### 3.2.3.1 Creating ADC to LCD with DAC and UART Project

1. Follow steps 1 to 10 in the section [Creating My First PSoC 1 \(CY8C29\) Project on page 73](#); change the project name to **Example\_ADC\_to\_LCD\_with\_DAC\_and\_UART**.
2. In the **User Modules** window, expand the **ADCs** folder; right-click **DeISig** and select **Place**. A window opens with multiple options for the DeISig UM. Scroll down, if necessary, and select the **DS232** configuration. Click **OK**.


Figure 3-73. Select Multi User Module Window

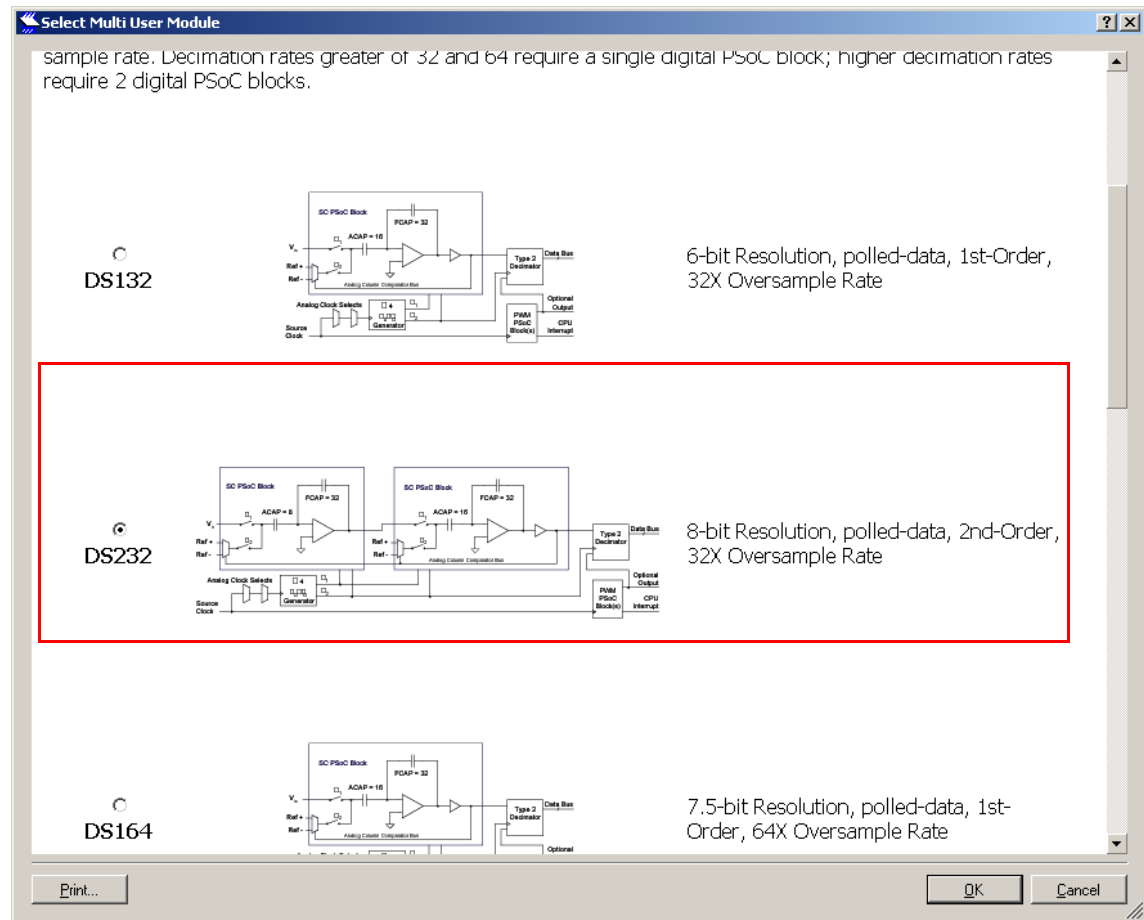

3. Click **OK**.


4. Verify that the UM is placed in **ASC10**.
5. In the **User Modules** window, expand the **Amplifiers** window. Right-click **PGA** and select **Place**. Ensure that the **PGA** is placed in **ACB00**.

Figure 3-74. Place PGA in ACB00

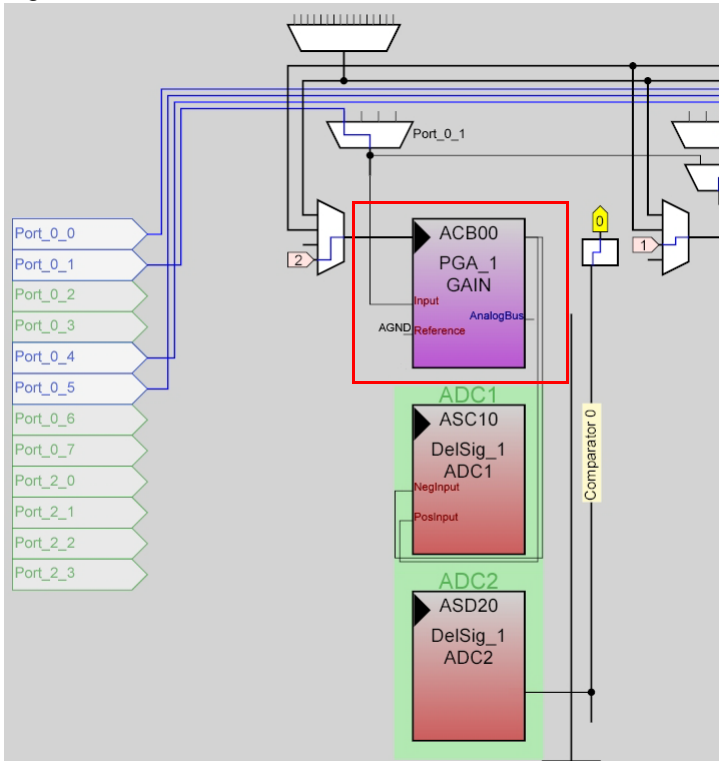

6. In the **User Modules** window, expand **Misc Digital**, right-click **LCD**, and select **Place**.
7. In the **User Modules** window, expand **Counters**, right-click **Counter8**, and select **Place**. Complete this step twice to place two **Counter8**s.
8. In the **User Modules** window, expand **Digital Comm**, right-click **TX8**, and select **Place**.
9. In the **User Modules** window, expand **DACs**, right-click **DAC6**, and select **Place**.
10. Move the UMs so that they match the configuration shown in [Figure 3-75 on page 91](#).

Figure 3-75. Configure User Modules

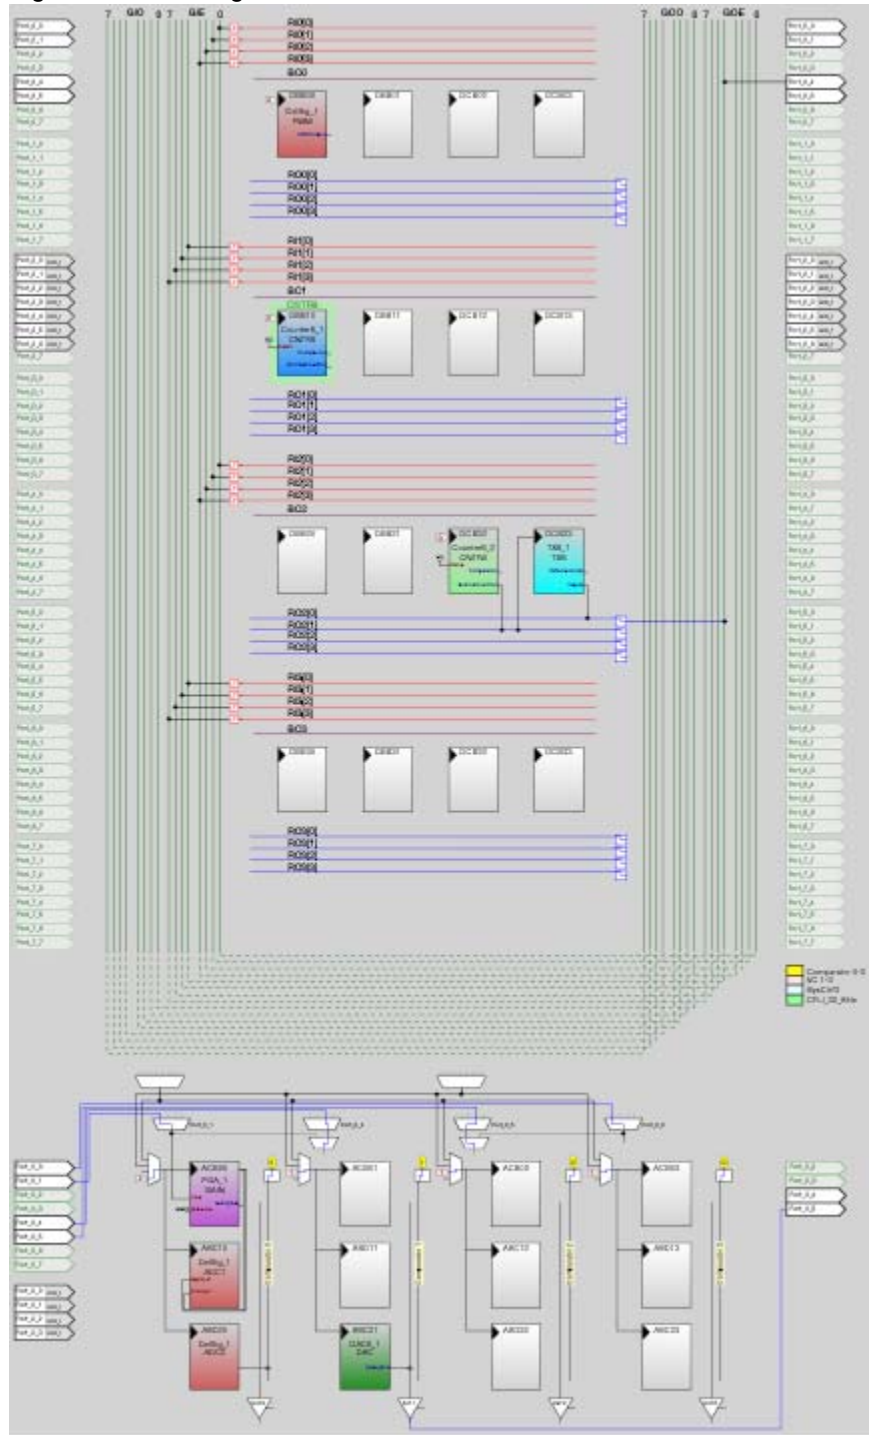

11. Double-click **DelSig\_1** and configure it to match this figure.

Figure 3-76. DelSig\_1 Properties

Parameters - DelSig_1	
Name	DelSig_1
User Module	DelSig
Version	1.40
DataFormat	Unsigned
Data Clock	VC2
ClockPhase	Normal
PosInput	ACB00
NegInput	ACB00
NegInputGain	Disconnected
PWM Output	None
PulseWidth	1

12. Double-click **PGA\_1** and configure it to match this figure.

Figure 3-77. PGA\_1 Properties

Parameters - PGA_1	
Name	PGA_1
User Module	PGA
Version	3.2
Gain	1.000
Input	AnalogColumn_InputMUX_0
Reference	AGND
AnalogBus	Disable

13. Double-click **DAC6\_1** and configure it to match this figure.

Figure 3-78. DAC6\_1 Properties

Parameters - DAC6_1	
Name	DAC6_1
User Module	DAC6
Version	4.3
AnalogBus	AnalogOutBus_1
ClockPhase	Normal
DataFormat	OffsetBinary

14. Double-click **LCD\_1** and configure it to match this figure.

Figure 3-79. LCD\_1 Properties

Parameters - LCD_1	
Name	LCD_1
User Module	LCD
Version	1.60
LCDPort	Port_2
BarGraph	Enable

15. Double-click **Counter8\_1** and configure it to match this figure.

Figure 3-80. Counter8\_1 Properties

Parameters - Counter8_1	
Name	Counter8_1
User Module	Counter8
Version	2.60
Clock	VC2
ClockSync	Sync to SysClk
Enable	High
CompareOut	None
TerminalCountOut	None
Period	255
CompareValue	0
Compare Type	Less Than Or Equal
Interrupt Type	Terminal Count
InvertEnable	Normal

16. Double-click **Counter8\_2** and configure it to match this figure.

Figure 3-81. Counter8\_2 Properties

Parameters - Counter8_2	
Name	Counter8_2
User Module	Counter8
Version	2.60
Clock	VC3
ClockSync	Sync to SysClk
Enable	High
CompareOut	None
TerminalCountOut	Row_2_Output_1
Period	38
CompareValue	0
Compare Type	Less Than Or Equal
Interrupt Type	Terminal Count
InvertEnable	Normal


17. Double-click **TX8\_1** and configure it to match this figure.

Figure 3-82. TX8\_1 Properties

Parameters - TX8_1	
Name	TX8_1
User Module	TX8
Version	3.50
Clock	Row_2_Output_1
Output	Row_2_Output_0
TX Interrupt Mode	TXComplete
ClockSync	Sync to SysClk
Data Clock Out	None


18. Double-click **RO2[0]** LUT, enable **Row\_2\_Output\_0\_Drive\_1** to connect **GlobalOutEven\_4**.

Figure 3-83. Digital Interconnect Window

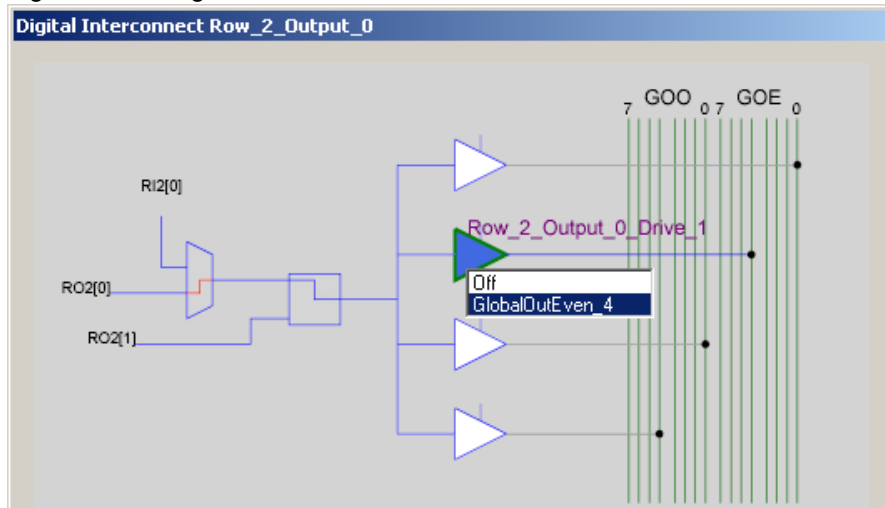

19. Double-click **GlobalOutEven\_4**. In the window that appears, configure **Pin** for **Port\_0\_4**.


Figure 3-84. Configure Pin for Port\_0\_4

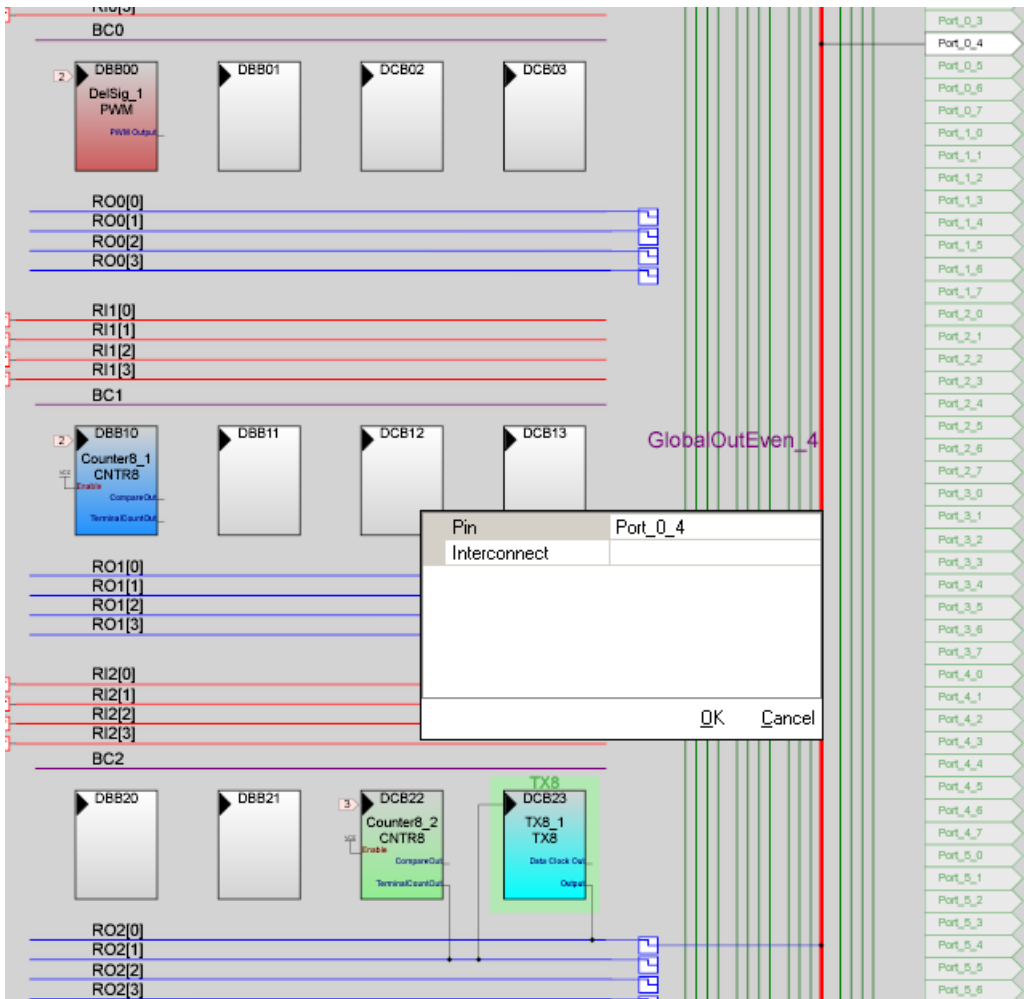

20. Click **OK** to continue.


21. Click **AnalogOutBuf\_1** and configure it for **Port\_0\_5**.

Figure 3-85. Configure AnalogOutBuf\_1

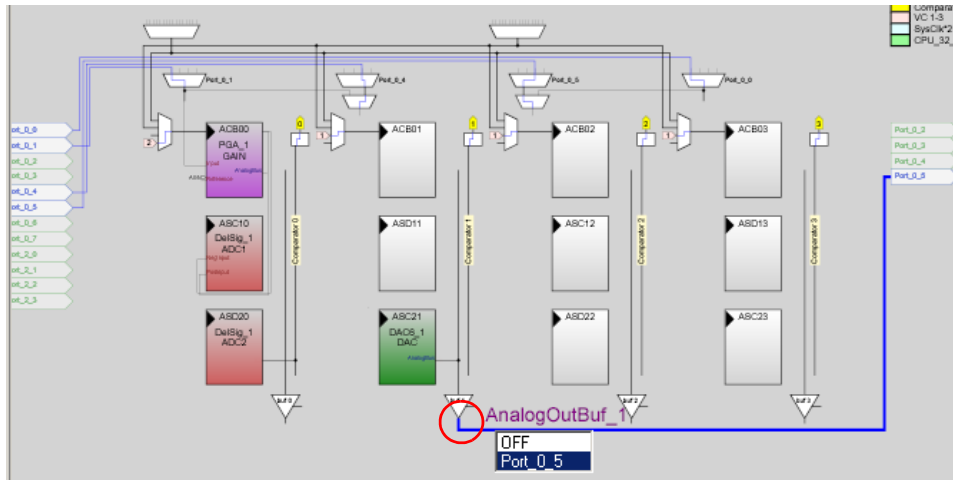


22. Verify that **AnalogColumn\_InputMUX\_0** is connected to **Port\_0\_1**. If it is not configured for this port, double-click the mux and choose **Port\_0\_1**.

Figure 3-86. AnalogColumn\_InputMUX\_0 Connection

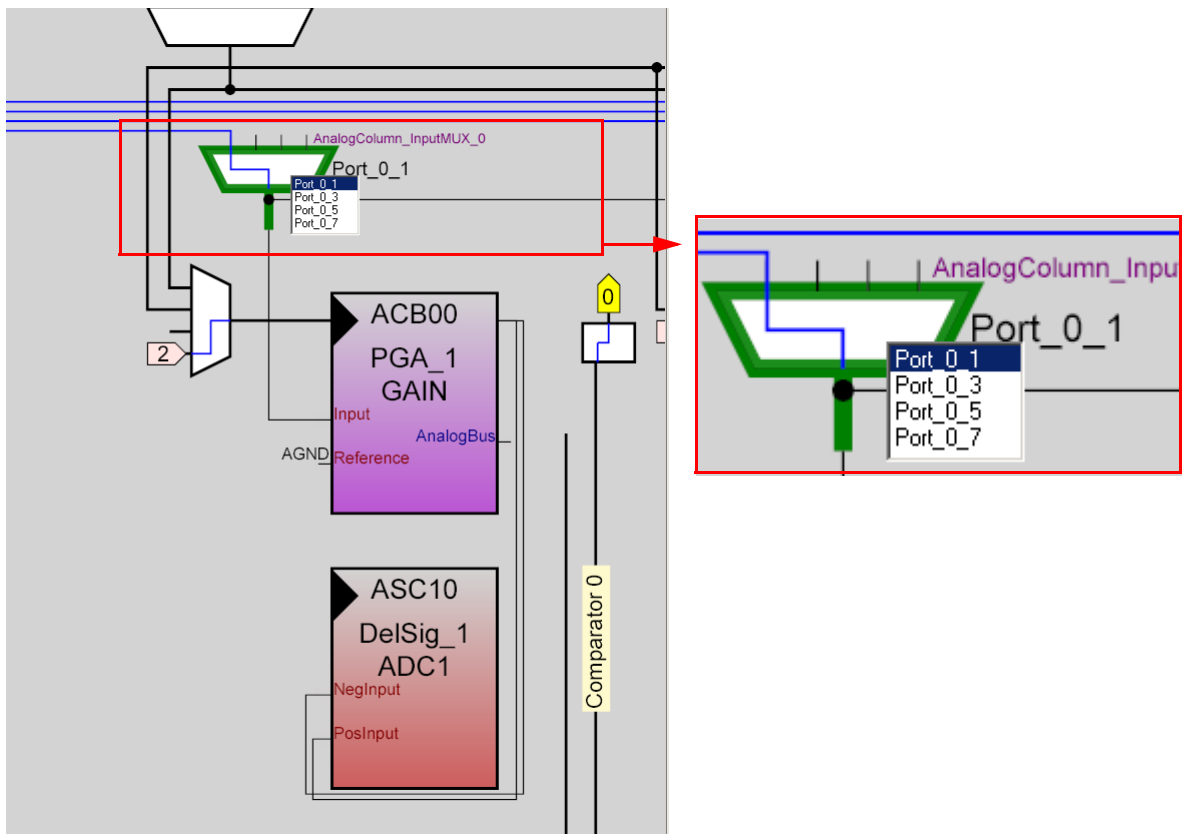

23. Verify that **AnalogColumn\_Clock\_0** is connected to **VC2**. If it is not, double-click the mux and chose **VC2**.

Figure 3-87. AnalogColumn\_Clock\_0 Connection

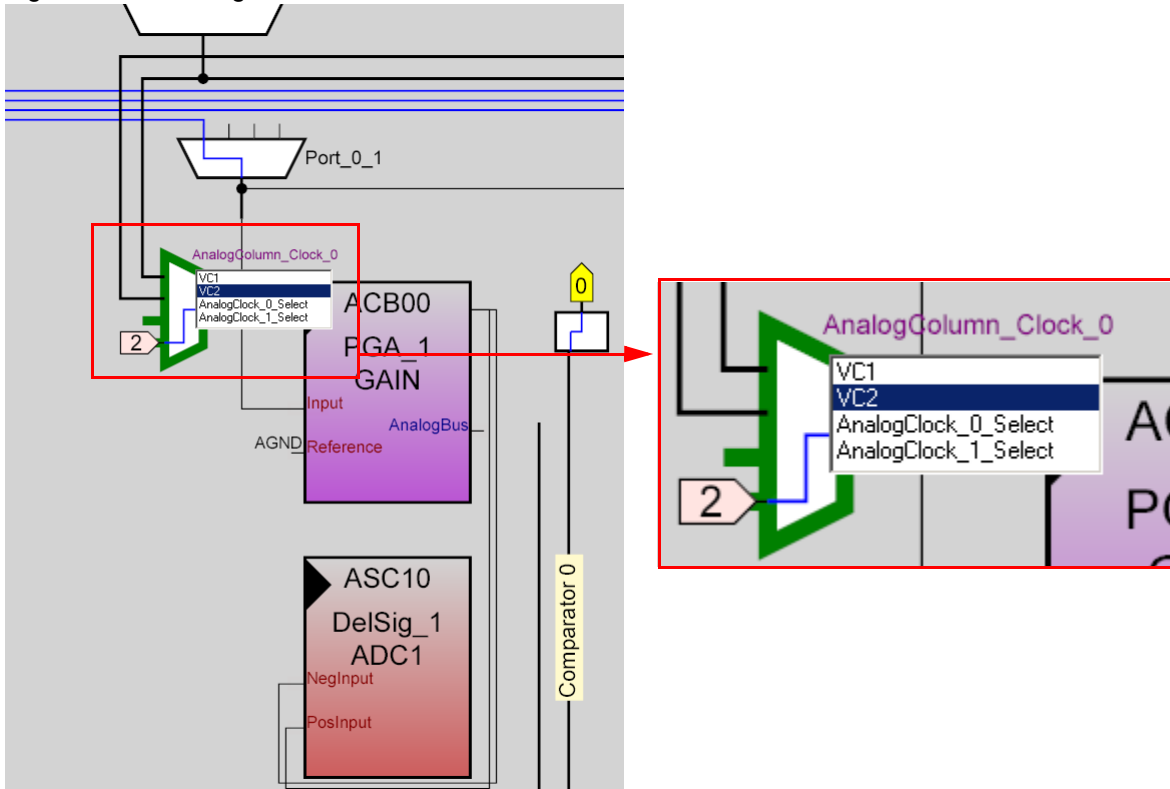

24. Configure **Global Resources** to match the following figure.

Figure 3-88. Configure Global Resources

Power Setting [ Vcc / Sy	5.0V / 24MHz
CPU_Clock	SysClk/2
32K_Select	Internal
PLL_Mode	Disable
Sleep_Timer	512_Hz
VC1= SysClk/N	16
VC2= VC1/N	6
VC3 Source	SysClk/1
VC3 Divider	2
SysClk Source	Internal
SysClk*2 Disable	No
Analog Power	SC On/Ref High
Ref Mux	(Vdd/2)+/(Vdd/2)
AGndBypass	Disable
Op-Amp Bias	High
A_Buff_Power	Low
SwitchModePump	OFF
Trip Voltage [LVD (SMP)	4.81V (5.00V)
LVDThrottleBack	Disable
Watchdog Enable	Disable

25. Open the existing *main.c* file within Workspace Explorer. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex3.c* file, which is available within the attachments feature of this PDF document.

26. Save the project.

27. To generate the project, click **Build** → **Generate/Build 'Example\_ADC\_to\_LCD\_with\_DAC\_and\_UART' Project**.

28. Open your *Counter8\_1INT.asm* file in **Files** → **lib** → **Library Source Files**. Copy the code found in the *Counter8\_1INT.asm* file in PDF attachment.

29. Save the project.

30. To build the project, click **Build** → **Build 'Example\_ADC\_to\_LCD\_with\_DAC\_and\_UART' Project**.

**Note** If prompted to reload an out of date file, select **Yes**.

31. Disconnect power to the board.


32. Configure the DVK SW3 to 5 V.

33. Configure the DVK breadboard using the included jumper wires as follows:

- P0[1] to VR
- P0[4] to TX
- P0[5] to Scope

**Note** An LED (P0[5] to LED1) by nature does not accurately show the changes in frequency; the best way to see this is to use a Scope(P0[5] to Scope).

Figure 3-89. Connect P0[1] to VR, P0[4] to TX, and P0[5] to LED1

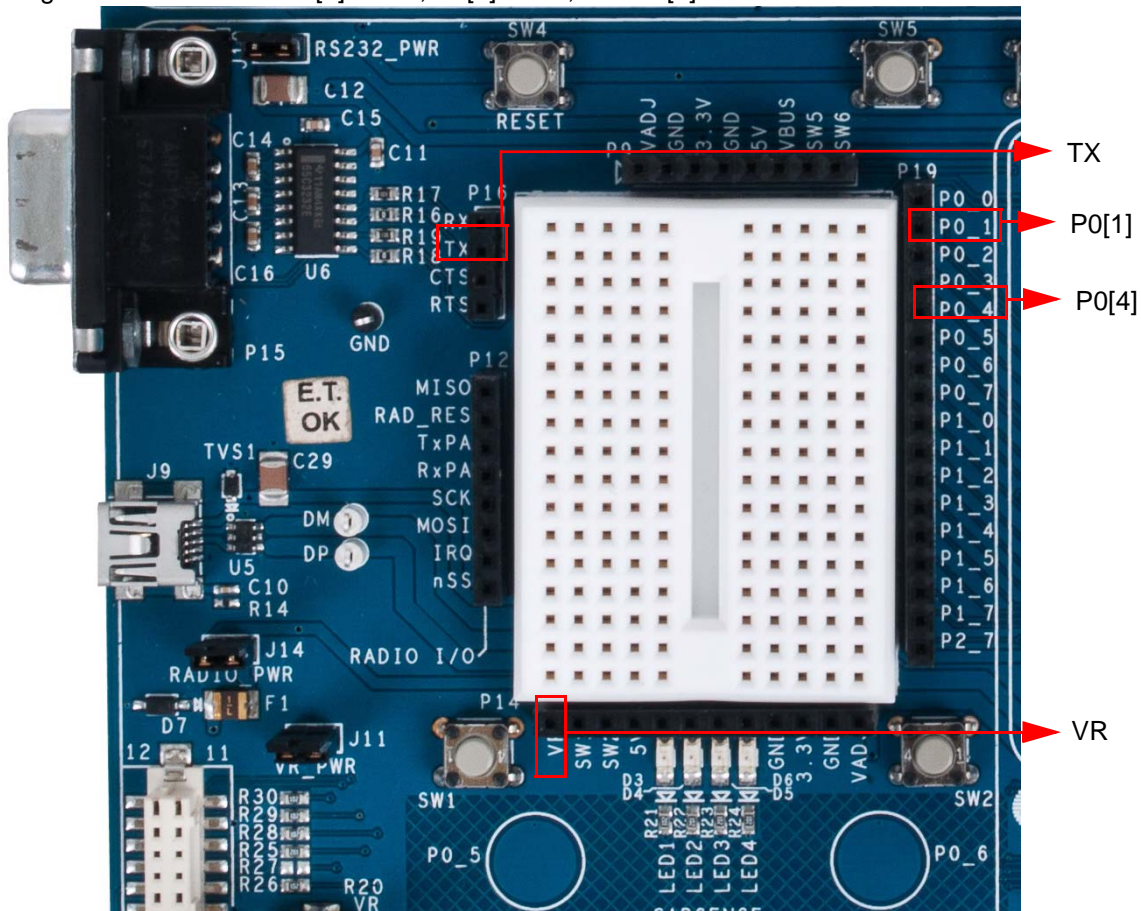

34. Connect a serial cable to the PC and the DVK board.
35. On the DVK board, verify that **RS232\_PWR(J10)** is jumpered to **ON**.
36. Reapply power to the board.
37. Use a terminal application such as TeraTerm or HyperTerminal with these setup parameters.
  - Baud Rate: 38400
  - Data: 8-bit
  - Parity: none
  - Stop: 1 bit
  - Flow Control: none
38. Use PSoC Designer as described in [Programming My First PSoC 1 Project on page 25](#) to program the device.
 

After programming the device, press Reset and vary the potentiometer to see the result on the LCD as well as in the terminal application. View the DAC output on a scope or with an LED.

**Note** The ADC output values may not reach full range due to potentiometer and ADC limitations. ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.
39. Save and close the project.

### 3.2.3.2 *main.c*

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C29\_main\_Ex3.c* file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```

/*****
* File Name: main.c
*
* Description:
* This file provides source code for the ADC to LCD with DAC and UART example
* project. The firmware takes a voltage output from a potentiometer and
* displays the ADC raw count on an LCD. The raw count is also transmitted
* serially. The raw count also determines the clock divider value of the clock
* driving the DAC update rate.

/*****
* PGA_1 Settings:(The PGA buffers the potentiometer voltage on P0.1 into the ADC)
*
* Gain      = 1
* Input     = AnalogColumn_InputMUX_0 (P0.1)
* Reference = AGND
* AnalogBus = Disable
*

*****/
/*****
* LCD_1 Settings:
* LCDPort  = Port_2
* BarGraph = Disable
*

*****/
/*****
* DelSig_1 Settings:
* The ADC can read full range values from 0-5 V, if the Ref Mux setting is
selected
* as (Vdd/2)+/- (Vdd/2) and Vdd = 5 V. The ADC is configured for a resolution of
8 bits,
* this is achieved by selecting the appropriate configuration when placing the
UM.
*
* DataFormat    = Unsigned
* DataClock     = VC2 //VC2 = 24MHz/16/16 = 250kHz
* ClockPhase    = Normal
* PosInput      = ACB00 (PGA_1)
* NegInput      = ACB00 *Note this parameter is not used
* NegInputGain  = Disconnected
* PWM Output    = None
* PulseWidth    = N/A *Note this parameter is not used
*

*****/
/*****
* Counter8_1 Settings:
* The Counter8_1 controls the update rate of the DAC. The DAC is updated during
ever

```

```

* TerminalCount ISR. The frequency of the TerminalCount ISR is determined by the
* Counter Input Clock divided by the (Period value +1). The Period Value of the
counter
* is changed by the ADC reading. Thus the frequency of the TerminalCount ISR can
range
* from 125kHz (Period Value=1) to 977Hz (Period Value = 255)
*
*   Clock           = VC2 // VC2 = 24MHz/16/16 = 250kHz
*   ClockSync       = Sync to SysClk
*   Enable          = High
*   CompareOut      = None
*   TerminalCountOut = None
*   Period          = 255 *Note this parameter is updated in the main loop
*   CompareValue    = 0 *Note this parameter is not used
*   CompareType     = Less Than or Equal
*   InterruptType   = Terminal Count
*   InvertEnable    = Normal
*
*****/
/*****
* Counter8_2 Settings:
* The Counter8_1 provides a clock to the TX8 UM to achieved a desired baud rate.
* For this project the desired baud rate is 38400. The TX8 UM derives the baud
rate
* by dividing its input clock by 8. Thus the input clock to the TX8 needs to be
around
* 307.2 kHz to achieve a baud rate of 38400. The Counter8_1 UM provides this
clock by dividing
* VC3 (12MHz) by 39 to get 307.7 kHz.
*
*   Clock           = VC3 //VC3 = 24MHz/2 = 12MHz
*   ClockSync       = Sync to SysClk
*   Enable          = High
*   CompareOut      = None
*   TerminalCountOut = Row_2_Output_1
*   Period          = 38
*   CompareValue    = 0*Note this parameter is not used
*   CompareType     = Less Than or Equal
*   InterruptType   = Terminal Count
*   InvertEnable    = Normal
*
*****/
/*****
* TX8_1 Settings:
* The TX8 UM provides serial communication of the ADC data to another device or
PC.
* The TX8 UM send data out at a baud rate of 38400. This baud rate is derived
* by dividing the UM's input clock by 8.
*
*   Clock           = Row_2_Output_1 (From Counter8_1)
*   Output          = Row_2_Output_0
*   Tx Interrupt Mode = TXComplete
*   ClockSync       = Sync to SysClk
*   Data Clock Out   = None
*
*****/
/*****
* DAC6 Settings:

```

```

* The DAC6 outputs a sine wave on P0.5. The shape of the sine wave is determined
* by a 64 element lookup table found in SINTable.asm. The update rate of the DAC6
* is determined by the Counter8 terminal count ISR. The frequency of the DAC out-
put
* equals the Counter8 Terminal Count frequency divided by 64 (the number of ele-
ments in the table).
*
* AnalogBus = AnalogOutBus_1
* ClockPhase = Normal
* DataFormat = OffsetBinary
*
*****/

#include <m8c.h> // part specific constants and macros
#include "PSOCAPI.h" // PSoC API definitions for all User Modules

const BYTE SINTable[]=
{
    31, 33, 36, 39, 41, 44, 46, 49, 51, 53, 55, 56, 58, 59, 59,
    60, 60, 60, 59, 59, 58, 56, 55, 53, 51, 49, 47, 44, 42, 39,
    36, 33, 31, 28, 25, 22, 19, 16, 13, 11, 9, 7, 5, 3, 2, 1, 0,
    0, 0, 0, 1, 2, 3, 4, 6, 7, 10, 12, 14, 17, 20, 23, 26, 29
};

BYTE bADCvalue;//Variable for holding ADC result, and updating counter period

void main(void)
{
    Counter8_1_Start();//Enable the counter used for DAC update rate
    Counter8_1_EnableInt();//Enable DAC update interrupt
    Counter8_2_Start();//Enable counter for TX8 clock rate divider
    TX8_1_Start(TX8_1_PARITY_NONE);//Start the TX8 UM with no parity (baud rate =
38400)
    PGA_1_Start(PGA_1_HIGHPOWER);//Enable to PGA to buffer signal from VR to ADC
    DAC6_1_Start(DAC6_1_HIGHPOWER);//Start the DAC
    DelSig_1_Start(DelSig_1_HIGHPOWER);//Start the ADC
    DelSig_1_StartAD();//Start reading values on the ADC
    LCD_1_Start(); //Start the character LCD

    M8C_EnableGInt; // Enable Global Interrupts

    while(1)
    {
        /* Step 1: Get BYTE data from the ADC
        Setp 2: Write BYTE data from ADC to the counter to change the DAC
update rate
        Step 3: Move the LCD cursor back to the beginning and display new ADC
data
        Setp 4: Write ADC data out the TX port, and then send a return
        */
        if (DelSig_1_fIsDataAvailable())//Is new data available from the ADC?
        {

            bADCvalue = DelSig_1_bGetDataClearFlag(); // Get new data from ADC
            Counter8_1_WritePeriod(bADCvalue); // Update DAC update rate counter
            LCD_1_Position(0,0); // Move LCD (row=0,column=0)
            LCD_1_PrHexByte(bADCvalue); // Print ADC result to LCD
        }
    }
}

```

```

        TX8_1_PutSHexByte(bADCvalue);           // Write LCD result out TX8 to PC
        TX8_1_PutCRLF(); // Send a return character
    }
} //end of while(1)

} //End of Main

```

### 3.2.3.3 Counter8\_1INT.asm

1. Open your *Counter8\_1INT.asm* file in **Files** → **lib** → **Library Source Files**.
2. Replace the existing *Counter8\_1INT.asm* content with the content of the embedded file, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

```

;*****
;*****
;; FILENAME: Counter8_1INT.asm
;; Version: 2.5, Updated on 2009/3/31 at 12:2:49
;; Generated by PSoC Designer 5.0.423.0
;;
;; DESCRIPTION: Counter8 Interrupt Service Routine
;-----
;; Copyright (c) Cypress Microsystems 2000-2004. All Rights Reserved.
;*****
;*****

include "m8c.inc"
include "memory.inc"
include "Counter8_1.inc"

;-----
; Global Symbols
;-----
export _Counter8_1_ISR

AREA InterruptRAM (RAM,REL,CON)

;@PSoC_UserCode_INIT@ (Do not change this line.)
;-----
; Insert your custom declarations below this banner
;-----
export bTablePos// Stores last table position index
export _bTablePos

;-----
; Includes
;-----

```

```

;-----
; Constant Definitions
;-----

;-----
; Variable Allocation
;-----
area bss(RAM)
bTablePos:blk 1
_bTablePos:
;-----
; Insert your custom declarations above this banner
;-----
;@PSoC_UserCode_END@ (Do not change this line.)

AREA UserModules (ROM, REL)

;-----
; FUNCTION NAME: _Counter8_1_ISR
;
; DESCRIPTION: Unless modified, this implements only a null handler stub.
;
;-----
;

_counter8_1_isr:

;@PSoC_UserCode_BODY@ (Do not change this line.)
;-----
; Insert your custom code below this banner
;-----
; NOTE: interrupt service routines must preserve
; the values of the A and X CPU registers.

push A
push X

dec [bTablePos] ;Go to the next element in the table
mov A, [bTablePos]
jnz SINlookup ;If we are at the end go back to the beginning
mov [bTablePos], 64

SINlookup:
index _SINtable;Get the value in the SINtable pointed to by [bTablePos]
lcall DAC6_1_WriteBlind;Write value from SINtable (stored in A) to the DAC

pop X
pop A

;-----
; Insert your custom code above this banner
;-----
;@PSoC_UserCode_END@ (Do not change this line.)

reti

; end of file Counter8_1INT.asm

```

### 3.3 CY8C38/CY8C58LP Family Processor Module Code Examples

#### 3.3.1 My First PSoC 3/PSoC 5LP Project (LED\_with\_PWM)

This project demonstrates basic hardware and software functionality with the PSoC 3 or PSoC 5LP device. It flashes two LEDs independently, one using hardware, the other with software. The hardware LED uses a hardware enabled digital port and a PWM to generate a duty cycle and flash the LED. The software LED uses a software enabled digital port and a simple delay in the *main.c* to flash the LED at a known rate.


This code example uses these components:

- Digital Output Pin (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**)
- PWM (**Component Catalog** → **Digital Functions** → **PWM**)
- Clock (**Component Catalog** → **System** → **Clock**)
- Logic Low (**Component Catalog** → **Digital** → **Logic** → **Logic Low**)
- Logic High (**Component Catalog** → **Digital** → **Logic** → **Logic High**)

##### 3.3.1.1 Creating My First PSoC 3/PSoC 5LP Project

1. Open PSoC Creator.
2. Create a new project by clicking **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-90. Create New Project

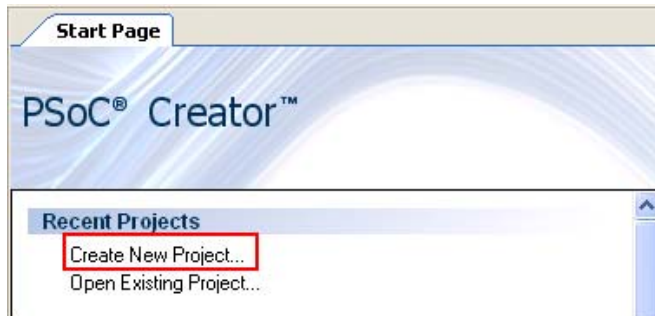


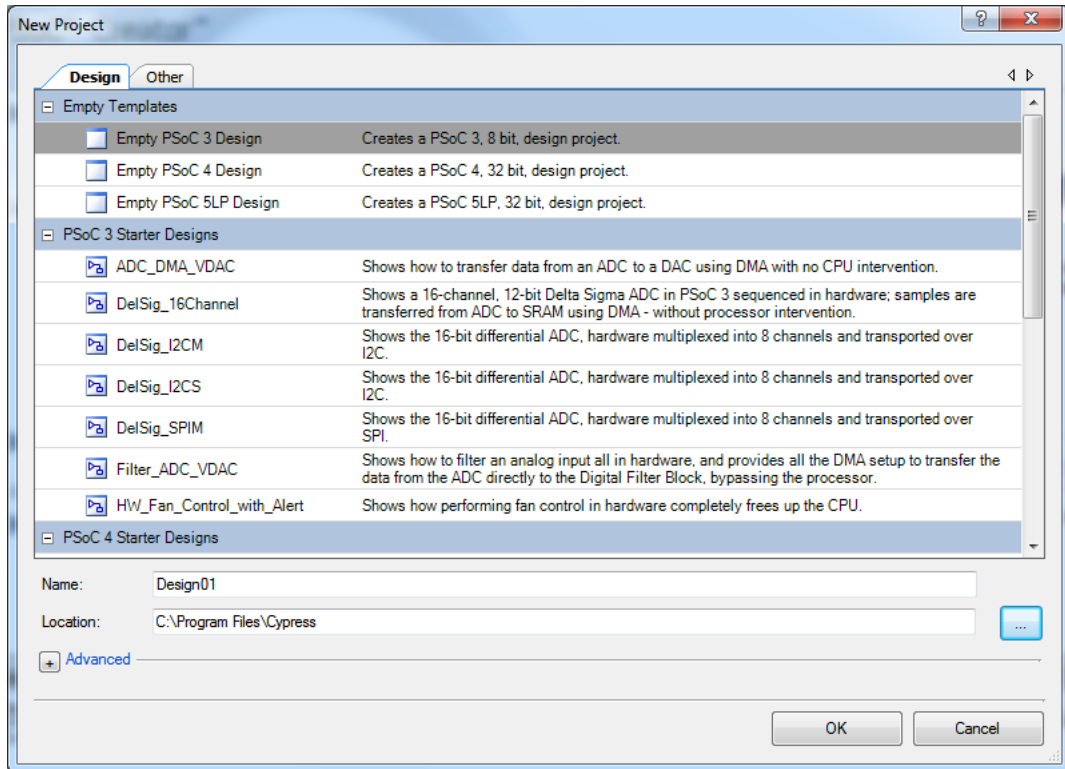
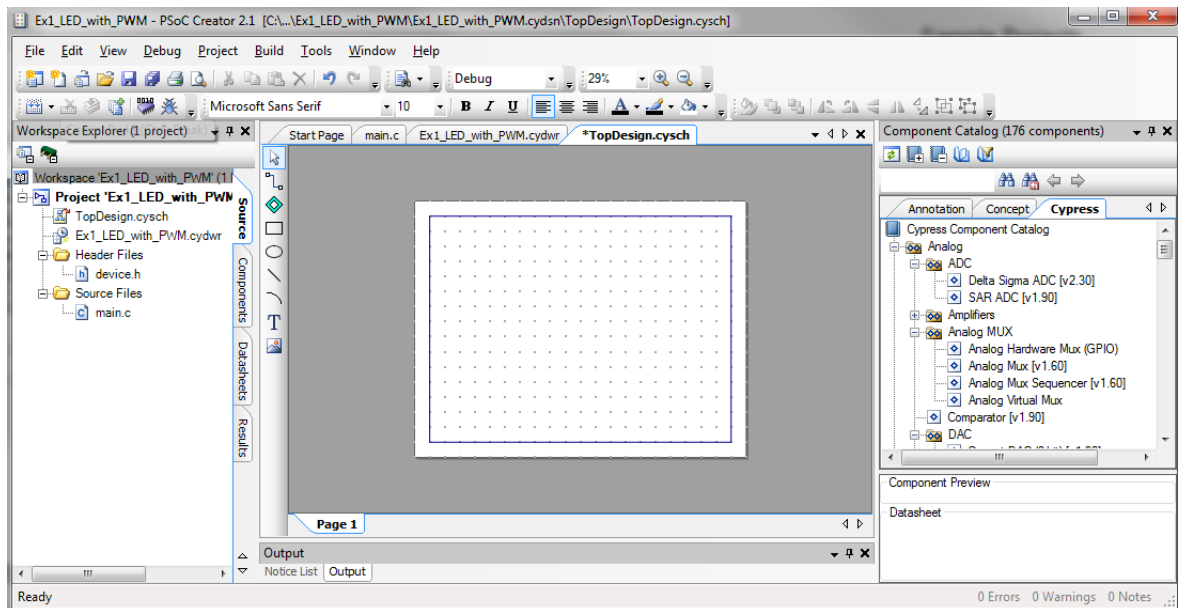
3. In the **New Project** window, select the **Empty PSoC 3 Design** template for a PSoC 3 design, or **Empty PSoC 5LP Design** template for a PSoC 5LP design and name the project **Ex1\_LED\_with\_PWM**.
4. In the **Location** field, type the path where you want to save the project, or click the  button and navigate to the appropriate directory and click **OK**.

Figure 3-91. New Project Window



5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.

Figure 3-92. Ex1\_LED\_with\_PWM




### 3.3.1.2 Placing and Configuring PWM

1. Drag and drop the **PWM** component (**Component Catalog** → **Digital** → **Functions** → **PWM**) to workspace.
2. Double-click the **PWM\_1** component in the schematic to open the configuration window.
3. Configure the PWM as follows:

#### Configure Tab

- Name:** PWM\_1
- Resolution:** 8-Bit
- PWM Mode:** One Output
- Period:** 100
- CMP Value 1:** 50
- CMP Type 1:** Less or Equal


Figure 3-93. PWM Component Configuration

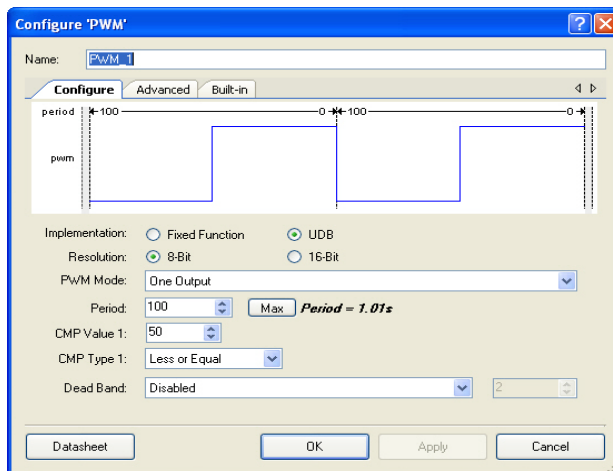

#### Advanced Tab

- Enable Mode:** Hardware Only
- Interrupt On Terminal Count Event:** Select

Figure 3-94. PWM Component Advanced Tab Configuration

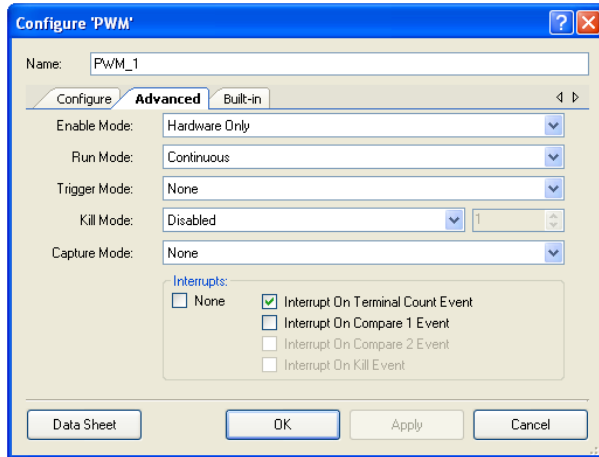

4. Click **Apply** to save the changes to the PWM component and click **OK** to close the PWM configuration window.

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.


### 3.3.1.3 *Placing and Configuring Digital Output Pin Hardware*

1. Drag and drop the **Digital Output Pin** component (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**).
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the digital output pin:

#### **Type** Tab

- Name:** LED1
- Select **Digital Output** check box
- Select **HW Connection** check box


Figure 3-95. LED1 Component Configuration

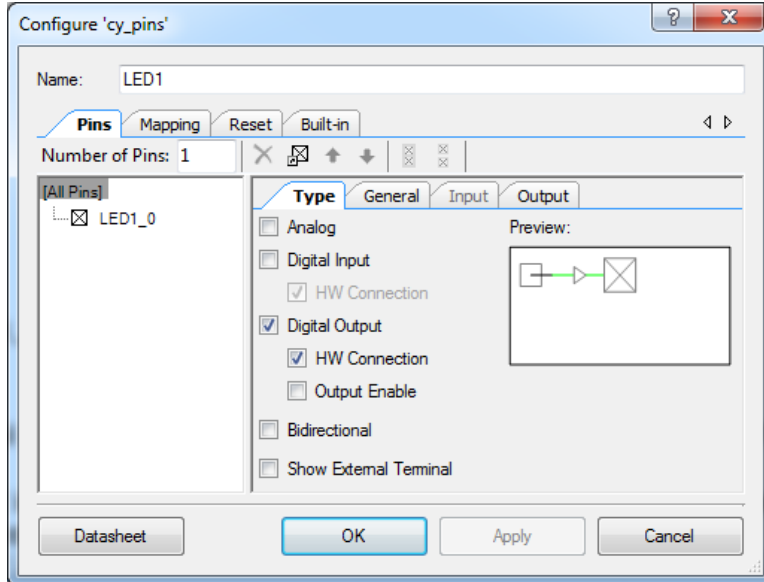

#### General Tab

- **Drive Mode:** Strong Drive
- Leave the remaining parameters as default

Figure 3-96. Pins - LED1 Component Configuration

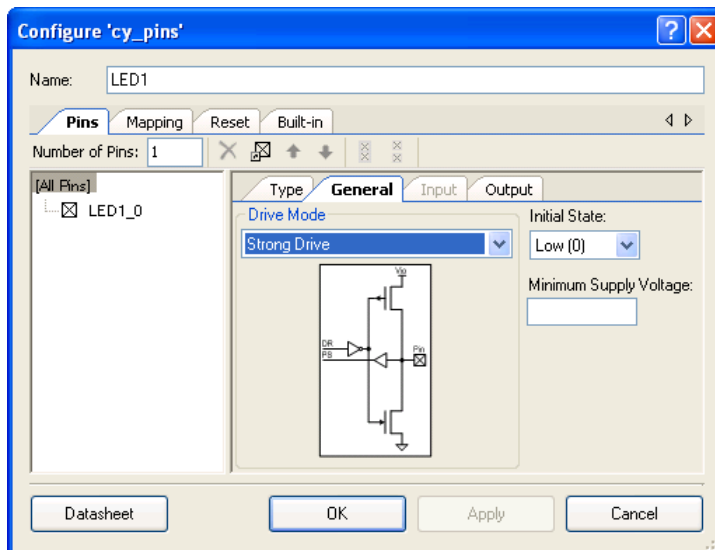

4. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.


### 3.3.1.4 *Placing and Configuring Software Digital Output Pin*

1. Drag and drop the **Digital Output Pin** component (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**).
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the digital output pin:

#### **Type Tab**

- Name:** LED2
- Select the **Digital Output** check box
- Uncheck the HW **Connection** check box


Figure 3-97. LED2 Component Configuration

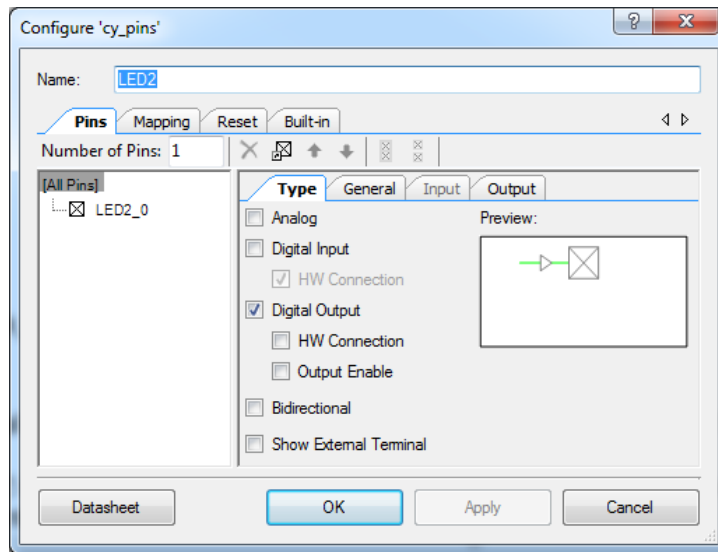

#### **General Tab**

- Drive Mode:** Strong Drive
- Leave the remaining parameters as default


Figure 3-98. Pins - LED2 Component Configuration

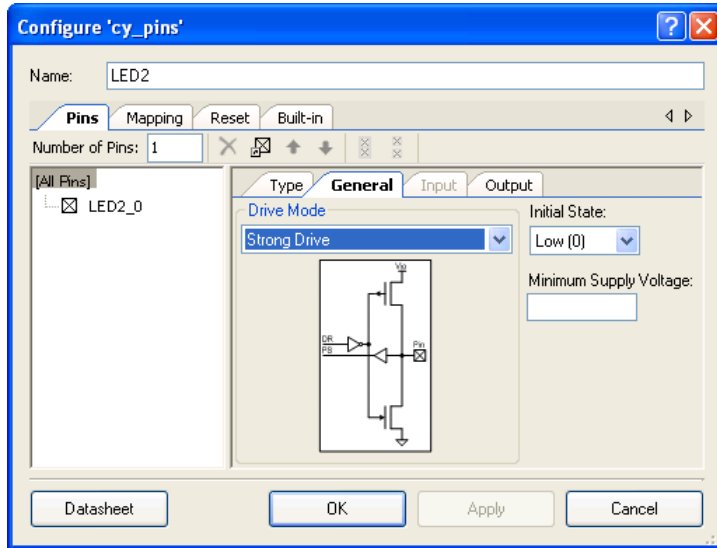

4. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.


### 3.3.1.5 Connecting the Components Together

1. Using the Wire Tool , connect **pwm** (in the PWM component) to hardware connection point of LED1.
2. Connect a Logic High component (**Component Catalog** → **Digital** → **Logic** → **Logic High**) to the **enable** on the PWM.
3. Connect a Logic Low component (**Component Catalog** → **Digital** → **Logic** → **Logic Low**) to the **reset** on the PWM.
4. Connect a Clock component (**Component Catalog** → **System** → **Clock**) to the **clock** on the PWM.
5. Double-click the **Clock\_1** component to configure.
6. Configure the clock:

#### Configure Clock Tab


- Name:** Clock\_1
  - Source:** ILO (1.000 kHz)
  - Select **Divider** and set the value as 10
  - Leave the remaining parameters as default
7. Click **Apply** to save the changes to the clock component and click **OK** to close the Clock Component Configuration window.

Figure 3-99. Clock Component Configuration

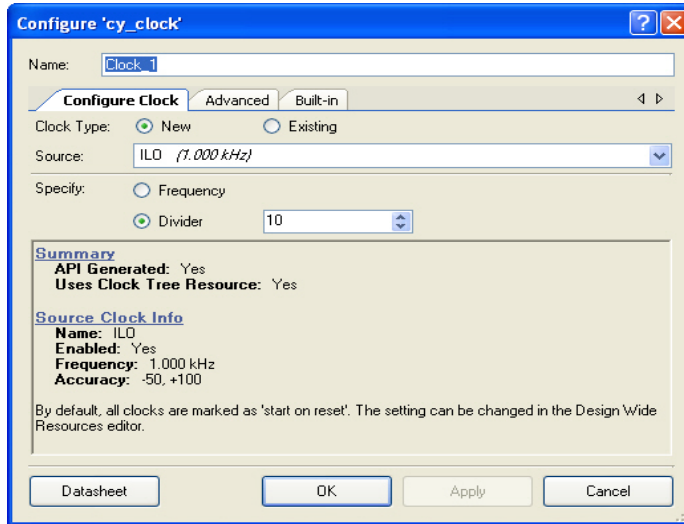

8. When complete, the schematic looks similar to [Figure 3-100](#).


Figure 3-100. Connected Components

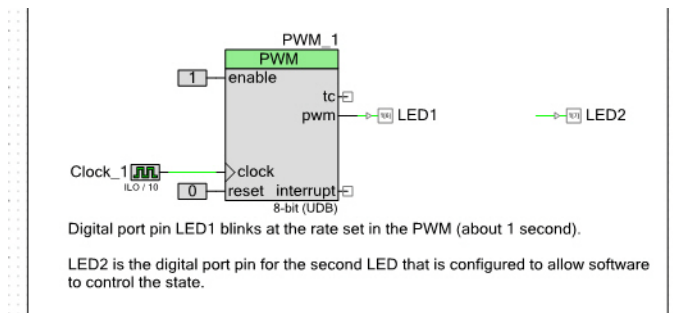

### 3.3.1.6 Configuring Pins

1. From the **Workspace Explorer**, double-click the *Ex1\_LED\_with\_PWM.cydwr* file (see [Figure 3-101](#)).
2. Click the **Pins** tab.
3. Select pin P1[6] for LED1.
4. Select pin P1[7] for LED2.

Figure 3-101. Pin Assignments

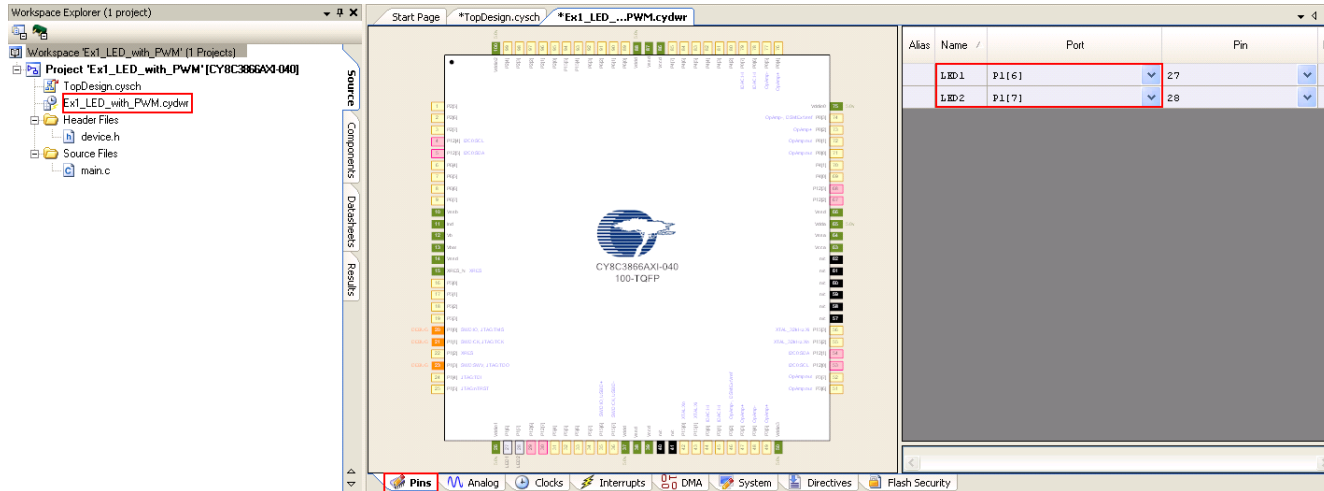

### 3.3.1.7 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C38\_main\_Ex1.C* for PSoC 3 module and *CY8C58LP\_main\_Ex1.C* for PSoC 5LP module, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

3. From the **Build** menu, select **Build Ex1\_LED\_with\_PWM**.
4. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.1.8 Configuring and Programming PSoC Development Board

1. Disconnect power to the board.
2. Configure the DVK SW3 to 3.3 V.
3. Configure the following on the PSoC development board's prototyping area using the included jumper wires:
  - P1[6] to LED1
  - P1[7] to LED2
4. Apply power to the board.
5. Use PSoC Creator as described in [Programming My First PSoC 3 Project on page 30](#) or [Programming My First PSoC 5LP Project on page 34](#) to program the device.
6. After programming the device, press the **Reset** button on the PSoC development board. The PWM causes the LED1 to blink at approximately 1 Hz due to PSoC Creator's PWM component and LED2 blinks at a faster rate using a software timing loop to toggle the LED.
7. Save and close the project.

### 3.3.2 ADC to LCD Project

This project demonstrates the Delta-Sigma ADC by measuring the voltage of the potentiometer on the board and displays the result on the character LCD of the PSoC development board.

The ADC is clocked by the internal clock of 3 MHz and the sampling rate is set to 10,000 sps. Connect the voltage potentiometer (labeled "VR" on the PSoC development board) to the ADC input (programmed to P0[7] for this example). The program reads the ADC result and prints it to the LCD.

The instructions that follow assume that you have completed My First PSoC 3/PSoC 5LP Project and therefore have a basic understanding of the PSoC Creator software environment.


This code example uses these components:


- Delta Sigma ADC (**Component Catalog** → **Analog** → **ADC** → **Delta Sigma ADC**)
- Character LCD (**Component Catalog** → **Display** → **Character LCD**)
- Analog Pin (**Component Catalog** → **Ports and Pins** → **Analog Pin**)

#### 3.3.2.1 Creating ADC to LCD Project

1. Open PSoC Creator.
2. Create a new project by clicking **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-102. Create New Project

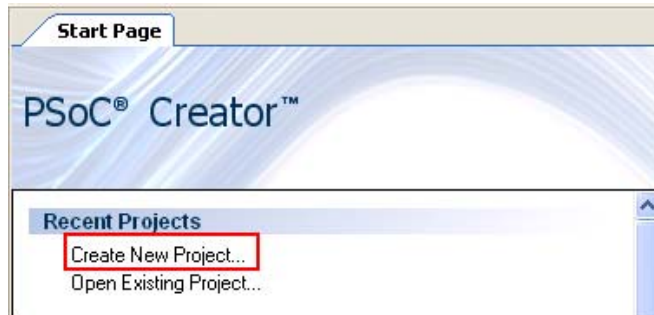


3. In the **New Project** window, select the **Empty PSoC 3 Design** template for a PSoC 3 design, or **Empty PSoC 5LP Design** template for a PSoC 5LP design and name the project **Ex2\_ADC\_to\_LCD**.
4. In the **Location** field, type the path where you want to save the project, or click  and navigate to the appropriate directory and click **OK**.
5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.

#### 3.3.2.2 Placing and Configuring Delta Sigma ADC

1. Drag and drop the Delta Sigma ADC component (**Component Catalog** → **Analog** → **ADC** → **Delta Sigma ADC**).
2. Double-click the **ADC\_DeISig\_1** component in the schematic to open the configuration window.
3. Configure the Delta Sigma ADC as follows:
  - Configure Tab**
    - **Name:** ADC\_DeISig\_1
    - **Conversion Mode:** 2-Continuous
    - **Resolution (bits):** 8


- ❑ **Conversion rate (SPS):** 10000
  - ❑ **Input Range:** Vssa to Vdda
  - ❑ **Buffer Gain:** 1
- Common Tab**
- ❑ **Number of Configurations:** 1
  - ❑ **Input Mode:** Single ended

Figure 3-103. Common Tab

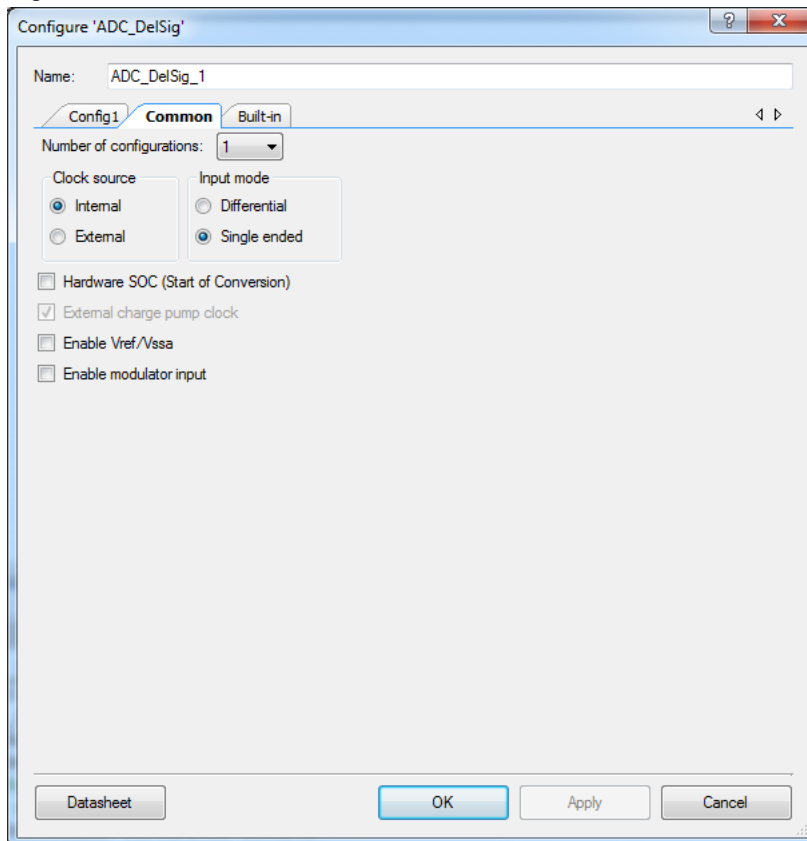

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-104. ADC Component Configuration

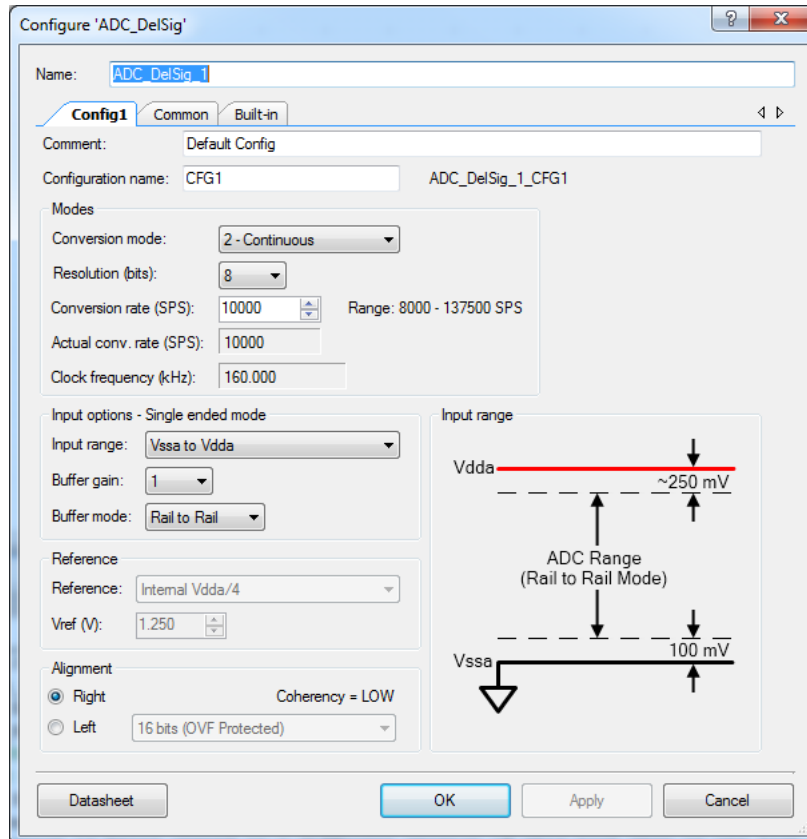

4. Click **Apply** to save the changes to the ADC\_DeISig component and click **OK** to close the ADC\_DeISig configuration window.

### 3.3.2.3 Placing and Configuring an Analog Pin


1. Drag and drop the analog pin component (**Component Catalog** → **Ports and Pins** → **Analog Pin**).
2. Double-click on the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the analog pin as follows:

#### Type Tab

- Name:** POT
- Select **Analog** check box only

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.


Figure 3-105. Analog Pin Component Configuration

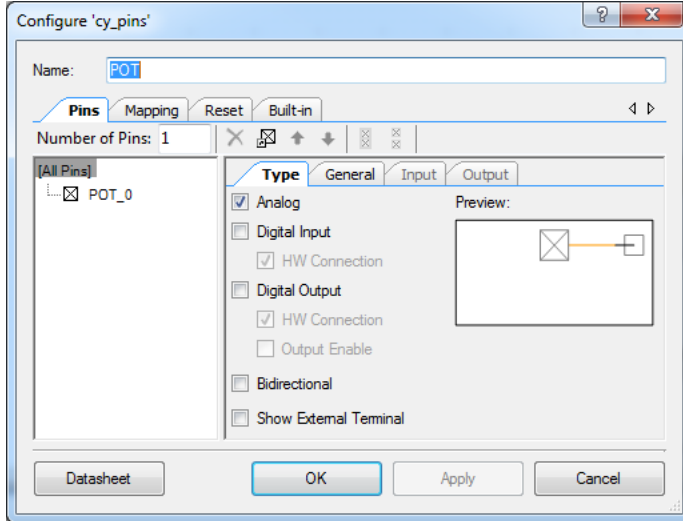

#### General Tab

- **Drive Mode:** High Impedance Analog
- Leave the remaining parameters as default

Figure 3-106. Select High Impedance Analog Drive Mode

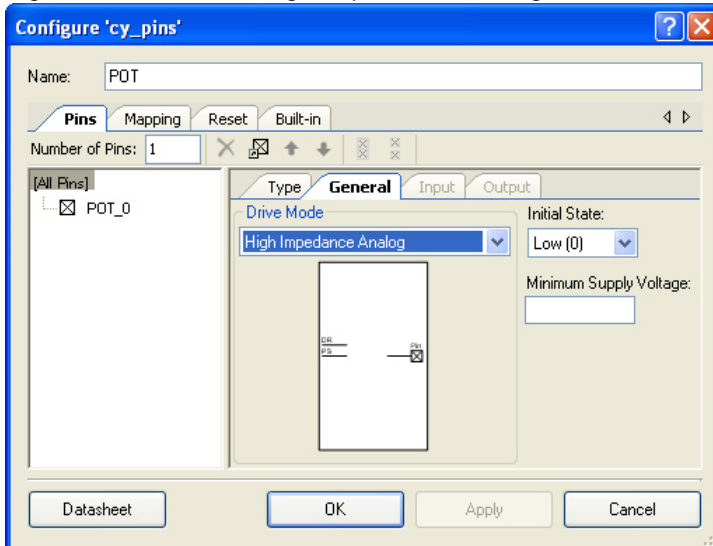

4. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.


#### 3.3.2.4 Placing and Configuring Character LCD

1. Drag and drop the character LCD component (**Component Catalog** → **Display** → **Character LCD**)
2. Double-click the **LCD\_Char\_1** component in the schematic to open the configuration window.
3. Configure the character LCD:
  - **Name:** LCD\_Char\_1

- ❑ **LCD Custom Character Set:** None
- ❑ **Include ASCII to Number Conversion Routines:** check box

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-107. Configure LCD\_Char\_1

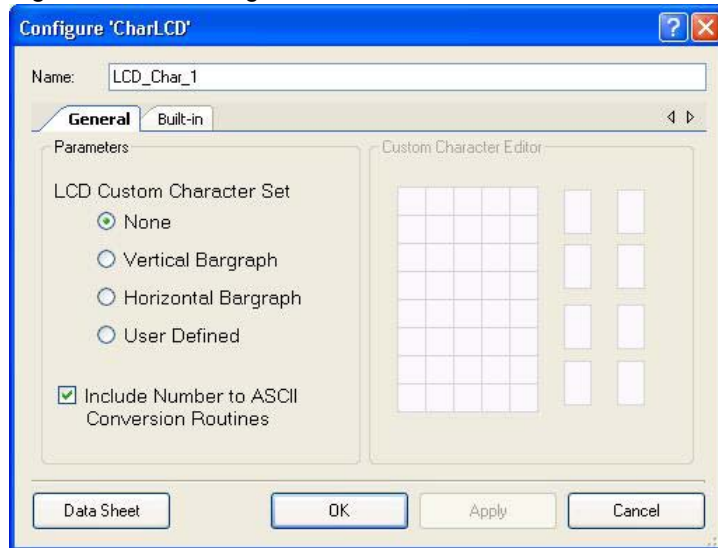


4. Click **Apply** to save the changes to the character LCD component and click **OK** to close the character LCD configuration window.

### 3.3.2.5 Connecting the Components Together

1. Using the Wire Tool , connect **POT** to **ADC\_DelSig (ADC\_DelSig\_1)**.
2. When complete, the schematic looks similar to [Figure 3-108](#).


Figure 3-108. Connected Components

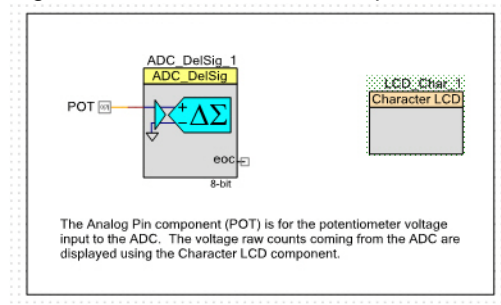

### 3.3.2.6 Configuring Pins

1. From the **Workspace Explorer**, double-click the *Ex2\_ADC\_to\_LCD.cydwr* file.
2. Click the **Pins** tab.
3. Select pins P2[6:0] for LCD\_Char\_1.
4. Select pin P0[7] for POT.

Figure 3-109. Pins Assignments

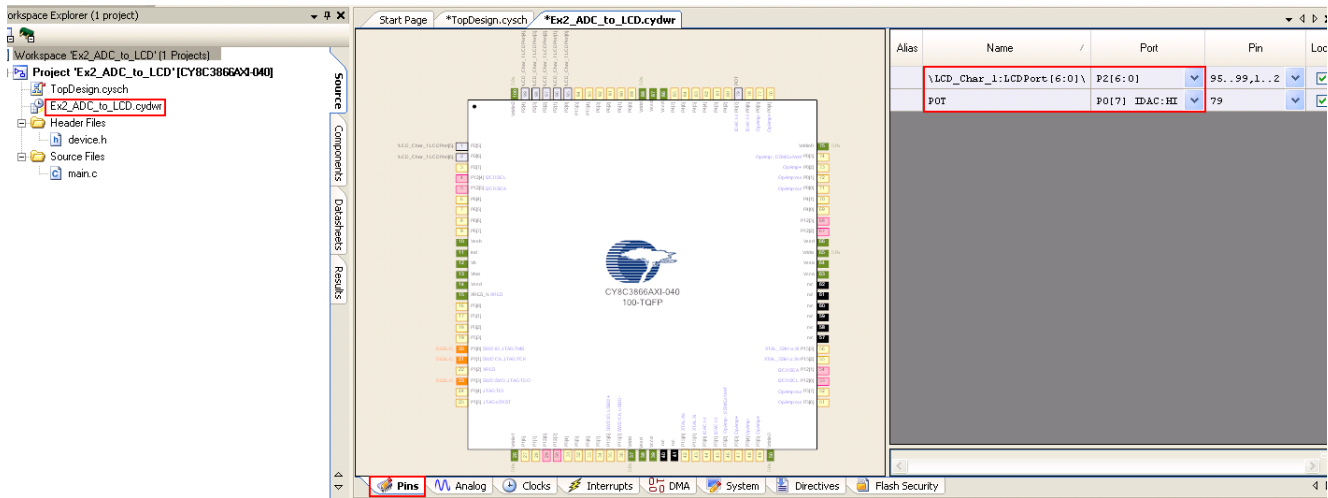


### 3.3.2.7 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C38\_main\_Ex2.C* for PSoC 3 module and *CY8C58LP\_main\_Ex2.C* for PSoC 5LP module, which is available within the attachments feature of this PDF document.  
**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.
3. From the **Build** menu, select **Build Ex2\_ADC\_to\_LCD**. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.2.8 Configuring and Programming the PSoC Development Board

1. Disconnect power to the board.
2. Configure the DVK SW3 to 3.3 V.

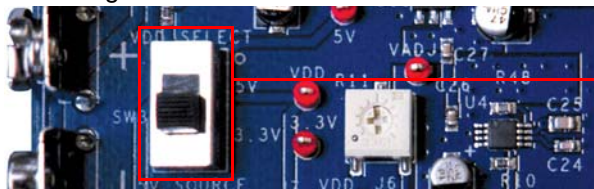

Move VDD SELECT Switch to 3.3 V

3. Using the jumper wires included, configure the PSoC development board's prototyping.
  - P0[7] to VR
4. Verify that VR\_PWR (J11) is jumpered to **ON**.
5. Apply power to the board.
6. Use PSoC Creator as described in [Programming My First PSoC 3 Project on page 30](#) or [Programming My First PSoC 5LP Project on page 34](#) to program the device.
7. After programming the device, press **Reset** on the PSoC development board; the ADC output is displayed on the LCD. Turning the potentiometer results in the LCD value changing.  
**Note** The ADC output values may not reach full range due to potentiometer and ADC limitations. ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.
8. Save and close the project.

### 3.3.3 ADC to UART with DAC

This project demonstrates sine wave generation by using an 8-bit DAC and DMA. The sine wave period is based on the current value of the ADC value of the potentiometer.

The firmware reads the voltage output by the DVK board potentiometer and displays the raw counts on the DVK board character LCD display similar to that shown in the previous project. An 8-bit DAC outputs a table generated sine wave to an LED using DMA at a frequency proportional to the ADC count. A 9600 Baud 8N1 UART outputs the current ADC count as ASCII formatted into a hexadecimal number.

The following instructions assume that you have completed My First PSoC Project and ADC to LCD Project and therefore have a basic understanding of the PSoC Creator software environment.


This code example uses the following components:


- Delta Sigma ADC (**Component Catalog** → **Analog** → **ADC** → **Delta Sigma ADC**)
- Voltage DAC (**Component Catalog** → **Analog** → **DAC** → **Voltage DAC**)
- Opamp (**Component Catalog** → **Analog** → **Amplifiers** → **Opamp**)
- DMA (**Component Catalog** → **System** → **DMA**)
- Character LCD (**Component Catalog** → **Display** → **Character LCD**)
- UART (**Component Catalog** → **Communications** → **UART**)
- Analog Pin (**Component Catalog** → **Ports and Pins** → **Analog Pin**)
- Digital Output Pin (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**)
- Clock (**Component Catalog** → **System** → **Clock**)
- Logic Low (**Component Catalog** → **Digital** → **Logic** → **Logic Low**)

#### 3.3.3.1 Creating ADC to UART with DAC Project

1. Open PSoC Creator.
2. Create a new project by clicking **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-110. Create New Project

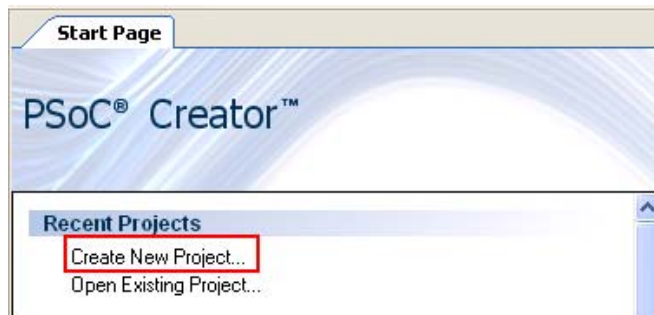

3. In the **New Project** window, select the **Empty PSoC 3 Design** template for a PSoC 3 design, or **Empty PSoC 5LP Design** template for a PSoC 5LP design and name the project **Ex3\_ADC\_to\_UART\_with\_DAC**.
4. In the **Location** field, type the path where you want to save the project, or click  and navigate to the appropriate directory and click **OK**.
5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.

### 3.3.3.2 Placing and Configuring Delta Sigma ADC

1. Drag and drop the Delta Sigma ADC component (**Component Catalog** → **Analog** → **ADC** → **Delta Sigma ADC**)
2. Double-click the **ADC\_DelSig\_1** component in the schematic to open the configuration window.
3. Configure the Delta Sigma ADC as follows:


#### Configure Tab

- Name:** ADC\_DelSig\_1
- Conversion Mode:** 2-Continuous
- Resolution (bits):** 8
- Conversion rate (SPS):** 10000
- Input Range:** Vssa to Vdda
- Buffer Gain:** 1

#### Common Tab


- Number of Configurations:** 1
- Input Mode:** Single ended

Figure 3-111. Common Tab

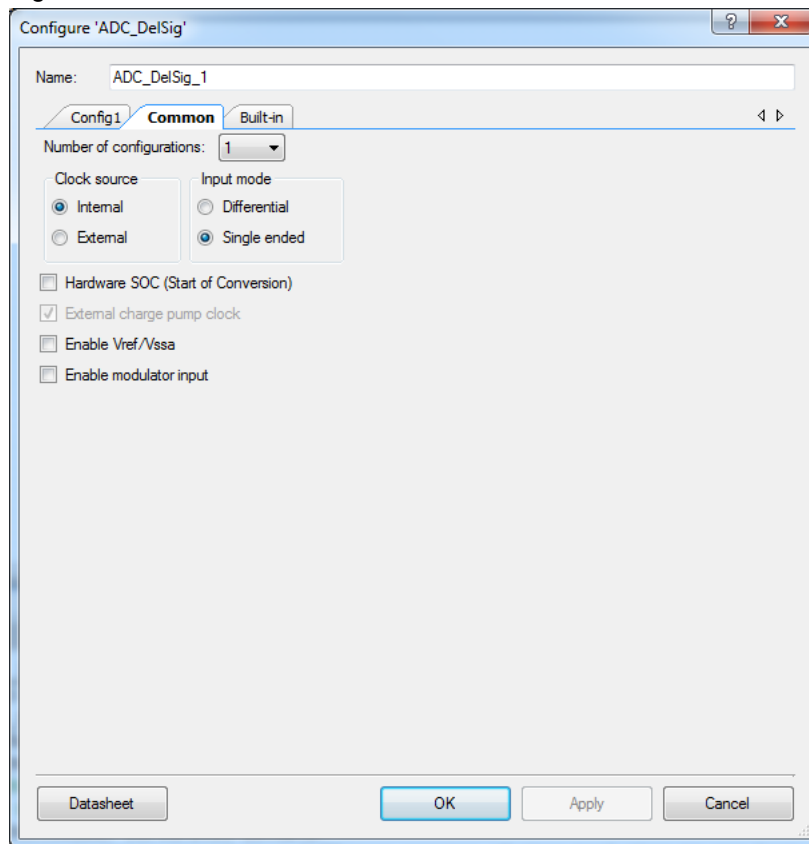

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-112. Delta Sigma ADC Component Configuration

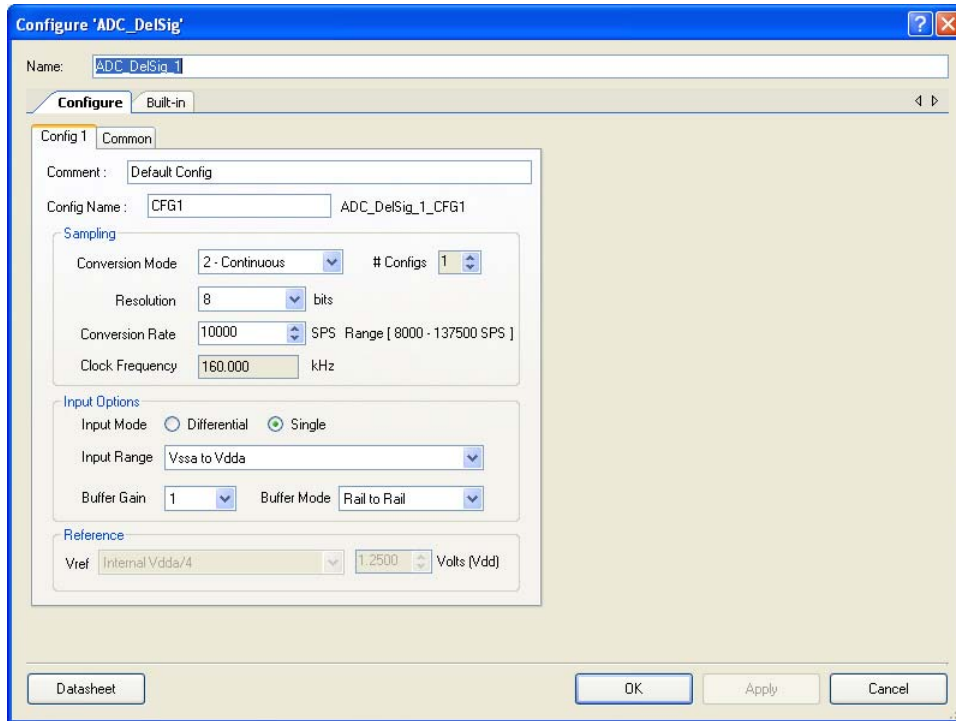

4. Click **Apply** to save the changes to the ADC\_DeISig component and click **OK** to close the ADC\_DeISig configuration window.


### 3.3.3.3 *Placing and Configuring an Analog Pin*

1. Drag and drop the Analog Pin component (**Component Catalog** → **Ports and Pins** → **Analog Pin**)
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the analog pin:

#### **Type Tab**

- Name:** POT
- Select **Analog** check box only

Figure 3-113. POT Component Configuration

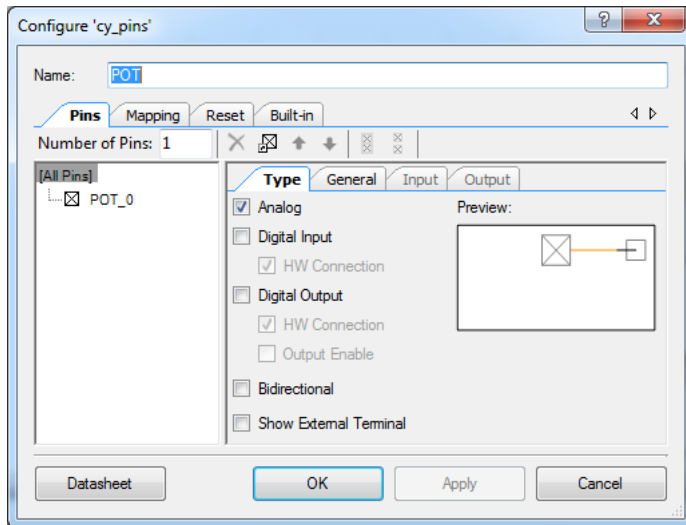

#### General Tab

- Drive Mode:** High Impedance Analog
- Leave the remaining parameters as default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.


4. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.

#### 3.3.3.4 *Placing and Configuring Character LCD*

1. Drag and drop the character LCD component (**Component Catalog** → **Display** → **Character LCD**)
2. Double-click the **LCD\_Char\_1** component in the schematic to open the configuration window.
3. Configure the character LCD:
  - Name:** LCD\_Char\_1
  - LCD Custom Character Set:** None
  - Include ASCII to Number Conversion Routines:** check box

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-114. Character LCD Component Configuration

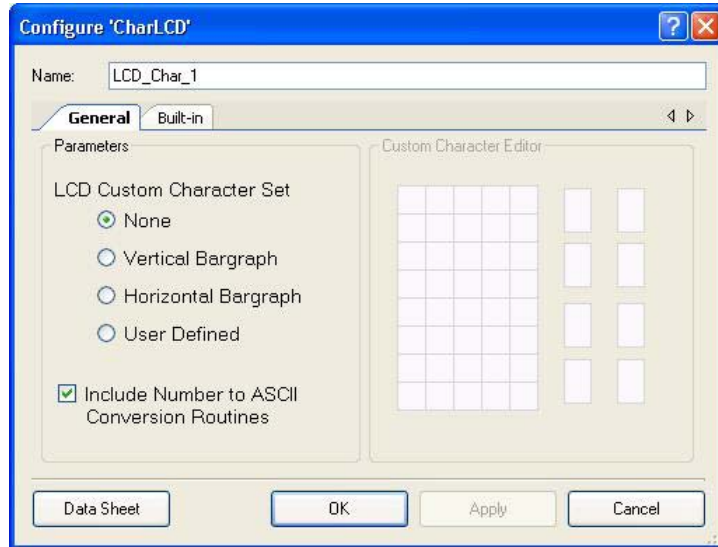

4. Click **Apply** to save the changes to the character LCD component and click **OK** to close the character LCD configuration window.

### 3.3.3.5 *Placing and Configuring Voltage DAC*


1. Drag and drop the Voltage DAC component (**Component Catalog** → **Analog** → **DAC** → **Voltage DAC**)
2. Double-click the **VDAC8\_1** component in the schematic to open the configuration window.
3. Configure the VDAC:

#### **Basic Tab**

- ❑ **Name:** VDAC8\_1
- ❑ **Range:** 0 - 4.080V (16mV/bit)
- ❑ **Speed:** Slow Speed
- ❑ **mV:** 1600
- ❑ **8 bit hex:** 64
- ❑ **Data Source:** CPU or DMA (Data Bus)
- ❑ **Strobe Mode:** Register Write

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-115. Voltage DAC Component Configuration

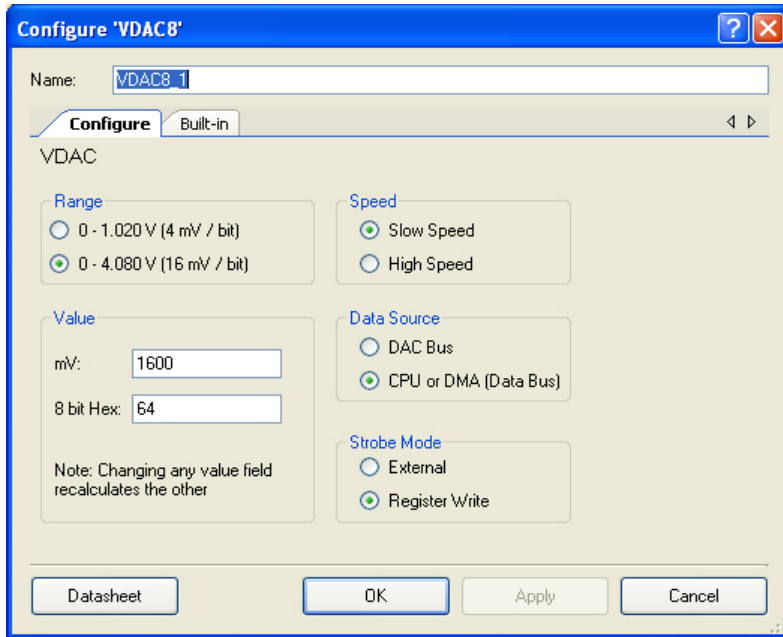

4. Click **Apply** to save the changes to the VDAC8 component and click OK to close the VDAC8 configuration window.

### 3.3.3.6 *Placing and Configuring Opamp*


1. Drag and drop the Opamp component (**Component Catalog** → **Analog** → **Amplifiers** → **Opamp**)
2. Double-click the **Opamp\_1** component in the schematic to open the configuration window.
3. Configure the Opamp:

#### **Configure** Tab

- **Name:** Opamp\_1
- **Mode:** Follower
- **Power:** High Power

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-116. Opamp Component Configuration

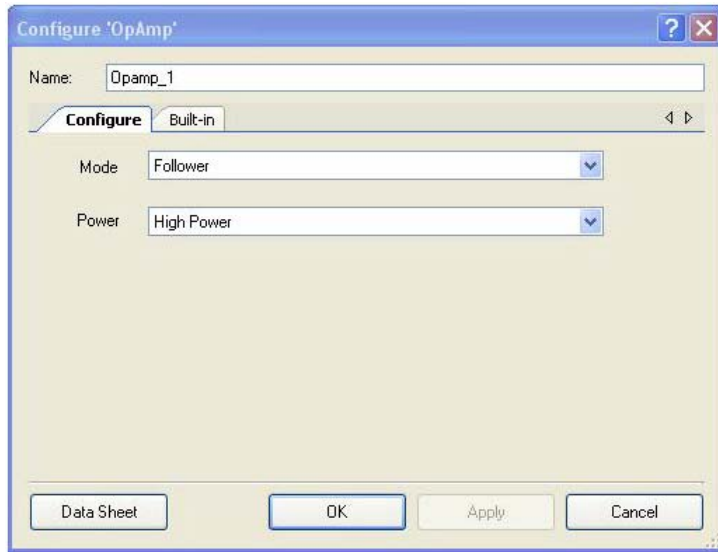

4. Click **Apply** to save the changes to the opamp component and click **OK** to close the OpAmp configuration window.
5. Double-click the **Vout\_1** analog pin of the OpAmp and rename as **LED**.
6. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.


### 3.3.3.7 Placing and Configuring UART

1. Drag and drop the UART component (**Component Catalog** → **Communications** → **UART**)
2. Double-click the **UART\_1** component in the schematic to open the configuration window.
3. Configure the UART:

#### Advanced Tab

- Clock:** External

Figure 3-117. Advanced Tab

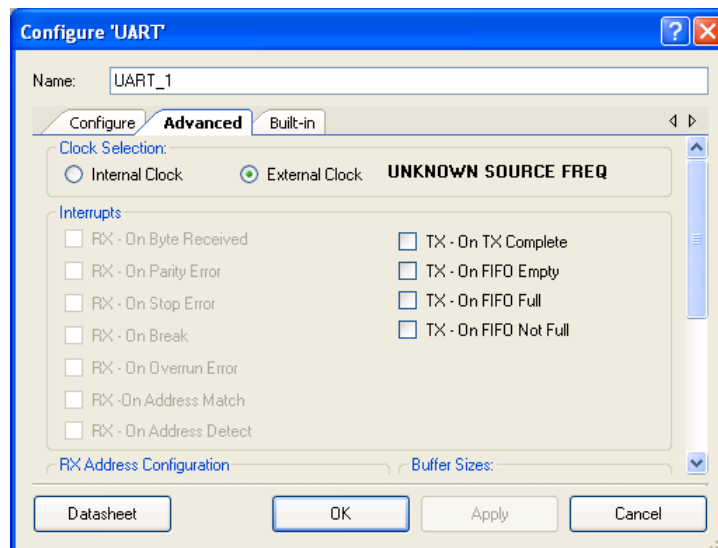


### Configure Tab

- **Name:** UART\_1
- **Mode:** TxOnly
- Leave the remaining parameters to default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-118. UART Component Configuration

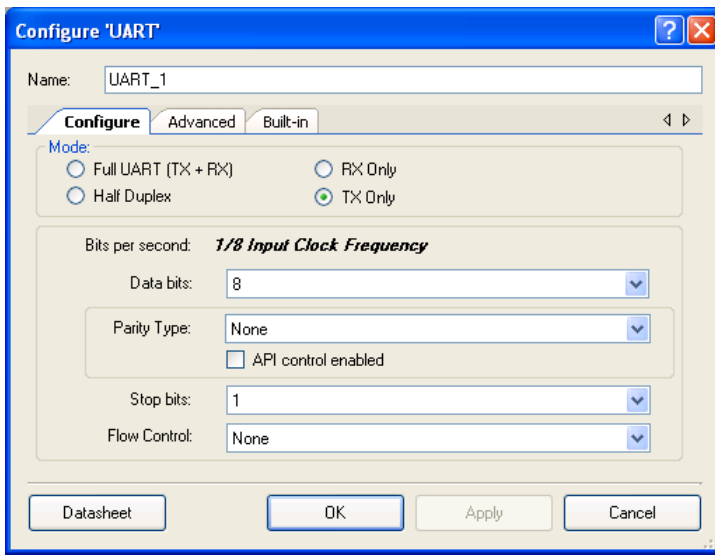


4. Click **Apply** to save the changes to the UART component and click **OK** to close the UART configuration window.
5. Right-click the **Rx\_1** pin of the UART and click **Delete** because this code example does not require UART receiving.
6. Double-click the **Tx\_1** pin of the UART and rename as **TX\_OUT**.
7. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.

#### 3.3.3.8 Placing and Configuring Clock for UART

1. Connect a clock component (**Component Catalog** → **System** → **Clock**) to the UART clock.
2. Double-click the **Clock** component.
3. Configure the clock:
  - **Name:** Clock\_2
  - **Source:** MASTER\_CLK (24.000 MHz)
  - **Desired Frequency:** 76.9 kHz
  - Leave the remaining parameters at default.

**Note** The desired frequency of the clock is 76.9 kHz because this value should be eight times the required baud rate:  $76900/8 = 9612.5$ , which is approximately 9600 (required baud rate).

Figure 3-119. Configure UART Clock

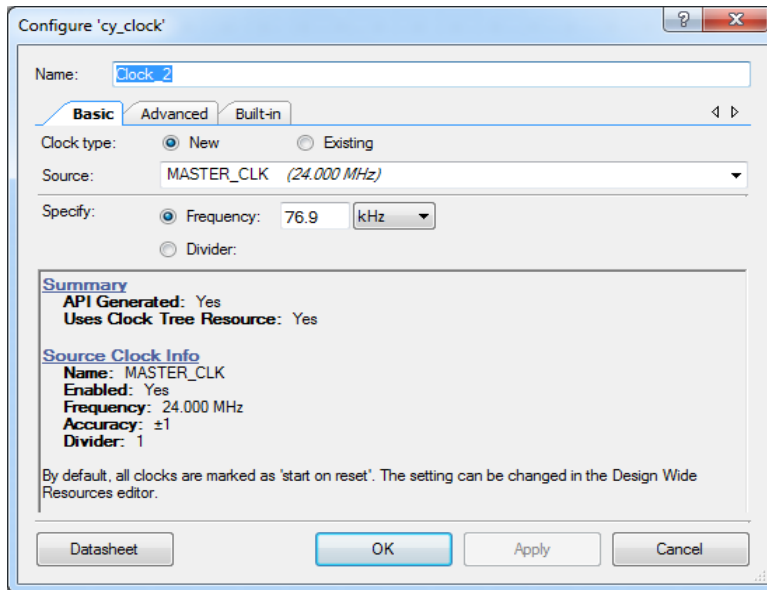

4. Click **Apply** to save the changes to the clock component and click OK to close the clock configuration window.

Figure 3-120. UART Configure Window After Assigning Clock Source - Configure Tab


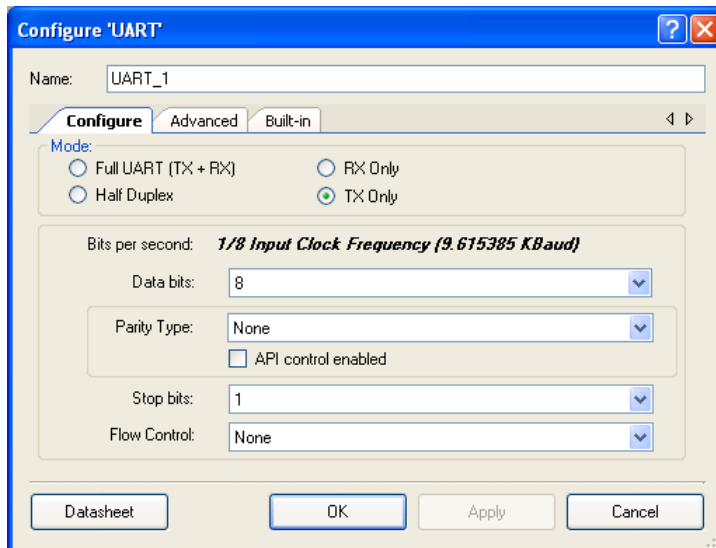


Figure 3-121. UART Configure Window After Assigning Clock Source - Advanced Tab

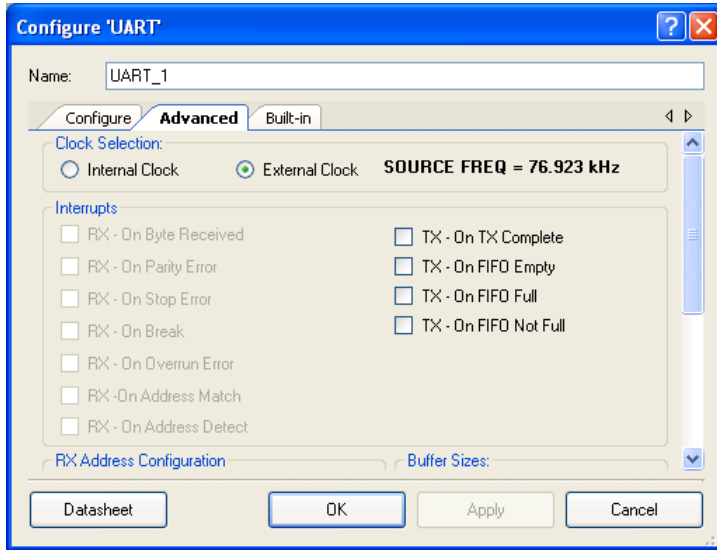

### 3.3.3.9 Placing and Configuring DMA


1. Drag and drop the DMA component (**Component Catalog** → **System** → **DMA**)
2. Double-click the **DMA\_1** component in the schematic to open the configuration window.
3. Configure the DMA:

#### Basic Tab

- Name:** DMA\_1
- Hardware Request:** Rising Edge
- Leave the remaining parameters as default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-122. DMA Component Configuration

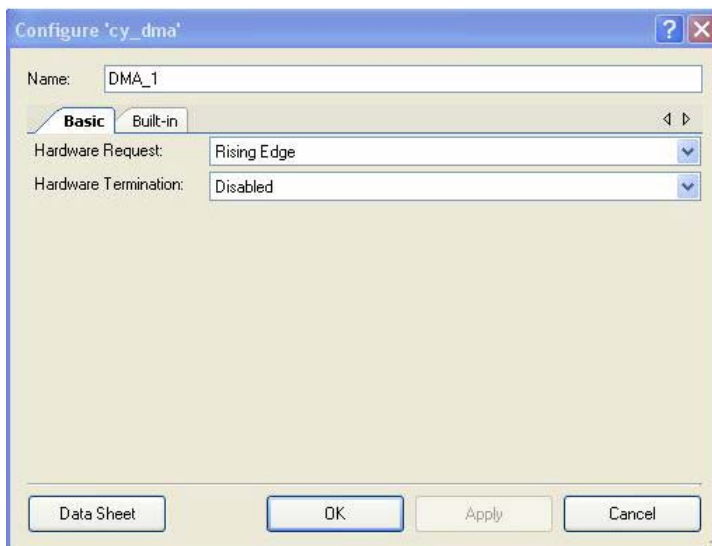

- Click **Apply** to save the changes to the DMA component and click **OK** to close the DMA configuration window.


### 3.3.3.10 Connecting the Components Together

- Connect a Logic Low component (**Component Catalog** → **Digital** → **Logic** → **Logic Low**) to the **reset** of the UART
- Connect a Clock component (**Component Catalog** → **System** → **Clock**) to the **drq** of the DMA.
- Double-click the **Clock** component to configure.
- Configure the clock:

#### Configure Clock Tab

- Name:** Clock\_1
  - Source:** <Auto>
  - Desired Frequency:** 3 MHz
  - Leave the remaining parameters set to their default values
- Click **Apply** to save the changes to the clock component and click **OK** to close the clock configuration window.

Figure 3-123. Clock Component Configuration

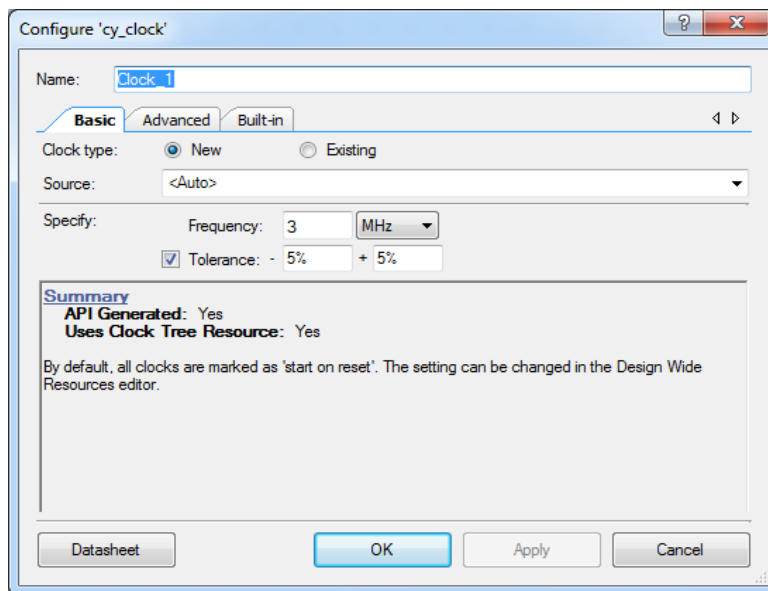



- Using the Wire Tool , connect **VDAC8 (VDAC8\_1)** to **Opamp (Opamp\_1)**.
- Using the Wire Tool , connect **POT** to **ADC\_DeISig (ADC\_DeISig\_1)**.
- When complete, the schematic looks similar to [Figure 3-124](#).


Figure 3-124. Connected Components

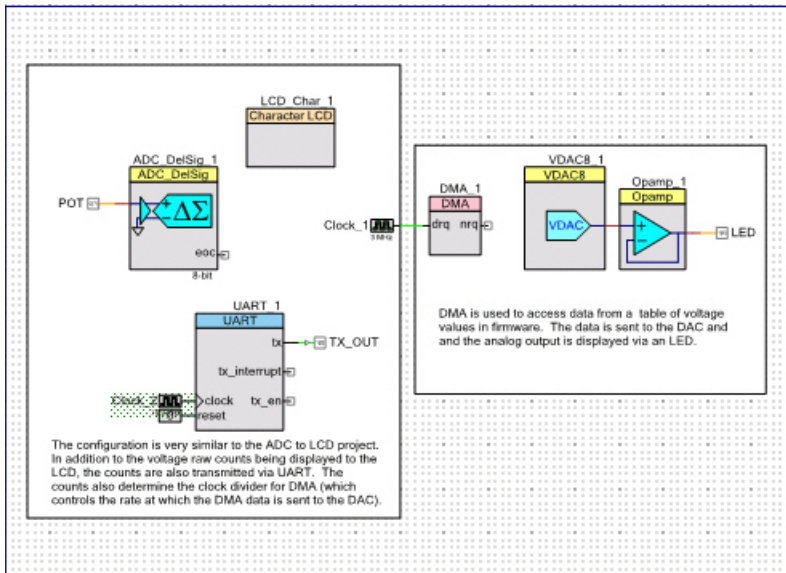

### 3.3.3.11 Configuring Pins

1. From the **Workspace Explorer**, double-click the *Ex3\_ADC\_to\_UART\_with\_DAC.cydwr* file.
2. Click the **Pins** tab.
3. Select pins P2[6:0] for LCD\_Char\_1
4. Select pin P0[7] for POT
5. Select pin P1[6] for LED
6. Select pin P1[2] for TX\_OUT

Figure 3-125. Pin Assignments

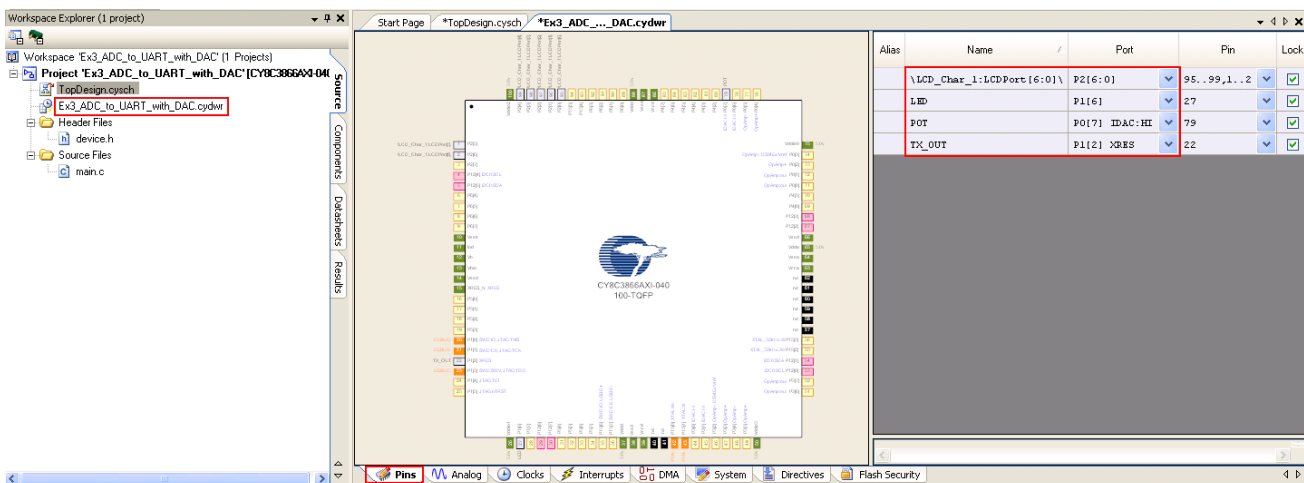

### 3.3.3.12 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C38\_main\_Ex3.C* for PSoC 3 module and *CY8C58LP\_main\_Ex3.C* for PSoC 5LP module, which is available within the attachments feature of this PDF document.


**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

3. From the **Build** menu, select **Build Ex3\_ADC\_to\_UART\_with\_DAC**. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.3.13 Configuring and Programming the PSoC Development Board

1. Disconnect power to the board.
2. Configure the DVK SW3 to 5 V.
3. Using the jumper wires included, configure the PSoC development board's prototyping area to:
  - P0[7] to VR
  - P1[2] to TX
  - P1[6] to LED1
4. Verify that VR\_PWR (J11) is jumpered to **ON**.
5. Verify that RS232\_PWR (J10) is jumpered to **ON**.
6. Connect a serial cable from the PSoC development board to a PC.
7. Apply power to the board.
8. Install a terminal application such as TeraTerm or HyperTerminal with these setup parameters:
  - Baud Rate:** 9600
  - Data:** 8-bit
  - Parity:** none
  - Stop:** 1-bit
  - Flow Control:** none

Figure 3-126. HyperTerminal Settings

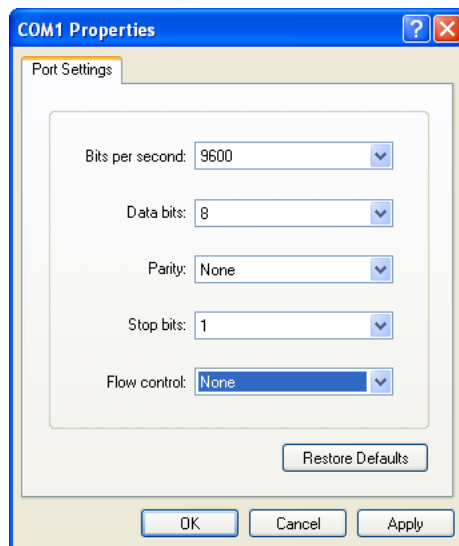

9. Use PSoC Creator as described in [Programming My First PSoC 3 Project on page 30](#) or [Programming My First PSoC 5LP Project on page 34](#) to program the device.
10. After programming the device, press the **Reset** button on the PSoC development board to see the output of the ADC displayed on the LCD and in the terminal application. LED1 is a sine wave output whose period is based on the ADC. Turning the potentiometer results in the LCD and observed terminal value change.
 

**Note** ADC values may fluctuate several counts due to system noise, and if the potentiometer voltage is at the edge of an ADC count.
11. Save and close the project.


### 3.3.4 USB HID


This project demonstrates a simple HID keyboard. The firmware begins enabling global interrupts, setting up the button (SW), and initializing USB for 3 V operation. The firmware, after allowing the HID device to enumerate, continuously checks for a button press to see if it needs to send the keyboard key sequences for the Cypress website. When you press the button, LED1 also toggles.

#### 3.3.4.1 Creating USB HID Project

1. Open PSoC Creator.
2. Create a new project by clicking on **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-127. Create New Project

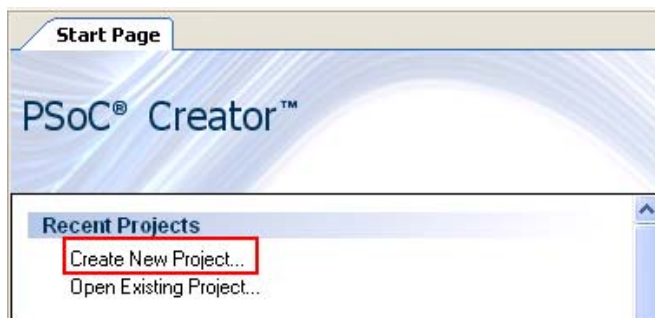

3. In the **New Project** window, select the **Empty PSoC 3 Design** template for a PSoC 3 design, or **Empty PSoC 5LP Design** template for a PSoC 5LP design and name the project **Ex4\_USB\_HID**.
4. In the **Location** field, type the path where you want to save the project, or click  and navigate to the appropriate directory and click **OK**.
5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.

#### 3.3.4.2 Placing and Configuring USBFS


1. Drag and drop a **USBFS** component from the **Components Catalog** → **Communication** → **USBFS** to the workspace.

2. Double-click the **USBFS\_1** component.

**Note** The Output window shows two errors on adding the USBFS component because the USBFS clock is disabled by default. The errors disappear after configuring the clocks, as mentioned in [3.3.4.6 Configuring Clocks for CY8C58LP Family Processor Module](#).


3. Select the **HID Descriptor** tab.

Figure 3-128. USBFS Component Configuration

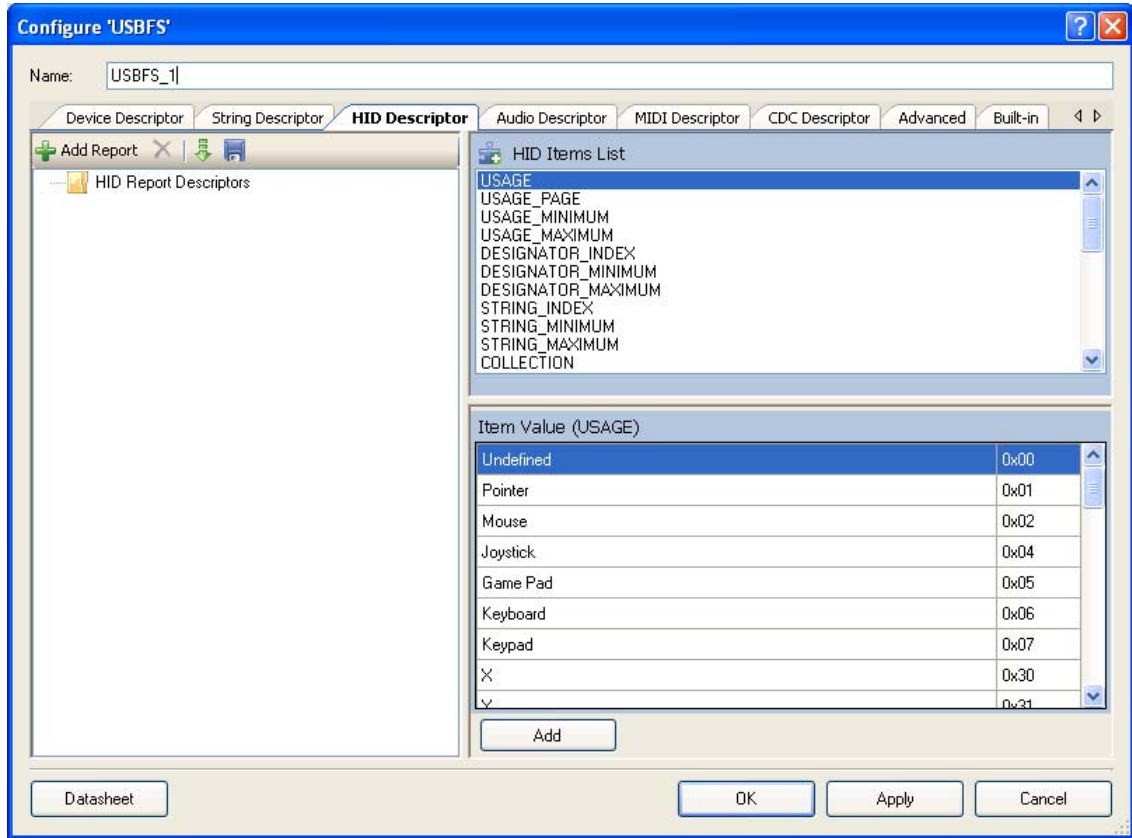


4. Click  to import a report and select **Keyboard** to import the HID descriptor for the keyboard.

Figure 3-129. USB Template

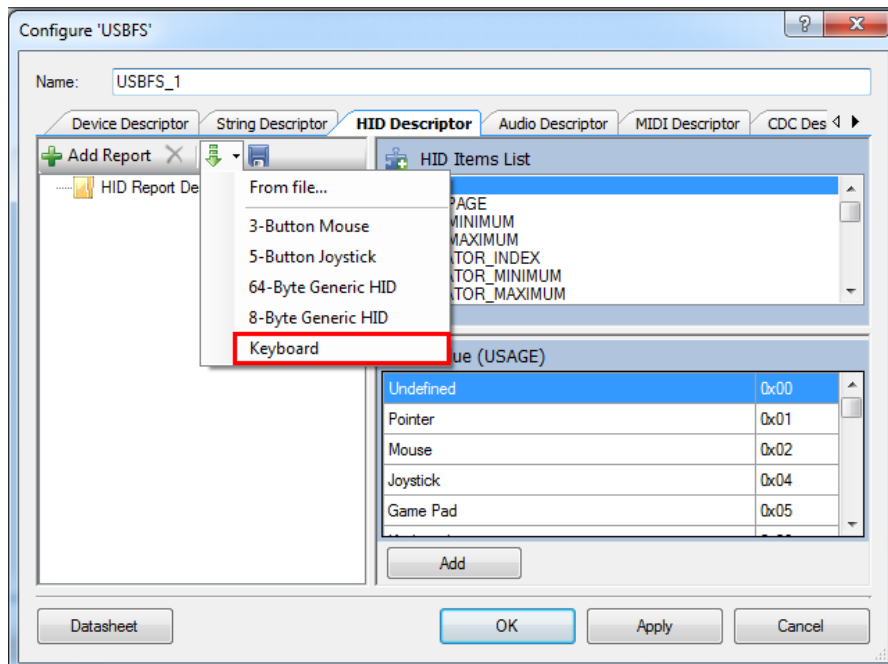


**Note** The XML files are available at <installed directory>\Cypress\PSoC Creator\<version>\PSoC Creator\psoc\content\CyComponentLibrary\CyComponentLibrary.cylib\USBFS\_vN\_nn\Custom\template where N and nn represent the version of USBFS component. Locate and select the latest version of the USBFS component.

Figure 3-130. HID Descriptor Configuration

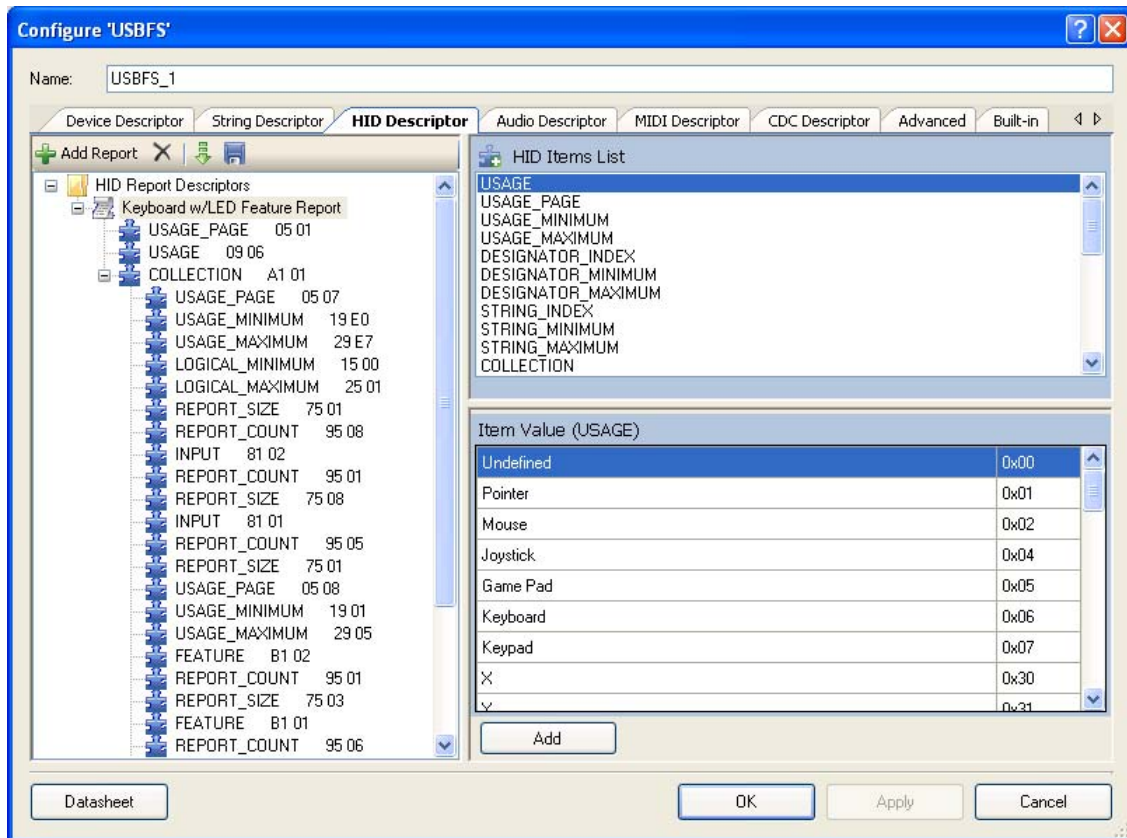


5. Select the **String Descriptor** tab.

Figure 3-131. String Descriptor Configuration

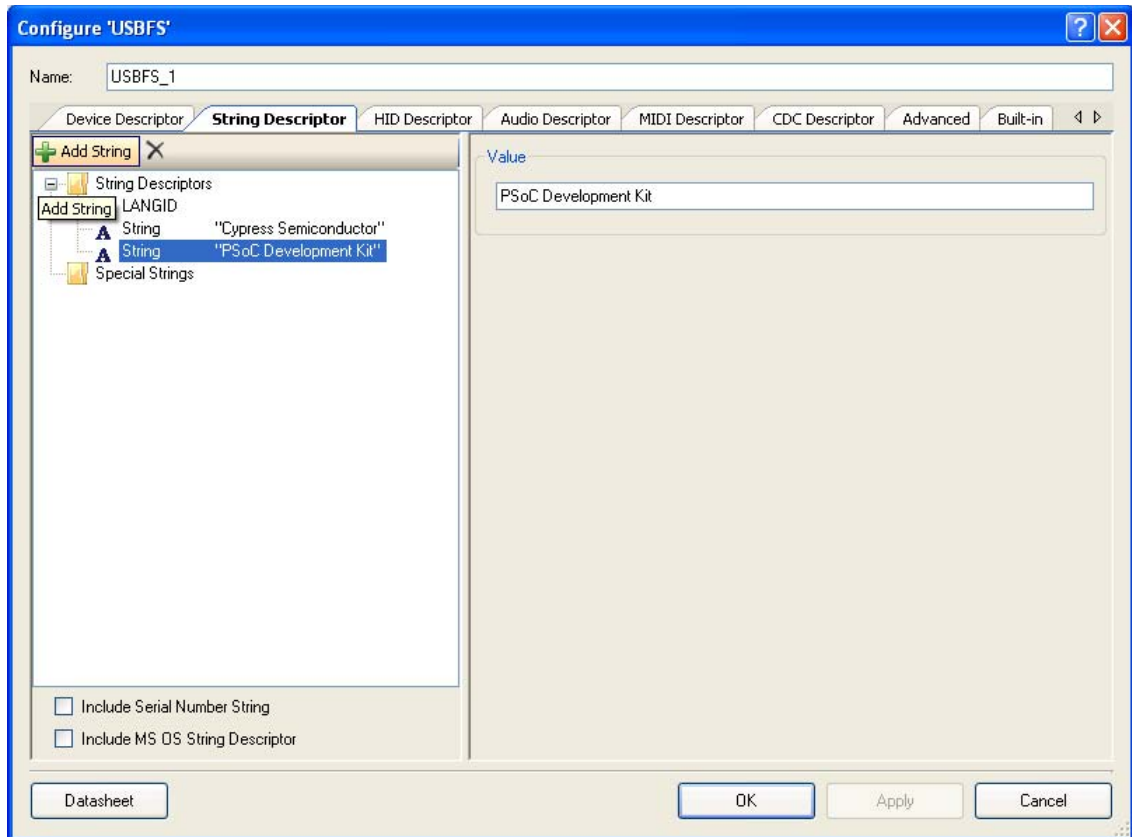


6. Select **String Descriptors** in the left window.
7. Click **Add String**.
8. Click **Add String** a second time to add a total of two strings.
9. Click the **String** that shows up at the top in the left window.
10. Type **Cypress Semiconductor** in the **Value** field.
11. Click the **String** that shows up at the bottom in the left window.
12. Type **PSoC Development Kit** in the **Value** field.
13. Select the **Device Descriptor** tab.
14. Select **Device Descriptor**
15. Set the **Product ID** to **F11E**.
16. Set the **Manufacturing String** to **Cypress Semiconductor**.
17. Set the **Product String** to **PSoC Development Kit**.

Figure 3-132. Device Descriptor Configuration

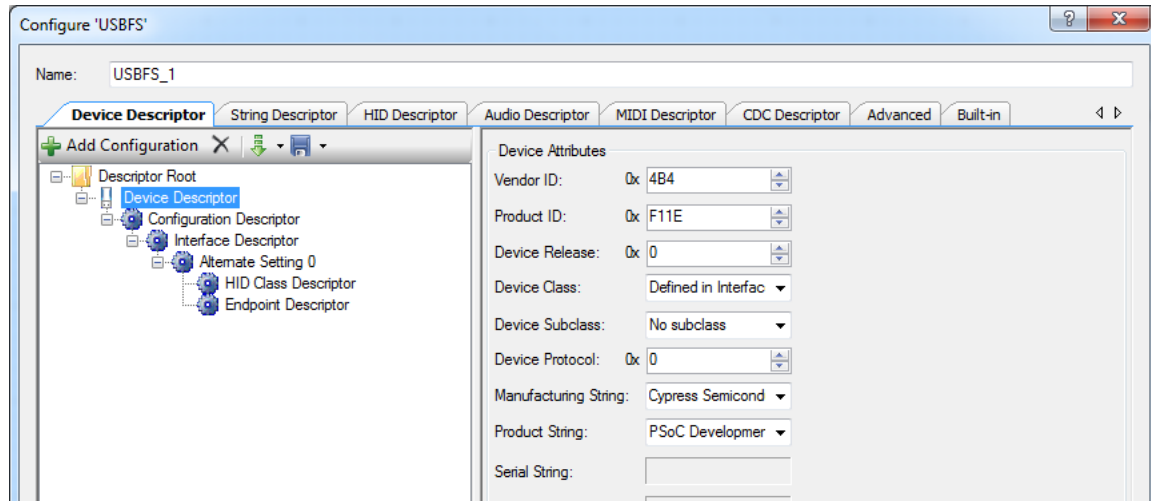


18. Select **Configuration Descriptor**.
19. Set **Device Power** to **Self Powered**.
20. Set **Max Power (mA)** to **100**.

Figure 3-133. Configuration Descriptor Configuration

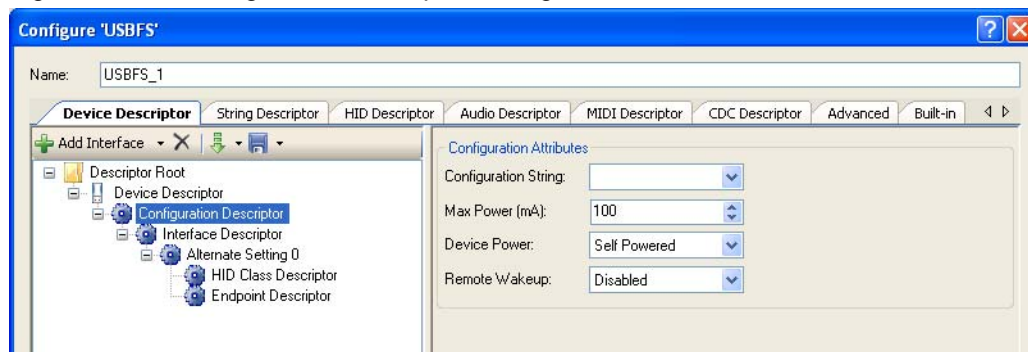


21. Select **Alternate Setting 0**.
22. Set **Class** to **HID**.

Figure 3-134. Interface Descriptor Configuration

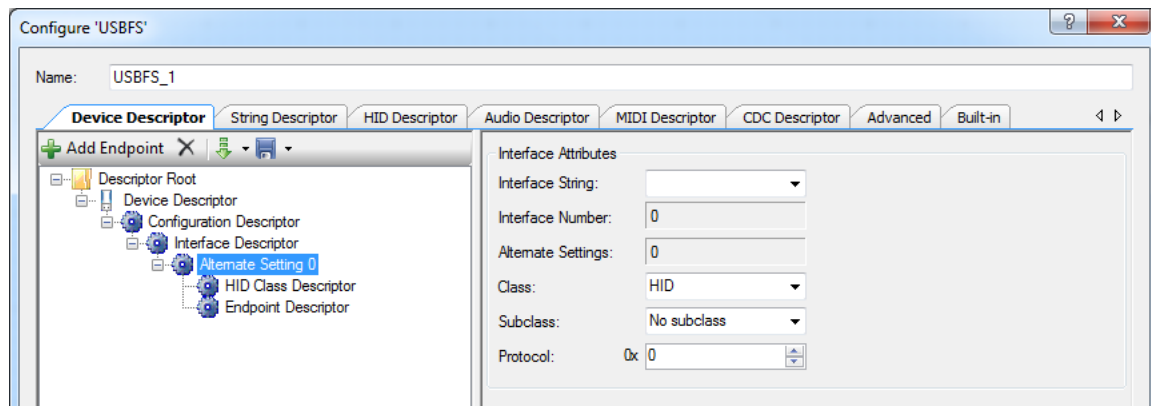


23. Select **HID Class Descriptor**.
24. Set **HID Report** to **Keyboard w/LED Feature Report**.

Figure 3-135. HID Class Attributes

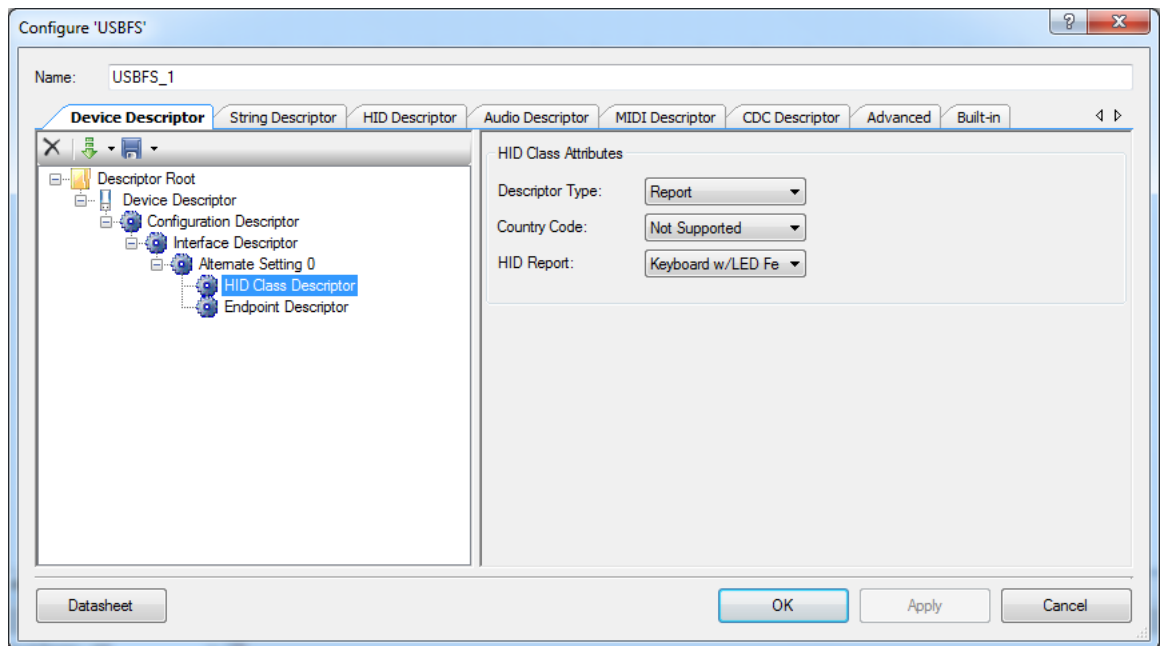

25. Select **Endpoint Descriptor**.
26. Set **Direction** to **IN** and **Transfer Type** to **INT**.

Figure 3-136. Endpoint Attributes

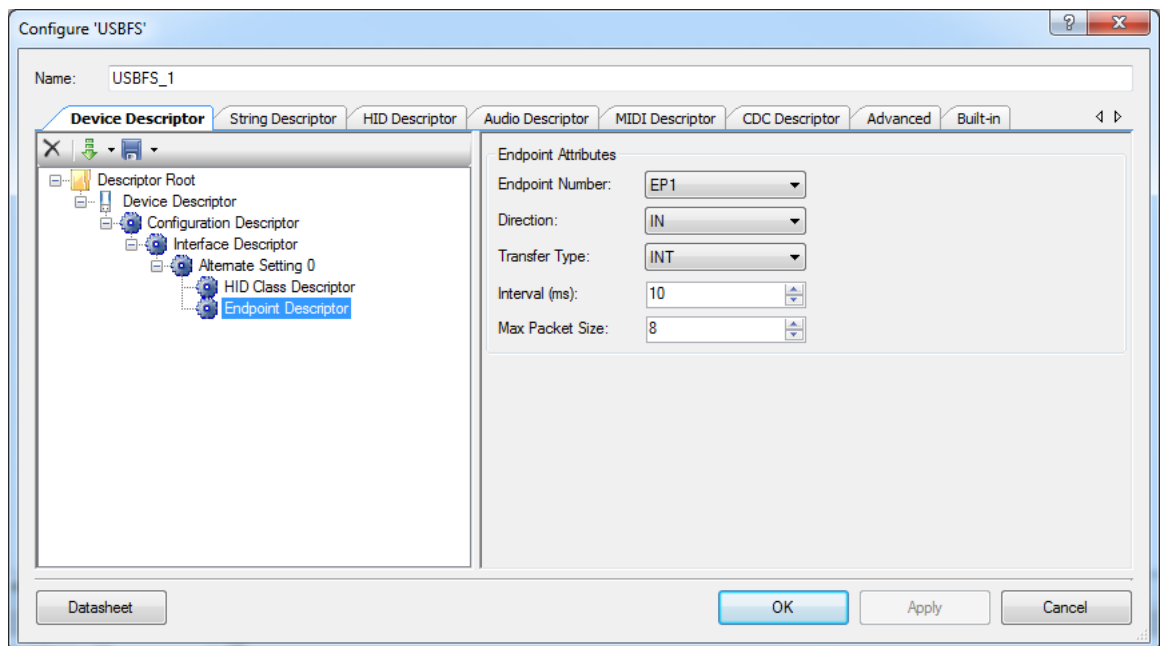

27. Click **Apply** to save the changes to the USBFS component and click **OK** to close the USBFS configuration window.


### 3.3.4.3 Placing and Configuring Software Digital Input Pin

1. Drag and drop a **Digital Input Pin** component (**Component Catalog** → **Ports and Pins** → **Digital Input Pin**).
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure as follows.

#### Type Tab

- Name:** Button
- Uncheck the **HW Connection** check box


Figure 3-137. SW Digital Input Pin Configuration

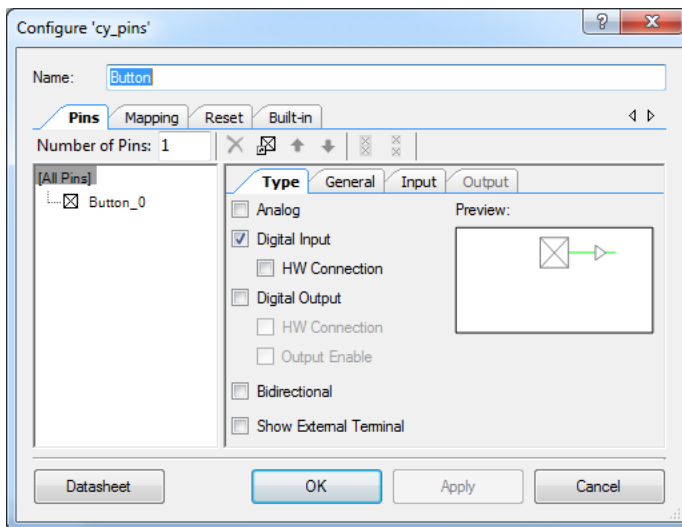

#### General Tab

- Drive Mode:** Resistive Pull up
- Initial State:** Low (0)
- Leave the remaining parameters as default

Figure 3-138. Pins - SW Digital Input Pin Configuration

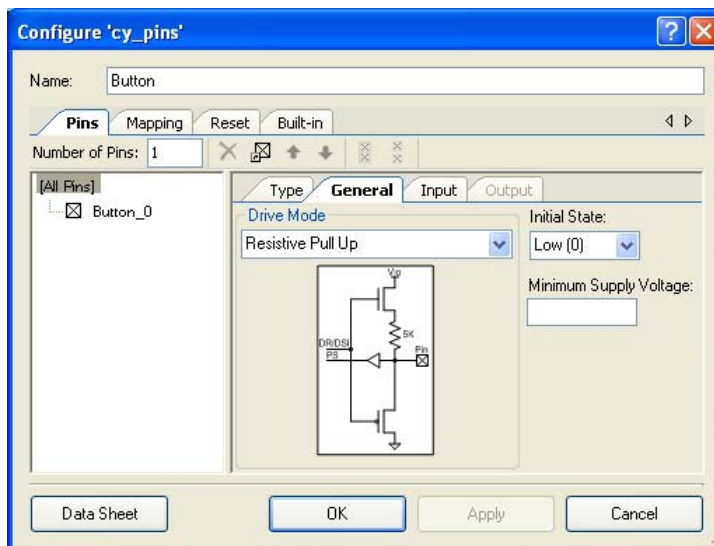

- Click **Apply** to save the changes to the pins component and click **OK** to close the pins configuration window.


### 3.3.4.4 Placing and Configuring LED

- Drag and drop a **Digital Output Pin** component (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**).
- Double-click the **Pin\_1** component in the schematic to open the configuration window.
- Configure as follows:

#### Type Tab

- Name:** LED
- Uncheck the **HW Connection** check box


Figure 3-139. LED Component Configuration

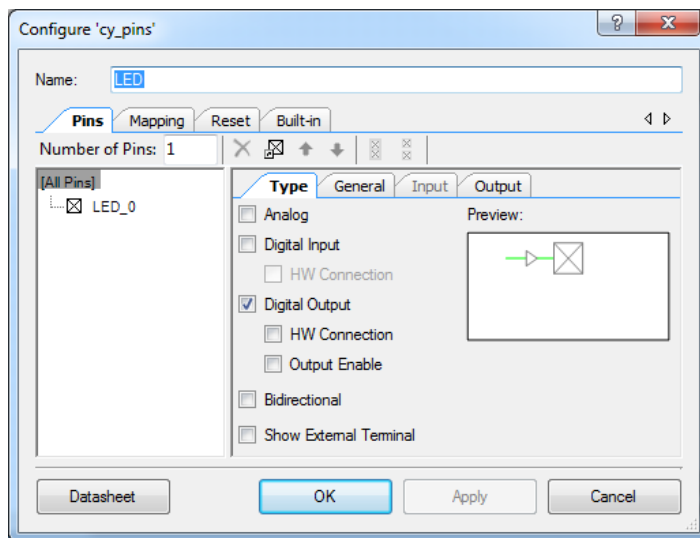

#### General Tab

- Drive Mode:** Strong Drive
- Leave the remaining parameters as default

Figure 3-140. Pins - LED Component Configuration

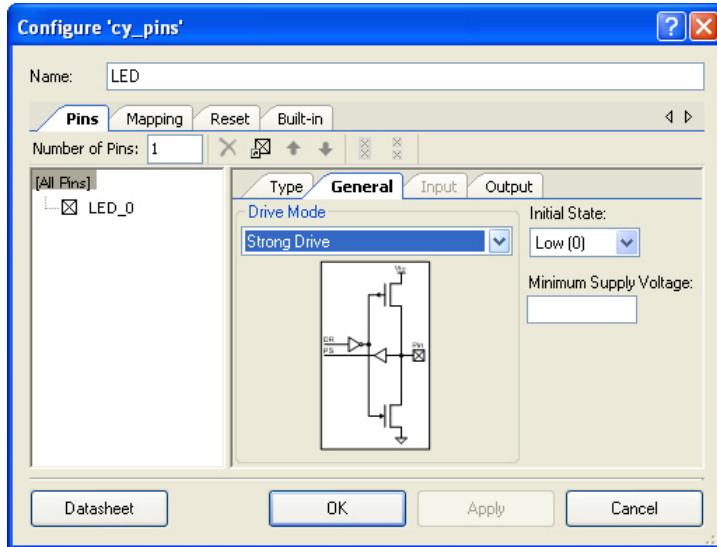


4. Click **Apply** to save the changes to the pins component and click **OK** to close the pins configuration window.

#### 3.3.4.5 Configuring Clocks for CY8C38 Family Processor Module

1. From the **Workspace Explorer**, open the *Ex4\_USB\_HID.cydwr* window and select the **Clocks** tab.
2. Click **Edit Clock** to open the Configure System Clocks window.
3. Click **IMO** from the listed rows and set
  - Osc: 24.000 MHz
4. Click the **PLL Clock** block and select **IMO (24.000 MHz)** for the Input.
5. Set **Desired:** to 48 MHz for the PLL clock
6. Enable the USB clock.
7. Set the ILO clock to 100 kHz

Figure 3-141. Configure System Clocks

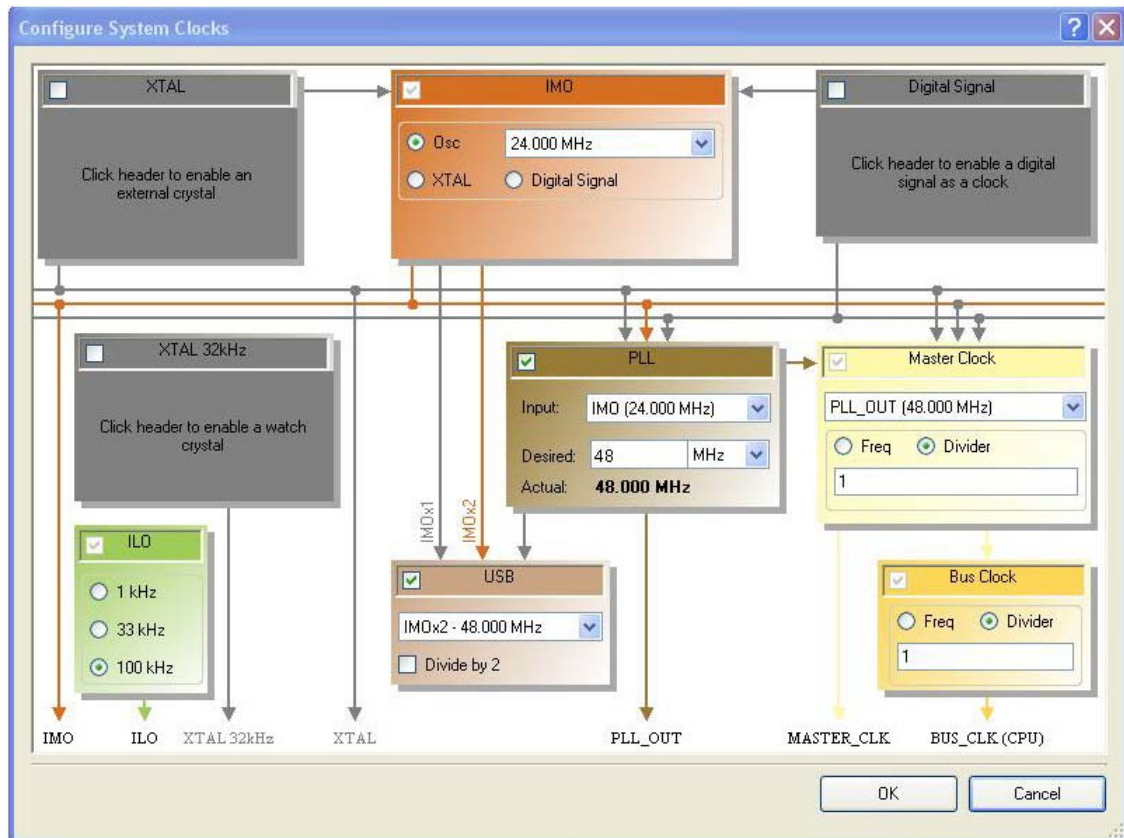

8. Click **OK**.

### 3.3.4.6 Configuring Clocks for CY8C58LP Family Processor Module

1. From the **Workspace Explorer**, open the *Ex4\_USB\_HID.cydwr* window and select the **Clocks** tab.
2. Click **Edit Clock** to open the Configure System Clocks window.
3. Enable and configure **XTAL** to 24 MHz frequency. On enabling XTAL, click the **Configure** button. This opens up the XTAL configuration window to configure characteristics for the external crystal.  
**Note** A 24-MHz crystal is installed on the board.
4. Select the **IMO** source as XTAL.
5. Enable the USB block and select **IM0x2 – 48.000 MHz** as input source.
6. Set **ILO** at 100 KHz.
7. In the **PLL** block, set the desired frequency as 33 MHz.
8. For Master Clock, select **PLL\_OUT (33 MHz)** as input with **Divider** as 1.

Figure 3-142. Configure System Clock


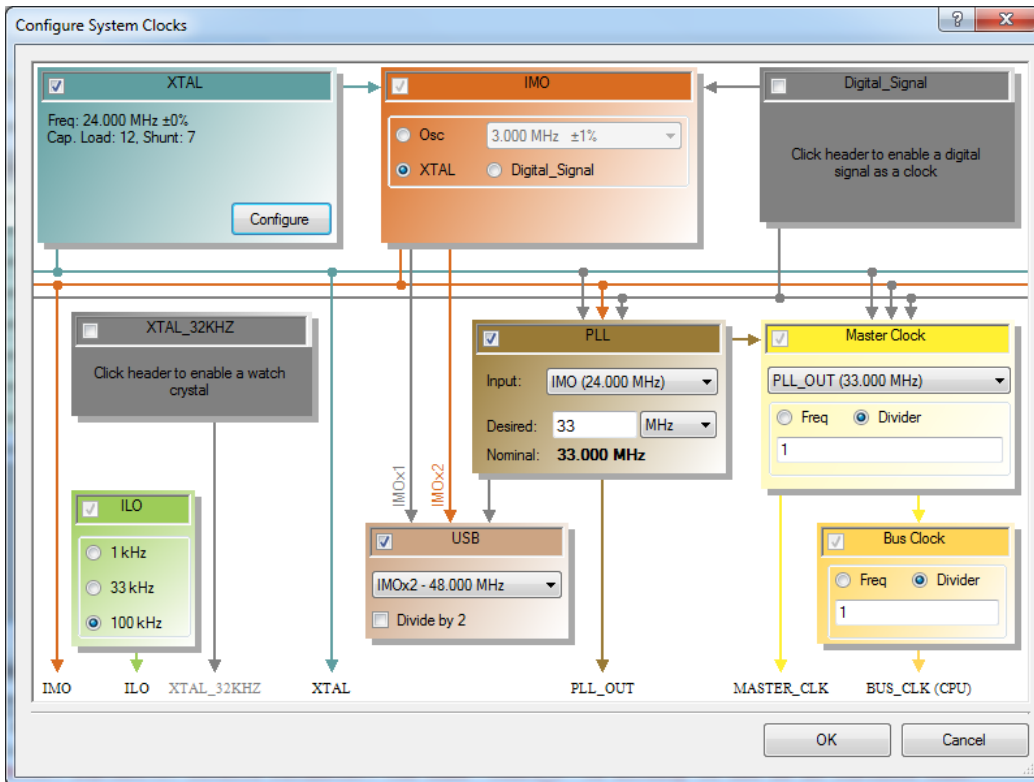


Figure 3-143. XTAL Configuration

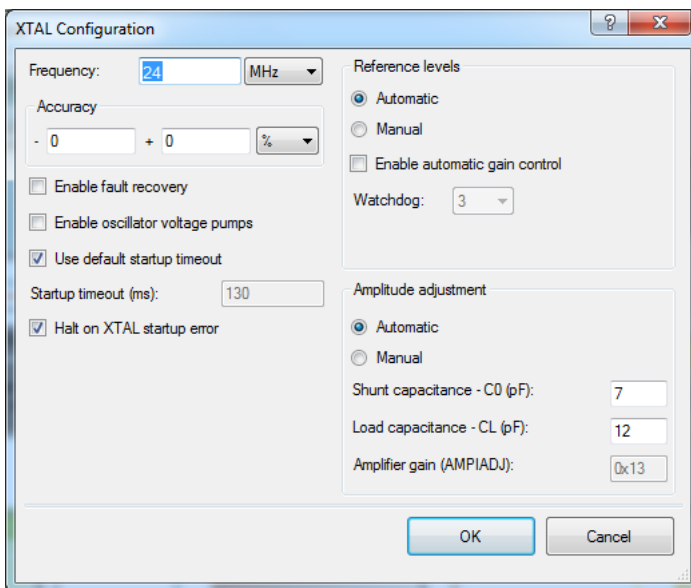


### 3.3.4.7 Configuring Pins

1. From the Workspace Explorer, double-click the *Ex4\_USB\_HID.cywrk* file.
2. Click the **Pins** tab.
3. Select and assign the pins as follows:

- ❑ Assign USBFS\_dp to P15[6]
- ❑ Assign USBFS\_dm to P15[7]
- ❑ Assign LED to P1[6]
- ❑ Assign Button to P1[5]

Figure 3-144. Pin Assignments

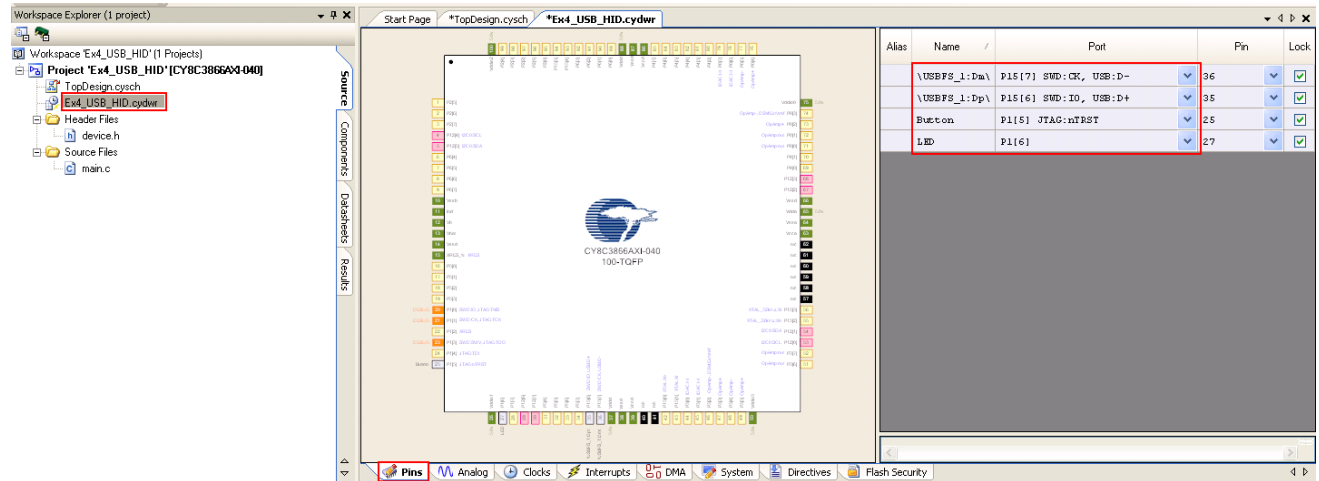

### 3.3.4.8 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C38\_main\_Ex4.C* for PSoC 3 module and *CY8C58LP\_main\_Ex4.C* for PSoC 5LP module, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

3. From the **Build** menu, select **Build Ex4\_USB\_HID**. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.4.9 Configuring and Programming the PSoC Development Board

**Note** Due to the nature of the PSoC development board, powering the system from USB 'VBUS' can potentially reset other USB devices on the same hub. See the Appendix A, section titled [Setting a 3.3-V Supply from VBUS on page 168](#).

1. Disconnect power to the board.
2. Configure the DVK SW3 to 5 V.
3. Configure the DVK breadboard using the jumper wires.
  - ❑ P1[5] to SW1
  - ❑ P1[6] to LED1
4. Connect the USB cable to the PC and to the USB port (J9)
5. Reapply power to the board.
6. Use PSoC Creator as described in section [Programming My First PSoC 3 Project on page 30](#) or [Programming My First PSoC 5LP Project on page 34](#) to program the device.
7. After programming the device, press **Reset**.

8. The PSoC development board is detected as a HID keyboard device. Wait until the device gets completely installed.
9. When button SW1 is pressed, the Windows Run window opens and the keyboard key sequence for the Cypress website is sent to open the Cypress website. When you press the button, LED1 also toggles.
10. Save and close the project.

**Note** The USB power setting can be configured to either 3 V or 5 V mode in the firmware, in the USBFS\_Start API. If the USB is configured for 3-V operation in firmware, ensure that the power switch (SW3) on the development kit is set to 3.3-V operation for the device to be detected (enumerated) on the PC.

### 3.3.5 CapSense


This project demonstrates CapSense. The firmware begins by initializing the LCD and CapSense components. In the main loop it scans the two buttons for activity. If there is a signal from either or both buttons, the corresponding LED lights up.

#### 3.3.5.1 Creating CapSense Project

1. Open PSoC Creator.
2. Create a new project by clicking **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-145. Create New Project



3. In the **New Project** window, select the **Empty PSoC 3 Design** template for a PSoC 3 design, or **Empty PSoC 5LP Design** template for a PSoC 5LP design and name the project **Ex5\_CapSense**.
4. In the **Location** field, type the path where you want to save the project, or click  and navigate to the appropriate directory and click **OK**.
5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.


#### 3.3.5.2 Placing and Configuring CapSense

1. Drag and drop a CapSense component from the **Component Catalog** → **CapSense** → **CapSense\_CSD** to the workspace.
2. Double-click the **CapSense\_1** component
3. Configure CapSense as follows:

##### General Tab


- Name: **CapSense**
- Set parameters as shown in the following figure

Figure 3-146. CapSense Component Configuration

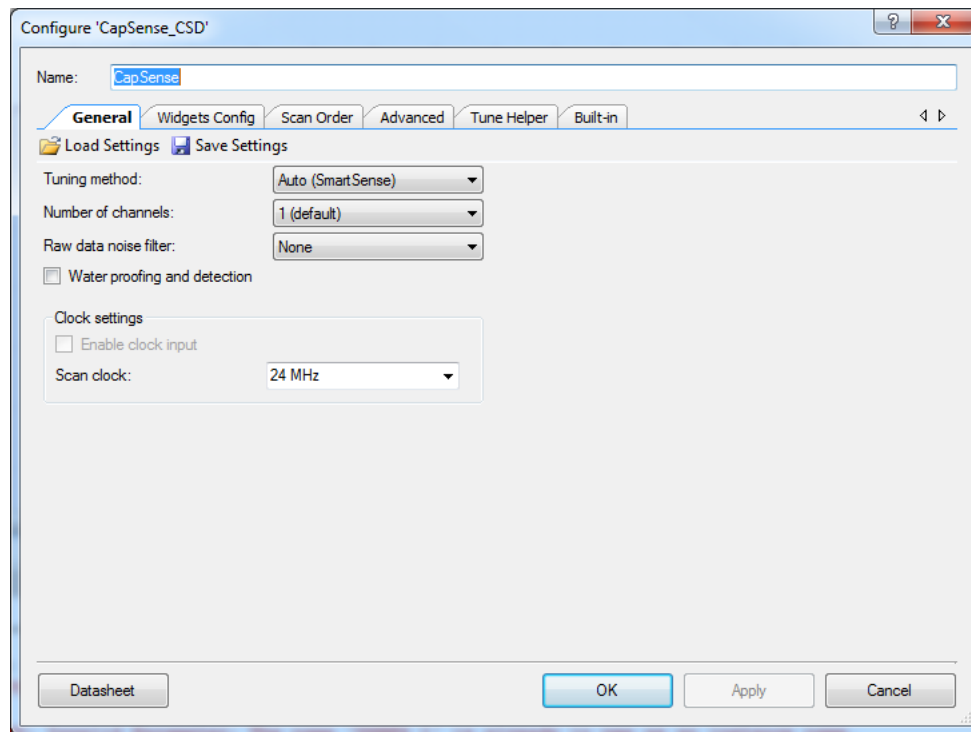


4. Select the **Widget Config** Tab.
5. Add two buttons by clicking on **Add Button** twice. Leave the button parameters as default.

Figure 3-147. Buttons - CapSense Component Configuration

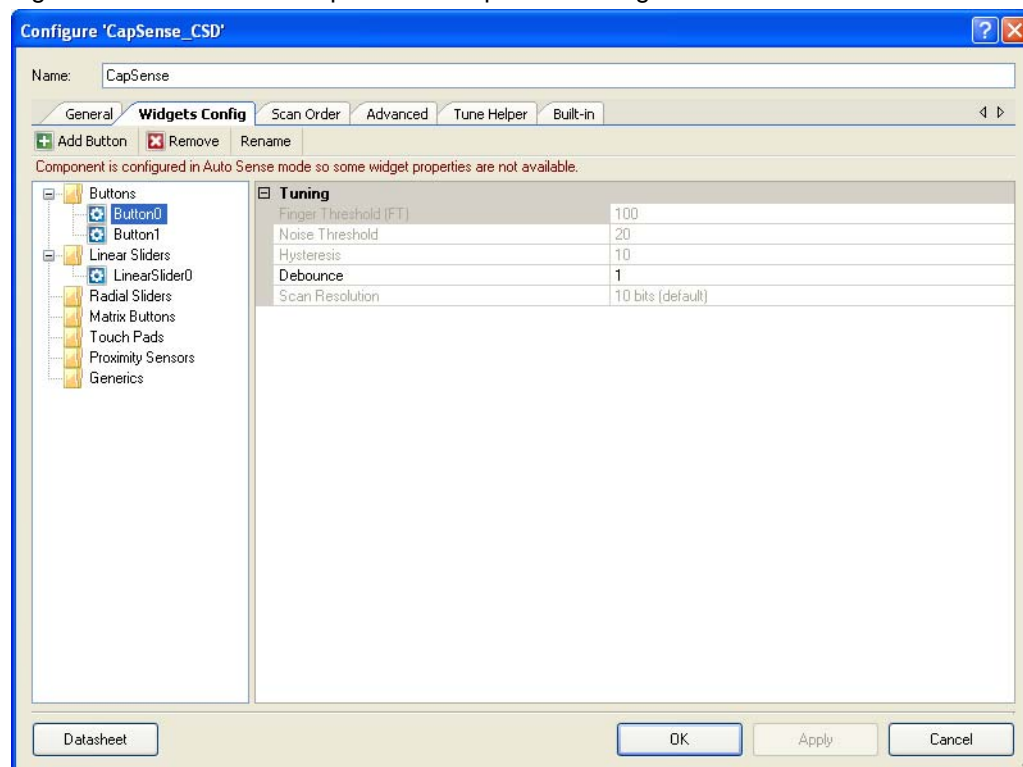


6. Select **Linear Slider** and click **Add Linear Slider**.
7. Change API resolution parameter to **80**.

Figure 3-148. Slider Configuration

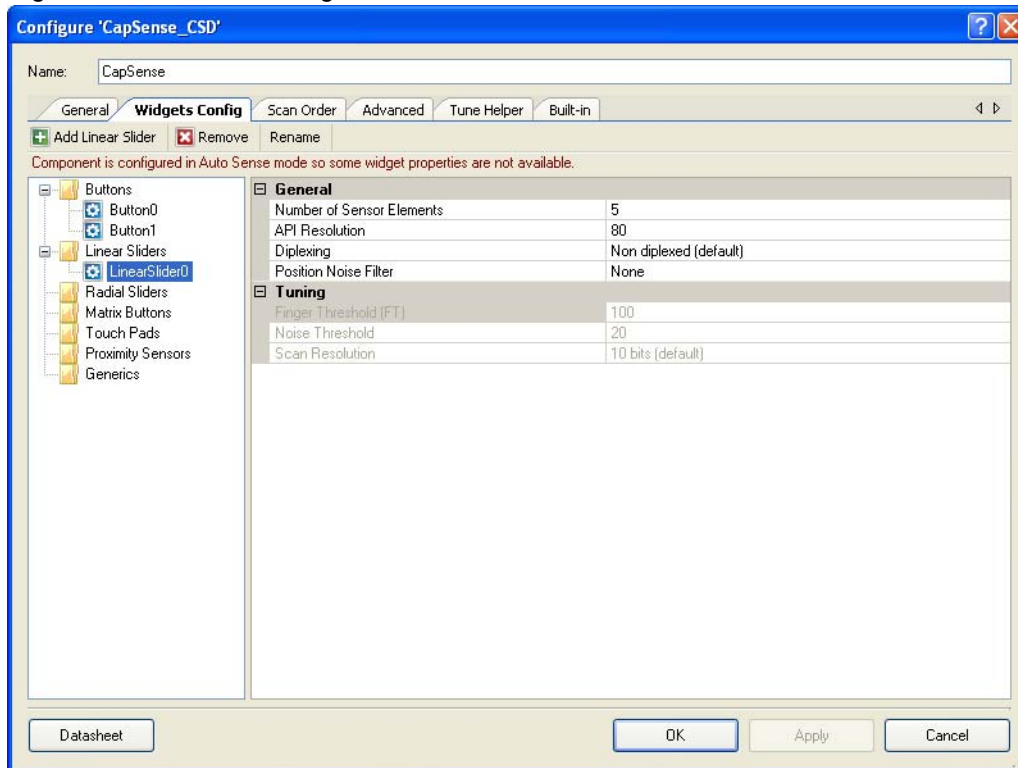

8. Select **Tuner Helper** tab and uncheck the **Enable Tune Helper** box.

Figure 3-149. Scan Slots Slider Terminals Configuration

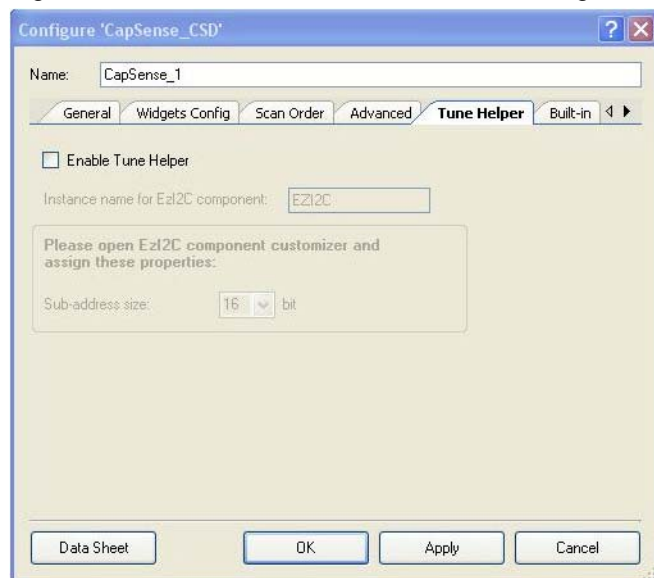


9. Click **Apply** to save the changes to the CapSense\_CSD component and click **OK** to close the CapSense\_CSD configuration window.

### 3.3.5.3 *Placing and Configuring Character LCD*

1. Drag and drop a character LCD component from the **Component Catalog** → **Display** → **Character LCD** to the workspace.
2. Double-click the **LCD\_Char\_1** component.
3. Set the parameter **LCD Custom Character Set** to **Horizontal Bargraph**.
4. Select **Include ASCII to Number Conversion Routines**.
5. Click **Apply** to save the changes to the character LCD component and click **OK** to close the character LCD configuration window.

Figure 3-150. Horizontal Bargraph Configuration

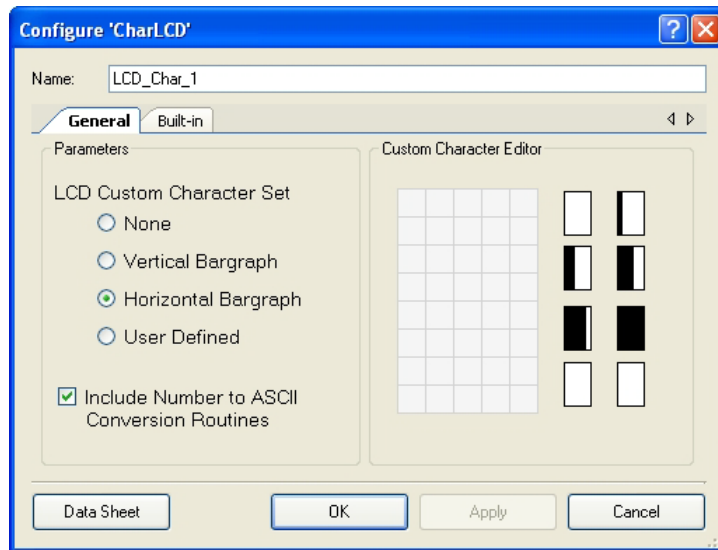


### 3.3.5.4 *Placing and Configuring Digital Output Pin*

1. Drag and drop two **Digital Output Pin** components from the **Component Catalog** → **Ports and Pins** → **Digital Output Pin** to the workspace.
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the two **Digital Port** components for LED1 and LED2.

#### **Type Tab**


- Name: LED1**
- Uncheck the **HW Connection** check box

Figure 3-151. LED Configuration

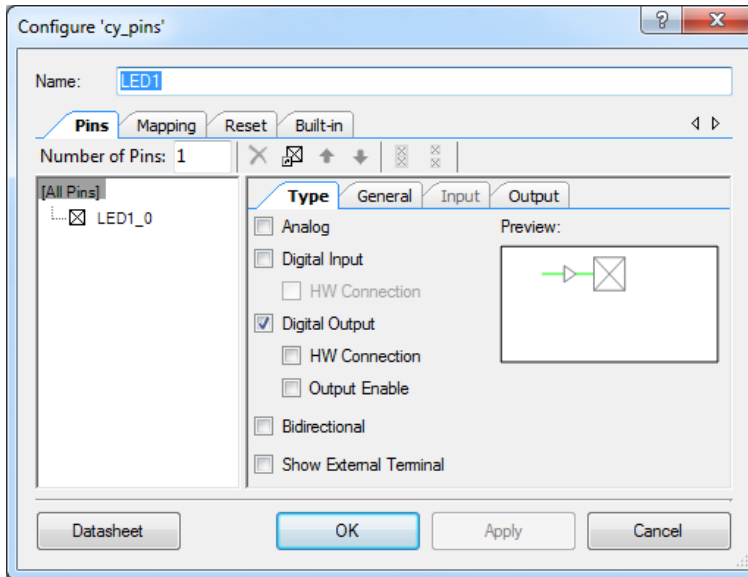**General Tab**

- Drive Mode:** Strong Drive
- Leave the remaining parameters as default

Figure 3-152. Pins - LED Configuration

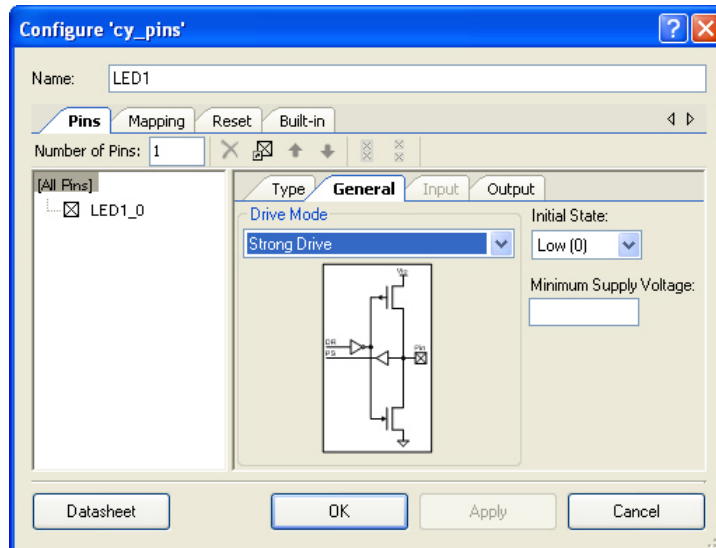

4. Click **Apply** to save the changes to the pins component and click OK to close the pin configuration window.
5. Configure **LED2** similar to **LED1**.

**3.3.5.5 Configuring Pins**

1. From the Workspace Explorer, double-click the *Ex5\_CapSesne.cydwr* file.
2. Click the **Pins** tab
3. Select and assign the pins as follows:

- ❑ Cmod to P2[7] for CY8C38 Family Processor Module and Cmod to P15[5] for CY8C58LP Family Processor Module
- ❑ Button0\_BTN to P0[5]
- ❑ Button1\_BTN to P0[6]
- ❑ LinearSlider0\_e0\_LS to P0[0]
- ❑ LinearSlider0\_e1\_LS to P0[1]
- ❑ LinearSlider0\_e2\_LS to P0[2]
- ❑ LinearSlider0\_e3\_LS to P0[3]
- ❑ LinearSlider0\_e4\_LS to P0[4]
- ❑ LED1 to P1[6]
- ❑ LED2 to P1[7]
- ❑ LCD\_Char\_1 to P2[6:0]

Figure 3-153. Pin Assignment for CY8C38 Family Processor Module


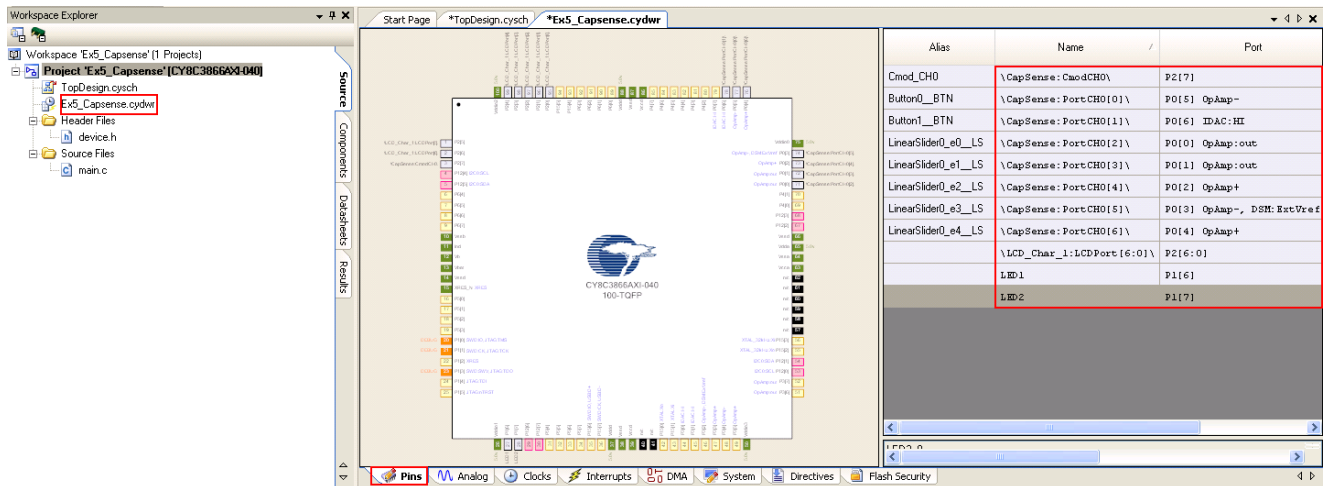


Figure 3-154. Pin Assignment for CY8C58LP Family Processor Module

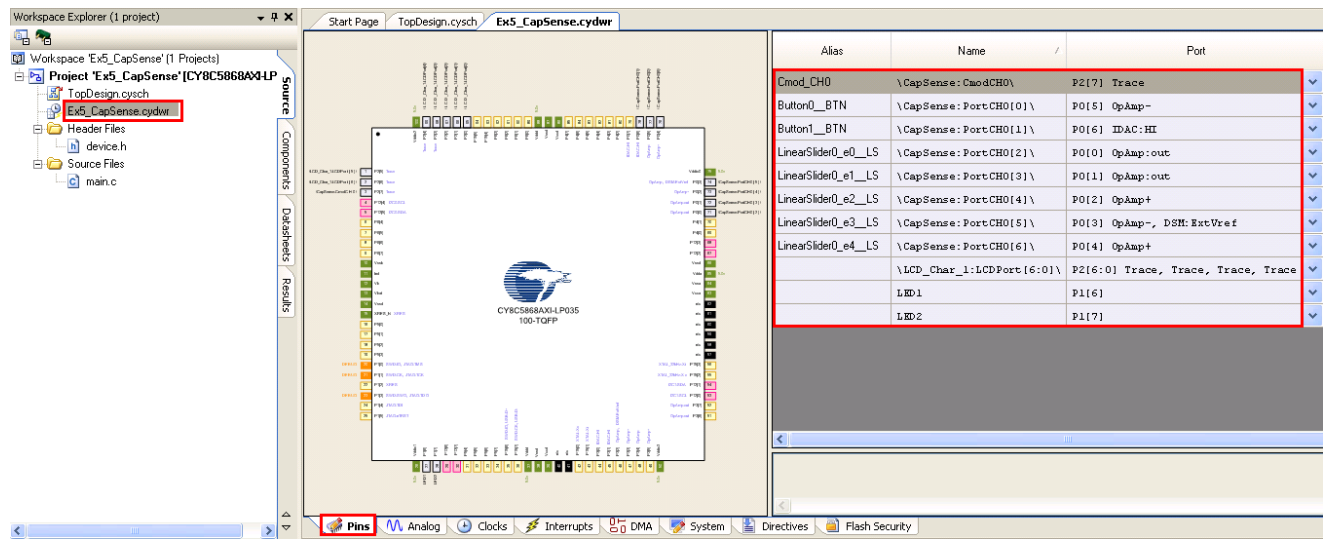


### 3.3.5.6 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C38\_main\_Ex5.C* for PSoC 3 module and *CY8C58LP\_main\_Ex5.C* for PSoC 5LP module, which is available within the attachments feature of this PDF document.

**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.


3. Right-click the project in Workspace Explorer window and select **Add**; click **New Item...**

Figure 3-155. Add New Item

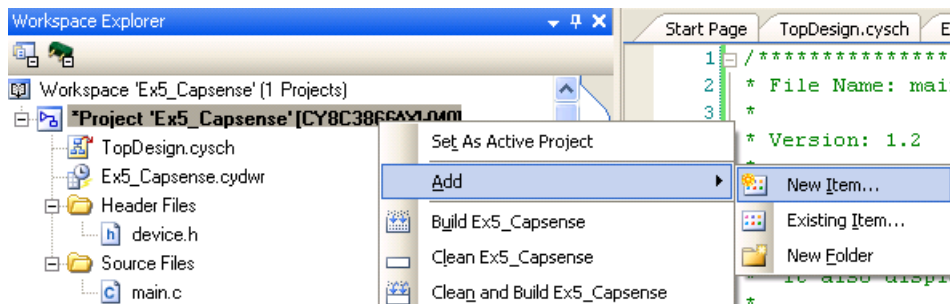

4. Select **Keil Reentrancy File** from the templates and click **OK**.


Figure 3-156. Select Keil File

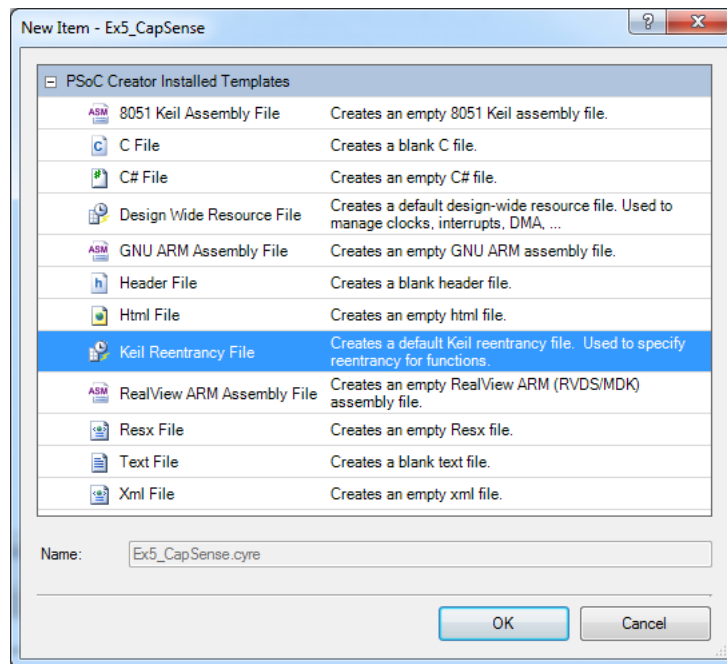

5. A Keil re-entrancy file (CYRE) file is added to the project. Double-click on the CYRE file for editing. Copy and Paste the contents of the *Ex5\_Capsense\_CYRE.txt* file, which is available within the attachments feature of this PDF document. Due to the limited amount of stack and RAM space available, and for performance reasons, functions compiled with the Keil compiler are not re-entrant by default. This means that the same function cannot be called multiple times concurrently in most cases. Concurrent function calls typically occur when the same function is called from two different interrupts, or from one interrupt and the main program execution. If these func-

tion calls are not made re-entrant, the compiler gives warnings when building the project at higher optimization levels. To avoid these warnings a CYRE file is used. All the functions mentioned in this file are marked automatically to support re-entrancy.

Figure 3-157. CYRE File

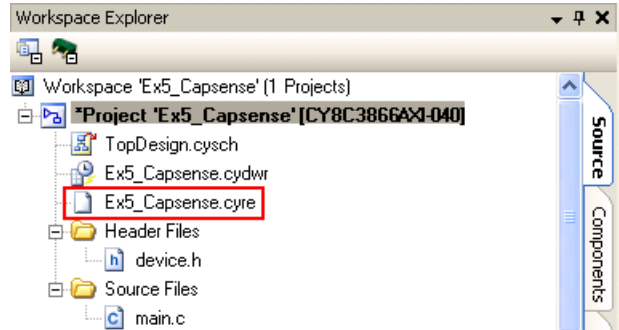

6. From the **Build** menu, select **Build CapSense**. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.5.7 *Configuring and Programming the PSoC Development Board*

1. Disconnect power to the board.
2. Configure the DVK SW3 to 3.3 V.
3. Using the jumper wires, configure the PSoC development board's prototyping area:
  - P1[6] to LED1
  - P1[7] to LED2
4. Use PSoC Creator as described in [Programming My First PSoC 3 Project on page 30](#) or [Programming My First PSoC 5LP Project on page 34](#) to program the device.
5. After programming the device, press **Reset**.
6. When running the project, an LED lights up when either CapSense button is pushed. If B1 (P0[5]) is pushed, it also displays "Button1" in the top row of the LCD display. Similarly, if B2 (P0[6]) is pushed, it displays "Button2" in the top row of the LCD display. The bottom row of the LCD displays the slider position with a horizontal bargraph.
7. Save and close the project.

### 3.3.6 SAR ADC to UART with DAC (PSoC 5LP Only)

This project demonstrates sine wave generation by using an 8-bit DAC and DMA. The sine wave period is based on the current value of the ADC value of the potentiometer. The ADC values are also output using a UART.

The firmware reads the voltage output by the DVK board potentiometer and displays the raw counts on the DVK board character LCD display similar to that shown in the ADC to UART with DAC project. An 8-bit DAC outputs a table generated sine wave to an LED using DMA at a frequency proportional to the ADC count. A 9600 Baud 8N1 UART outputs the current ADC count as ASCII formatted into a hexadecimal number.

The following instructions assume that you have completed My First PSoC Project and ADC to LCD Project and therefore have a basic understanding of the PSoC Creator software environment.


This code example uses the following components:


- SAR ADC (**Component Catalog** → **Analog** → **ADC** → **SAR ADC**)
- Voltage DAC (**Component Catalog** → **Analog** → **DAC** → **Voltage DAC**)
- Opamp (**Component Catalog** → **Analog** → **Amplifiers** → **Opamp**)
- DMA (**Component Catalog** → **System** → **DMA**)
- Character LCD (**Component Catalog** → **Display** → **Character LCD**)
- UART (**Component Catalog** → **Communications** → **UART**)
- Analog Pin (**Component Catalog** → **Ports and Pins** → **Analog Pin**)
- Digital Output Pin (**Component Catalog** → **Ports and Pins** → **Digital Output Pin**)
- Clock (**Component Catalog** → **System** → **Clock**)
- Logic Low (**Component Catalog** → **Digital** → **Logic** → **Logic Low**)
- Logic High (**Component Catalog** → **Digital** → **Logic** → **Logic High**)

#### 3.3.6.1 Creating ADC to UART with DAC Project

1. Open PSoC Creator.
2. Create a new project by clicking **Create New Project...** in the **Start Page** of PSoC Creator.

Figure 3-158. Create New Project

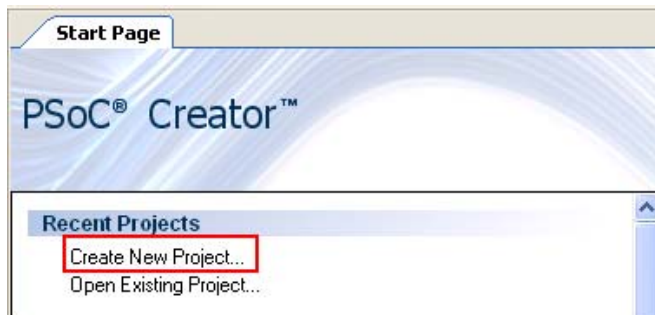

3. In the **New Project** window, select the **Empty PSoC 5LP Design** template and name the project **Ex6\_SAR\_to\_UART\_with\_DAC**.
4. In the **Location** field, type the path where you want to save the project, or click  and navigate to the appropriate directory and click **OK**.
5. By default, the design window opens *TopDesign.cysch*. This is the project's schematic entry file within PSoC Creator.

### 3.3.6.2 *Placing and Configuring SAR ADC*


1. Drag and drop the SAR ADC component (**Component Catalog** → **Analog** → **ADC** → **SAR ADC**)
2. Double-click the **ADC\_SAR\_1** component in the schematic to open the configuration window.
3. Configure the SAR ADC as follows:

**Configure Tab**

- Name:** ADC\_SAR\_1
- Resolution:** 12
- Conversion Rate:** 100000
- Clock Frequency:** 1800
- Input Range:** Vssa to Vdda (Single Ended)
- Reference:** Internal Vref
- Sample Mode:** Free Running
- Clock Source:** Internal

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-159. SAR ADC Component Configuration

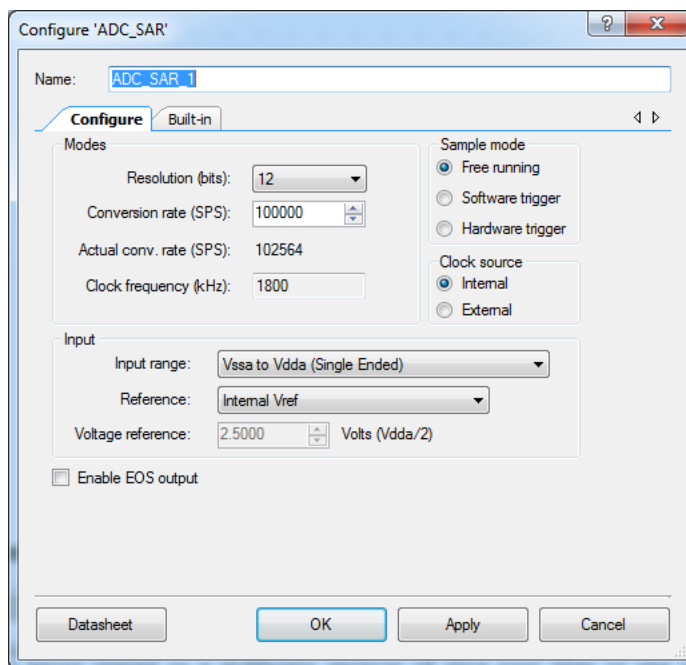

4. Click **Apply** to save the changes to the ADC\_SAR component and click **OK** to close the ADC\_SAR configuration window.


### 3.3.6.3 *Placing and Configuring an Analog Pin*

1. Drag and drop the Analog Pin component (**Component Catalog** → **Ports and Pins** → **Analog Pin**)
2. Double-click the **Pin\_1** component in the schematic to open the configuration window.
3. Configure the analog pin:

**Type Tab**

- **Name:** POT
- Select **Analog** check box only

Figure 3-160. POT Component Configuration

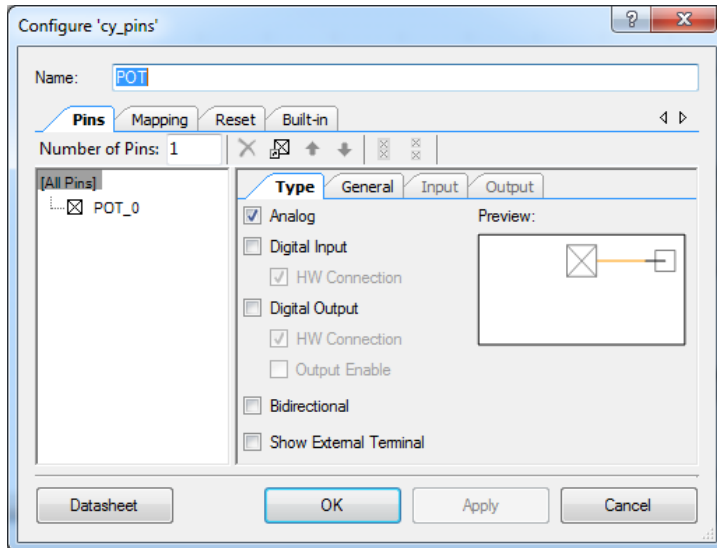

#### General Tab

- **Drive Mode:** High Impedance Analog
- Leave the remaining parameters as default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

4. Click **Apply** to save the changes to the pins component and click **OK** to close the pinconfiguration window.


#### 3.3.6.4 Placing and Configuring Character LCD

1. Drag and drop the Character LCD component (**Component Catalog** → **Display** → **Character LCD**)
2. Double-click the **LCD\_Char\_1** component in the schematic to open the configuration window.
3. Configure the Character LCD:

- **Name:** LCD\_Char\_1
- **LCD Custom Character Set:** None
- **Include ASCII to Number Conversion Routines:** check box

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-161. Character LCD Component Configuration

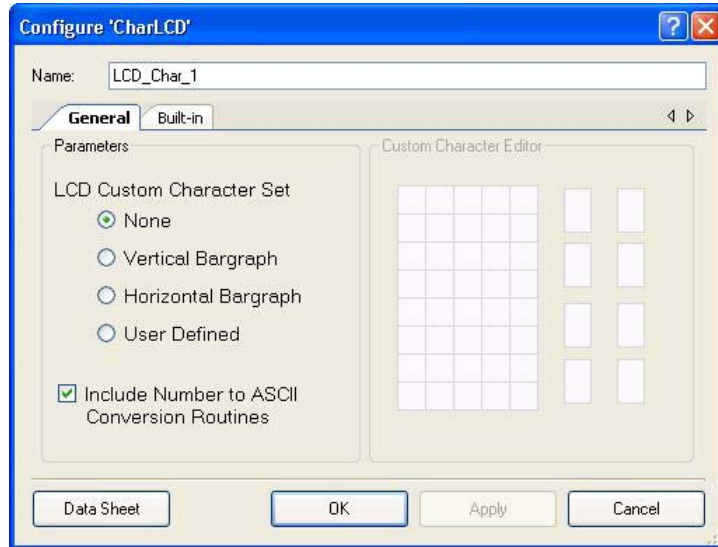

4. Click **Apply** to save the changes to the LCD component and click **OK** to close the LCD configuration window.

### 3.3.6.5 *Placing and Configuring Voltage DAC*


1. Drag and drop the Voltage DAC component (**Component Catalog** → **Analog** → **DAC** → **Voltage DAC**)
2. Double-click the **VDAC8\_1** component in the schematic to open the configuration window.
3. Configure the VDAC:

**Basic Tab**

- ❑ **Name:** VDAC8\_1
- ❑ **Range:** 0 - 4.080 V (16 mV/bit)
- ❑ **Speed:** Slow Speed
- ❑ **mV:** 1600
- ❑ **8-bit Hex:** 64
- ❑ **Data Source:** CPU or DMA (Data Bus)
- ❑ **Strobe Mode:** Register Write

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-162. Voltage DAC Component Configuration

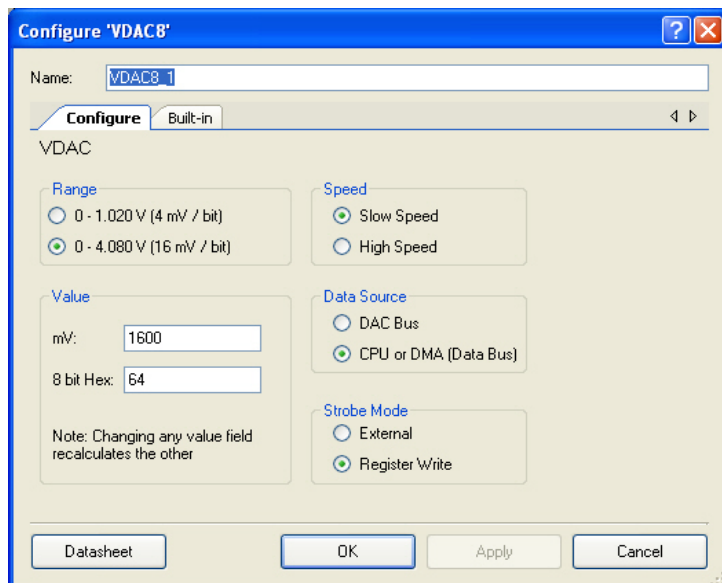

4. Click **Apply** to save the changes to the VDAC8 component and click **OK** to close the VDAC8 configuration window.

### 3.3.6.6 *Placing and Configuring Opamp*


1. Drag and drop the Opamp component (**Component Catalog** → **Analog** → **Amplifiers** → **Opamp**)
2. Double-click the **Opamp\_1** component in the schematic to open the configuration window.
3. Configure the Opamp:

#### **Configure Tab**

- **Name:** Opamp\_1
- **Mode:** Follower
- **Power:** High Power

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-163. Opamp Component Configuration

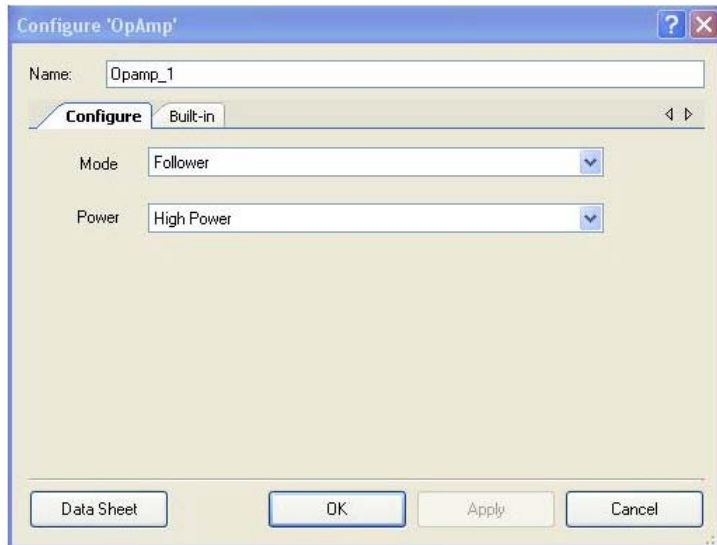

4. Click **Apply** to save the changes to the opamp component and click **OK** to close the opamp configuration window.
5. Double-click the **Vout\_1** analog pin of the opamp and rename as **LED**.
6. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.


### 3.3.6.7 *Placing and Configuring UART*

1. Drag and drop the UART component (**Component Catalog** → **Communications** → **UART**)
2. Double-click the **UART\_1** component in the schematic to open the configuration window.
3. Configure the UART:

#### **Advanced Tab**

- Clock:** External

Figure 3-164. Advanced Tab

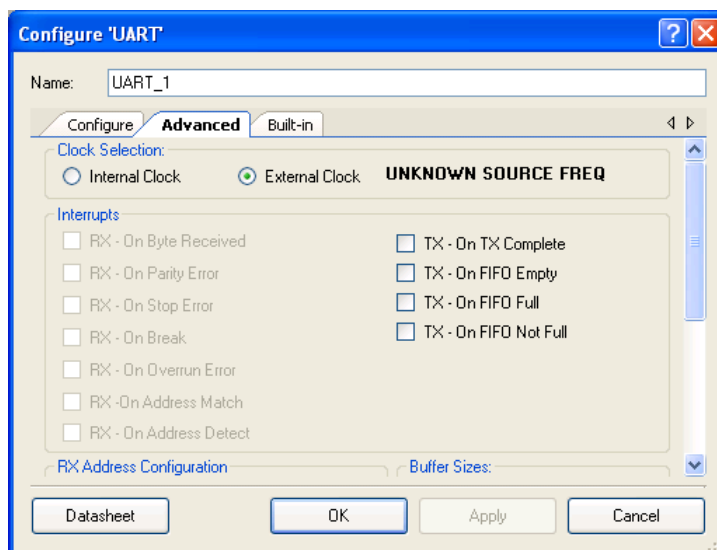


### Configure Tab

- **Name:** UART\_1
- **Mode:** TxOnly
- Leave the remaining parameters to default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-165. UART Component Configuration

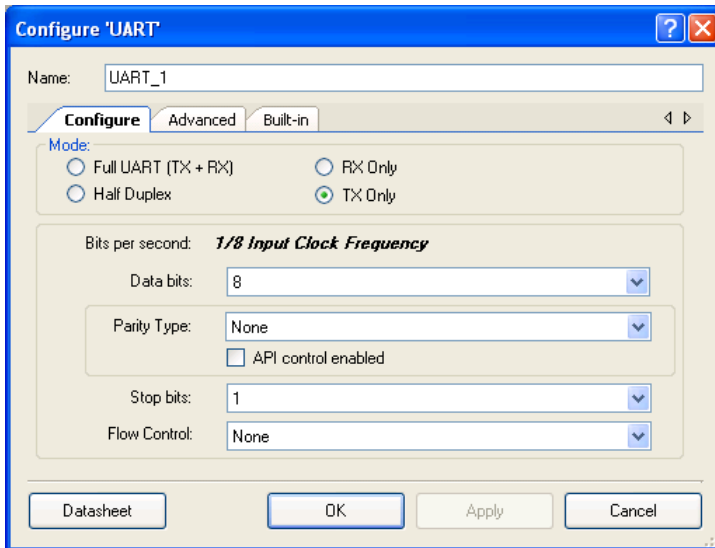


4. Click **Apply** to save the changes to the UART component and click **OK** to close the UART configuration window.
5. Right-click the **Rx\_1** pin of the UART and click **Delete** because this code example does not require UART receiving.
6. Double-click the **Tx\_1** pin of UART and rename as **TX\_OUT**.
7. Click **Apply** to save the changes to the pins component and click **OK** to close the pin configuration window.

### 3.3.6.8 Placing and Configuring Clock for UART

1. Connect a clock component (**Component Catalog** → **System** → **Clock**) to the UART clock.
2. Double-click the **Clock** component.
3. Configure the clock:
  - **Name:** Clock\_2
  - **Source:** MASTER\_CLK (24.000 MHz)
  - **Desired Frequency:** 76.9 kHz
  - Leave the remaining parameters at default

**Note** The desired frequency of the clock is 76.9 kHz because this value should be eight times the required baud rate:  $76900/8 = 9612.5$ , which is approximately 9600 (required baud rate).

Figure 3-166. Configure UART Clock

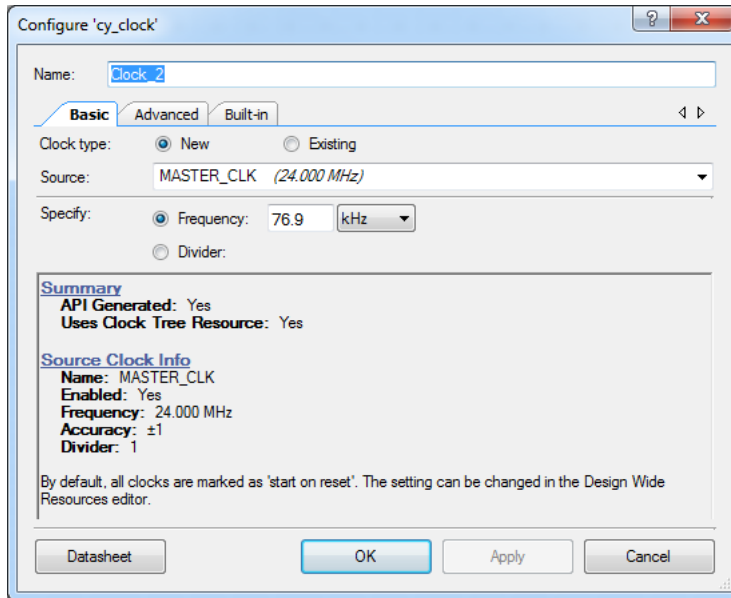

4. Click **Apply** to save the changes to the clock component and click **OK** to close the clock configuration window.

Figure 3-167. UART Configure Window After Assigning Clock Source - Configure Tab


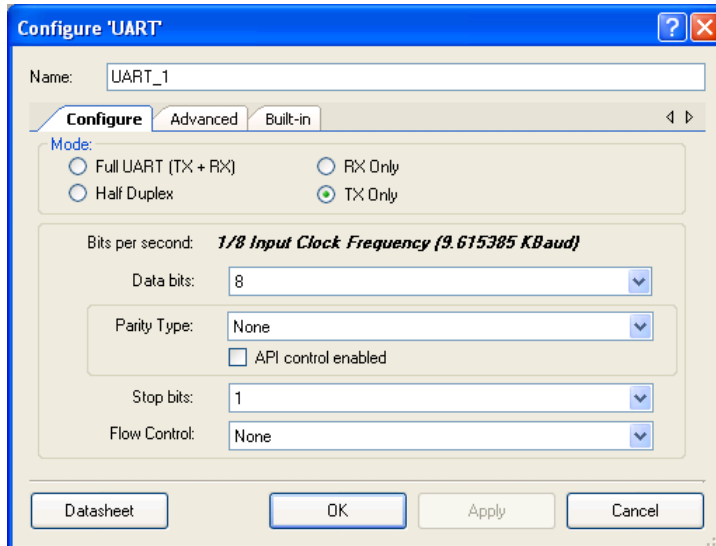


Figure 3-168. UART Configure Window After Assigning Clock Source - Advanced Tab

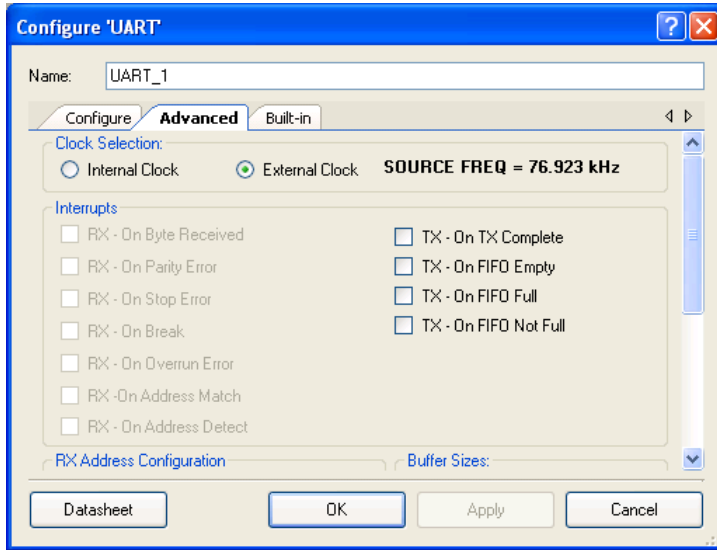

### 3.3.6.9 Placing and Configuring DMA


1. Drag and drop the DMA component (**Component Catalog** → **System** → **DMA**)
2. Double-click the **DMA\_1** component in the schematic to open the configuration window.
3. Configure the DMA:

#### Basic Tab

- Name:** DMA\_1
- Hardware Request:** Rising Edge
- Leave the remaining parameters to default

For more information about what the parameters mean, click the **Datasheet** button in the configuration window.

Figure 3-169. DMA Component Configuration

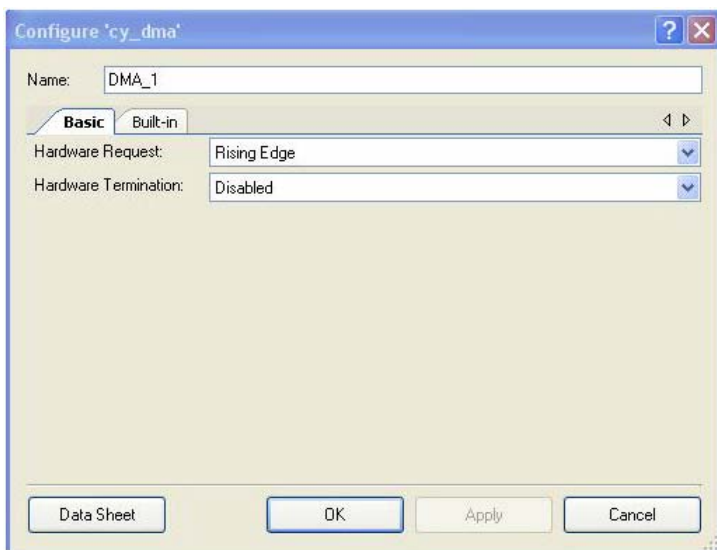


- Click **Apply** to save the changes to the DMA component and click **OK** to close the DMA configuration window.

### 3.3.6.10 Connecting the Components Together

- Connect a Logic Low component (**Component Catalog** → **Digital** → **Logic** → **Logic Low**) to the **reset** of the UART
- Connect a Clock component (**Component Catalog** → **System** → **Clock**) to the **drq** of the DMA.
- Double-click the **Clock** component to configure.
- Configure the clock:
  - Configure Clock Tab**
  - Name:** Clock\_1
  - Source:** MASTER\_CLK (24.000 MHz)
  - Desired Frequency:** 3 MHz
  - Leave the remaining parameters set to their default values
- Click **Apply** to save the changes to the clock component and click **OK** to close the clock configuration window.

Figure 3-170. Clock Component Configuration

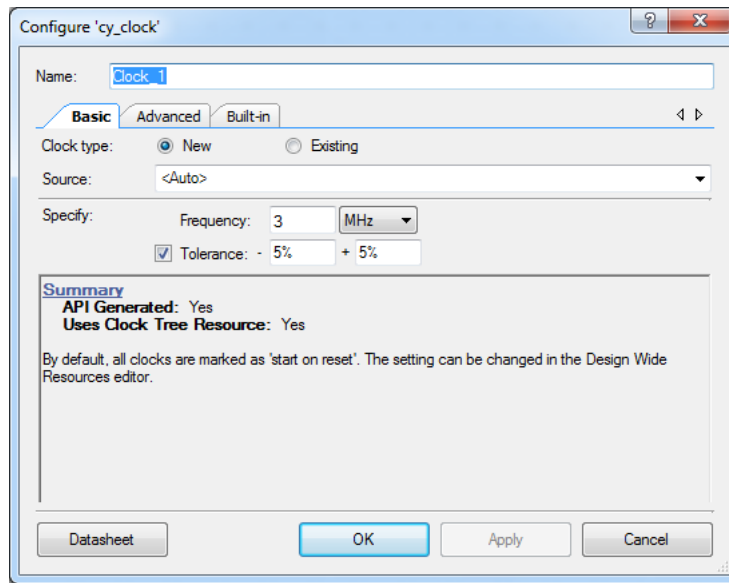



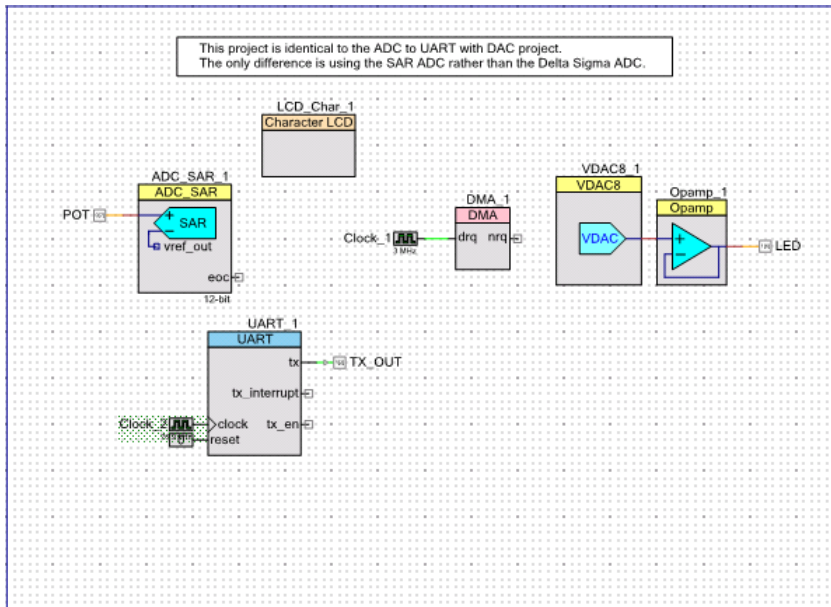
- Using the Wire Tool , connect **VDAC8 (VDAC8\_1)** to **Opamp (Opamp\_1)**.
- Using the Wire Tool , connect **POT** to **ADC\_SAR (ADC\_SAR\_1)**.
- When complete, the schematic looks similar to [Figure 3-171](#).


Figure 3-171. Connected Components



### 3.3.6.11 Configuring Pins

1. From the **Workspace Explorer**, open the *Ex6\_SAR\_to\_UART\_with\_DAC.cydwr* file.
2. Click the **Pins** tab.
3. Select pins P2[6:0] for LCD\_Char\_1.
4. Select pin P0[7] for POT.
5. Select pin P1[6] for LED.
6. Select pin P1[2] for TX\_OUT.

Figure 3-172. Pin Assignments

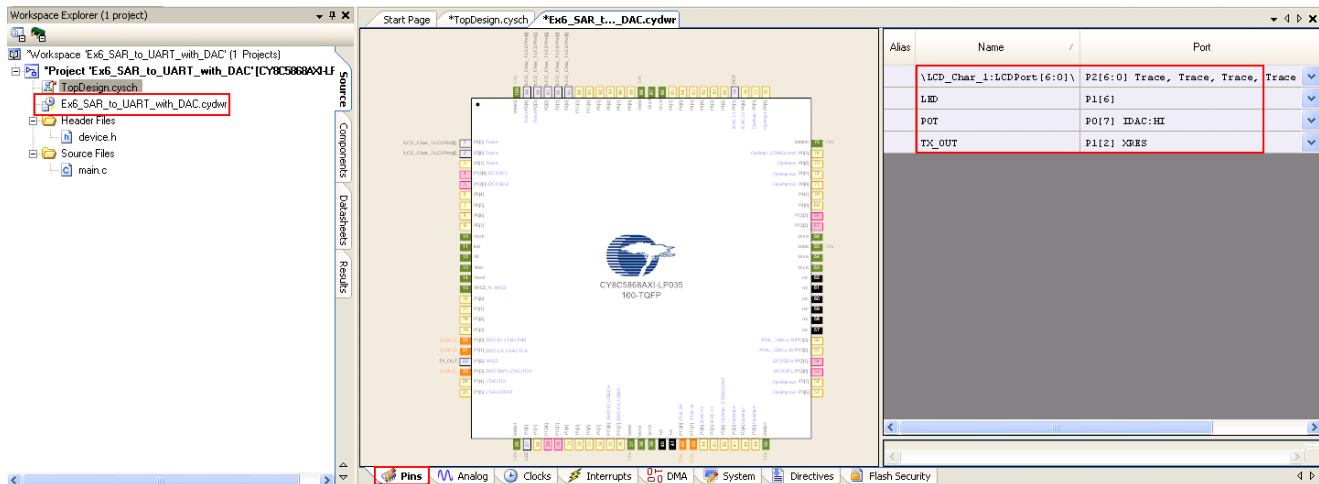

### 3.3.6.12 Creating main.c File

1. Open the existing *main.c* file within **Workspace Explorer**.
2. Replace the existing *main.c* content with the content of the embedded *CY8C58LP\_main\_Ex6.c* file, which is available within the attachments feature of this PDF document.


**Note** To access the embedded attachments feature in the PDF, click on the paper clip icon located in the lower left corner of the Adobe Reader application.

3. From the **Build** menu, select **Build Ex6\_SAR\_to\_UART\_with\_DAC**. PSoC Creator builds the project and displays the comments in the **Output** dialog box. When you see the message "Build Succeeded", the build is complete.

### 3.3.6.13 Configuring and Programming the PSoC Development Board

1. Disconnect power to the board.
2. Configure the DVK SW3 to 5 V.
3. Using the jumper wires included, configure the PSoC Development Board's prototyping area to:
  - P0[7] to VR
  - P1[2] to TX
  - P1[6] to LED1
4. Verify that VR\_PWR (J11) is jumpered to **ON**.
5. Verify that RS232\_PWR (J10) is jumpered to **ON**.
6. Connect a serial cable from the PSoC development board to a PC.
7. Apply power to the board.
8. Install a terminal application such as TeraTerm or HyperTerminal with these setup parameters:
  - Baud Rate:** 9600
  - Data:** 8-bit
  - Parity:** none
  - Stop:** 1-bit
  - Flow Control:** none

Figure 3-173. HyperTerminal Settings

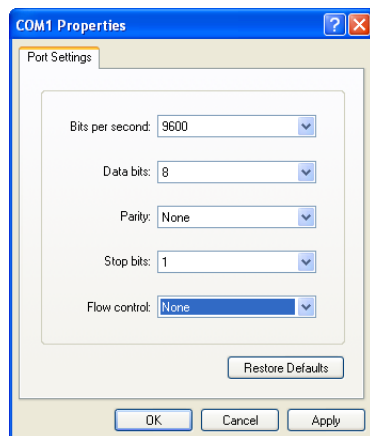

9. Use PSoC Creator as described in [Programming My First PSoC 5LP Project on page 34](#) to program the device.

10. After programming the device, press the **Reset** button on the PSoC Development Board to see the output of the ADC displayed on the LCD and in the terminal application. LED1 is a sine wave output whose period is based on the ADC. Turning the potentiometer results in the LCD and observed terminal value change.
11. Save and close the project.

# Appendix A. Board Specifications and Layout



This appendix gives detailed specifications of the PSoC Development Kit board components

## A.1 PSoC Development Board

### A.1.1 Factory Default Configuration

#### A.1.1.1 *Power Supply*

The board has several power nets. Following are the definitions of the different power nets.

VIN (9 V or 12 V) - This is the input power before it is fed to any of the regulators. A 9-V to 12-V power supply adapter or a 9-V battery is used as the source.

VREG (5 V) - This is fed by VIN and is the output of the onboard 5-V regulator. VREG can be selected as the main 5-V source by using the J8 header.

VBUS (5 V) - This is power derived from the USB interface via a USB host. VBUS can be selected as the main 5-V source by using the J8 header.

VDD (3.3 V or 5 V) - This is fed by VREG, VBUS, or the onboard 3.3-V regulator. VDD can be chosen either to be 3.3 V or 5 V by the simple positioning of the VDD select switch (SW3).

VADJ (1.5 V to 3.3 V for 3.3-V supply and 1.5 V to 5 V for 5-V supply) - This is fed by VDD and is the output of the onboard adjustable regulator. It is mainly used when the PSoC core must be powered at lower voltages. An adjustable resistor R11 is used for adjusting the voltage.

VDD DIG - This is power derived from either VDD or VADJ. It is used to power the PSoC core. The source for VDD DIG can be chosen as VDD or VADJ using the J7 header.

VDD ANLG - This is power derived from either VDD or VADJ. It is mainly used to separate the analog power from the digital power. The source for VDD ANLG can be chosen as VDD or VADJ using the J6 header.


VDDIO - This is power derived from either VDD or VADJ. It is used to power digital I/O on the PSoC device. There are four sections of GPIO, which can be powered to 5 V, 3.3 V, or VADJ using four headers. It enables you to power the PSoC GPIOs at different voltages.

## A.1.2 Power Supply Configuration Examples

### A.1.2.1 Setting a 5-V Supply from VREG

1. Place the jumper on J8 header to select VREG as the source.
2. Move the VDD select switch to select the 5 V.
3. Place the jumper on J6 header to select VDD as source for VDD ANLG.
4. Place the jumper on J7 header to select VDD as source for VDD DIG.


Figure A-1. Setting a 5-V Supply from VREG

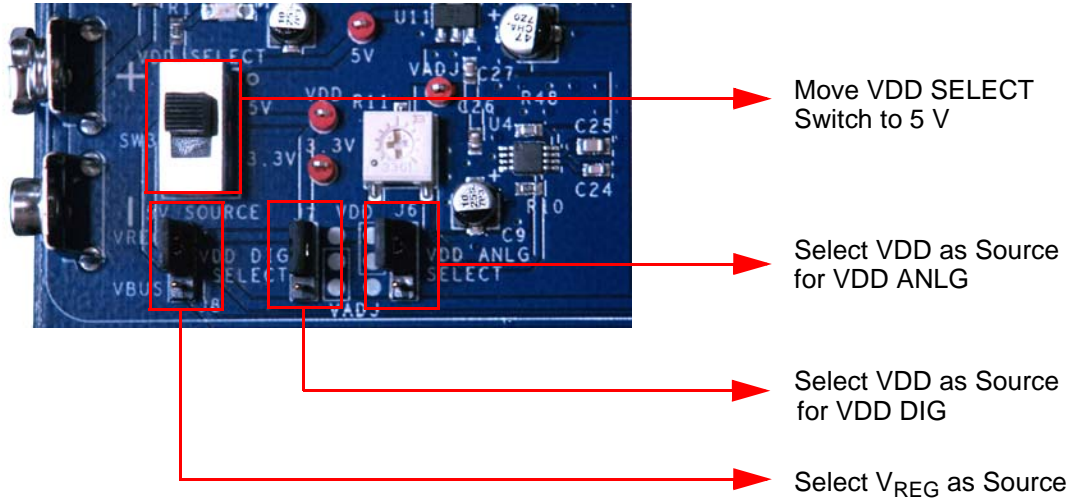

### A.1.2.2 Setting a 3.3-V Supply from VREG

1. Place the jumper on J8 header to select VREG as the source.
2. Move the VDD select switch to select 3.3 V.
3. Place the jumper on J6 header to select VDD as source for VDD ANLG.
4. Place the jumper on J7 header to select VDD as source for VDD DIG.


Figure A-2. Setting a 3.3-V Supply from VREG

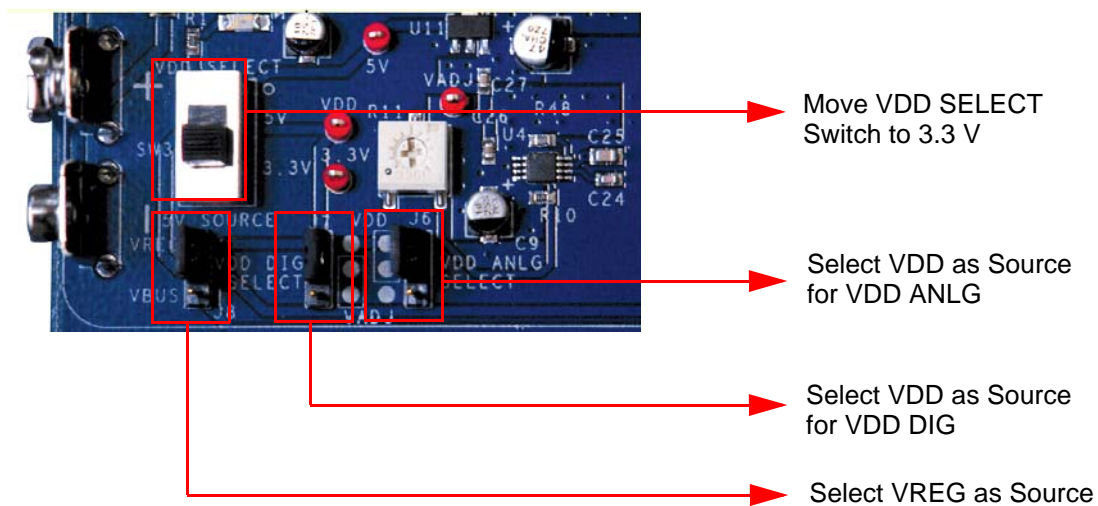

### A.1.2.3 Setting VDD ANLG as VADJ and VDD DIG as VDD for VDD = 3.3 V

1. Place the jumper on J8 header to select VREG as the source.
2. Move the VDD select switch to select 3.3 V.
3. Place the jumper on J6 header to select VADJ as source for VDD ANLG.
4. Place the jumper on J7 header to select VDD as source for VDD DIG.

Figure A-3. Setting VDD ANLG as VADJ and VDD DIG as VDD for VDD = 3.3 V

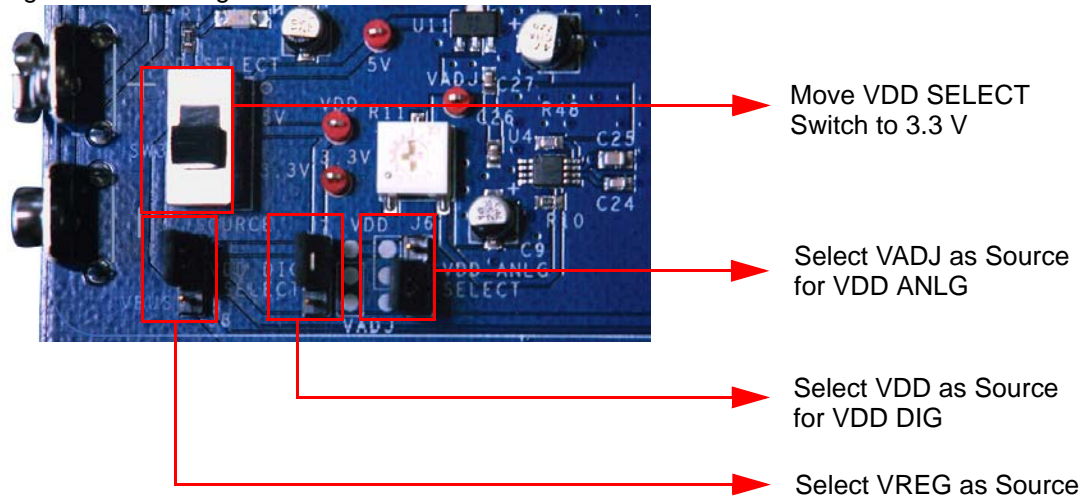


This helps to separate the analog supply from the digital supply and VDD.

### A.1.2.4 Setting VDD DIG as VADJ and VDD ANLG as VDD for VDD = 3.3 V

1. Place the jumper on J8 header to select VREG as the source.
2. Move the VDD select switch to select 3.3 V.
3. Place the jumper on J6 header to select VDD as source for VDD ANLG.
4. Place the jumper on J7 header to select VADJ as source for VDD DIG.

Figure A-4. Setting VDD DIG as VADJ and VDD ANLG as VDD for VDD = 3.3 V

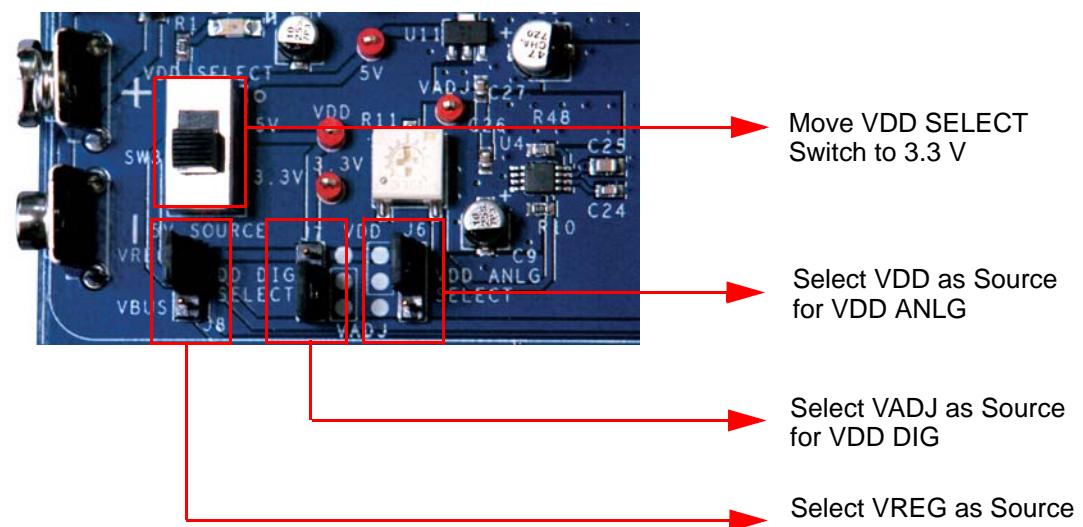


This helps to separate the digital supply from the analog supply and VDD.

### A.1.2.5 Setting a 5-V Supply from VBUS

1. Place the jumper on J8 header to select VBUS as the source.
2. Move the VDD select switch to select the 5 V.
3. Place the jumper on J6 header to select VDD as source for VDD ANLG.
4. Place the jumper on J7 header to select VDD as source for VDD DIG.

Figure A-5. Setting a 5-V Supply from VBUS

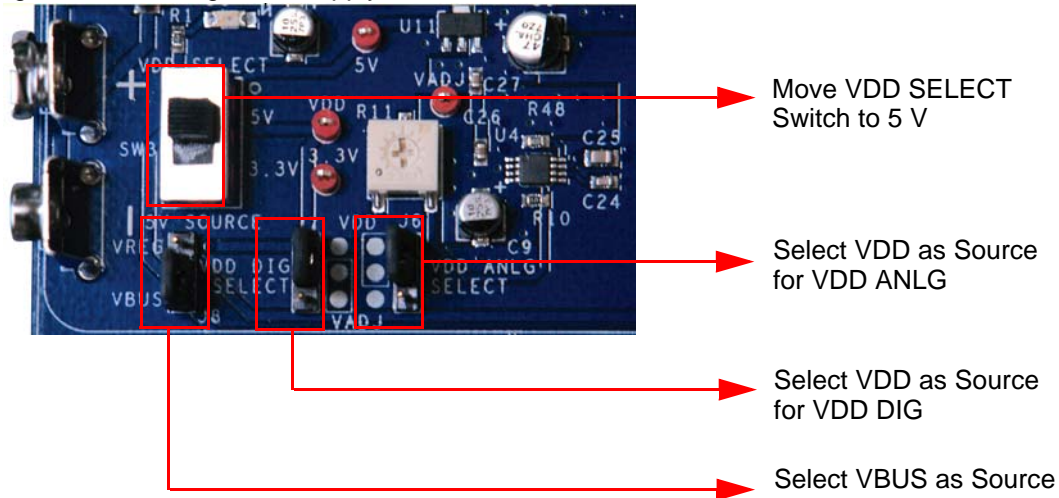


### A.1.2.6 Setting a 3.3-V Supply from VBUS

Due to the nature of the PSoC development board, powering the system from USB 'VBUS' can potentially reset other USB devices on the same hub.

By design, the PSoC development board is capable of drawing more than 500 mA of current during normal operation, which exceeds USB bus power limits. Additionally, the development board exceeds inrush current limits due to 'VBUS' capacitance greater than 10  $\mu$ F. As a result, plugging the PSoC development board into a USB hub can potentially cause other devices on the same hub to reset due to excessive inrush currents. Take care when powering the PSoC development board from 'VBUS'. It is good practice to plug the board into a host root hub, or a "self-powered" external hub when doing USB development. Bus powered applications done outside the realm of the PSoC development board should comply with the USB specification for inrush current limits and recommended bulk capacitance on 'VBUS'. See the [Universal Serial Bus Specification Revision 2.0](#) for more details.

1. Place the jumper on J8 header to select VBUS as the source.
2. Move the VDD select switch to select 3.3 V.
3. Place the jumper on J6 header to select VDD as source for VDD ANLG.
4. Place the jumper on J7 header to select VDD as source for VDD DIG.


Figure A-6. Setting a 3.3-V supply from VBUS

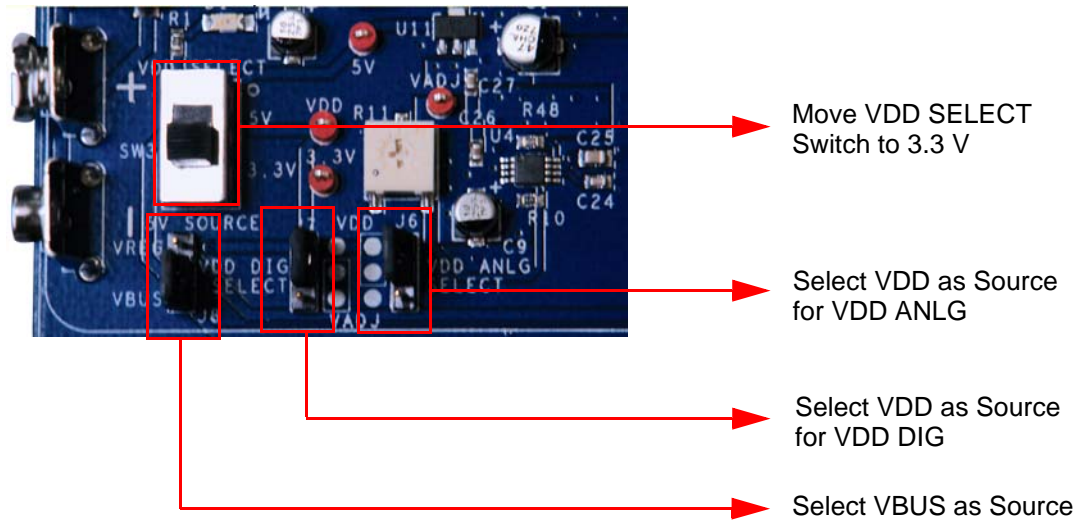

You can measure current from VREG, VBUS, VDD ANLG, VDD DIG and VDDIOs by removing the jumpers and connecting the meter across the respective header.

#### A.1.2.7 J1 - DC Power Jack


Figure A-7. DC Power Jack



Use a 12 V/1 A power supply adapter when powering from the barrel power jack. This input power is VIN.

#### A.1.2.8 9-V Battery Terminals

Figure A-8. Battery Terminals

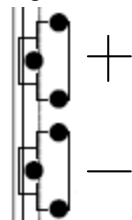

Use a 9-V alkaline battery to connect to the 9-V battery terminals. This input power is VIN.

#### A.1.2.9 J8 - 5-V Source

This header allows you to select the 5 V source from either the onboard 5 V regulator (VREG) or from the USB 5 V rail (VBUS).

#### A.1.2.10 VDD Select Switch

This switch allows you to select either 5 V or 3.3 V. VDD feeds VDD DIG, VDD ANLG, and VDDIO.

#### A.1.2.11 *J7 - VDD DIG Select*

This header allows you to select the PSoC core source power. To power the PSoC core at either 5 V or 3.3 V (based on the position of the VDD select switch), place the jumper on the upper two pins. To power the PSoC core at lower voltages (1.7 V to 4.95 V), place the jumper on the lower two pins. When the jumper is on the lower two pins, you must adjust R11 to tune the adjustable regulator to output the desired voltage.

#### A.1.2.12 *J6 - VDD ANLG Select*

To separate the analog power from the digital power, you can position the jumper on the upper two pins to source analog power at 5 V or 3.3 V (based on the position of the VDD select switch), or on the lower two pins to source analog power at lower voltages (1.5 V to 3.3 V for 3.3-V supply and 1.5 V to 5 V for 5-V supply).

#### A.1.2.13 *R11 - Adjustable Regulator Variable Resistor*


This adjustable resistor is used to tune the VADJ voltage. Turning this variable resistor swings the VADJ voltage between 1.6 V and 3.29 V when the VDD select switch is in the 3.3 V position. When the VDD select switch is in the 5 V position, turning this variable resistor swings the VADJ voltage between 1.7 V and 4.95 V.

### A.1.3 Prototyping Components

#### A.1.3.1 Prototyping Area

**Note** CY8C38 family modules have a 2200-pF capacitor connected between P2[7] and ground. CY8C58LP family modules have a 2200-pF capacitor connected between P15[5] and ground. These configurations provide an external modulator capacitor for CapSense designs. To use P2[7] on CY8C38 family modules or P15[5] on CY8C58LP family modules for anything other than CapSense, it is recommended that C18 on these modules be removed, to avoid disrupting digital or analog signals on this I/O pin.

Figure A-9. Prototyping Area

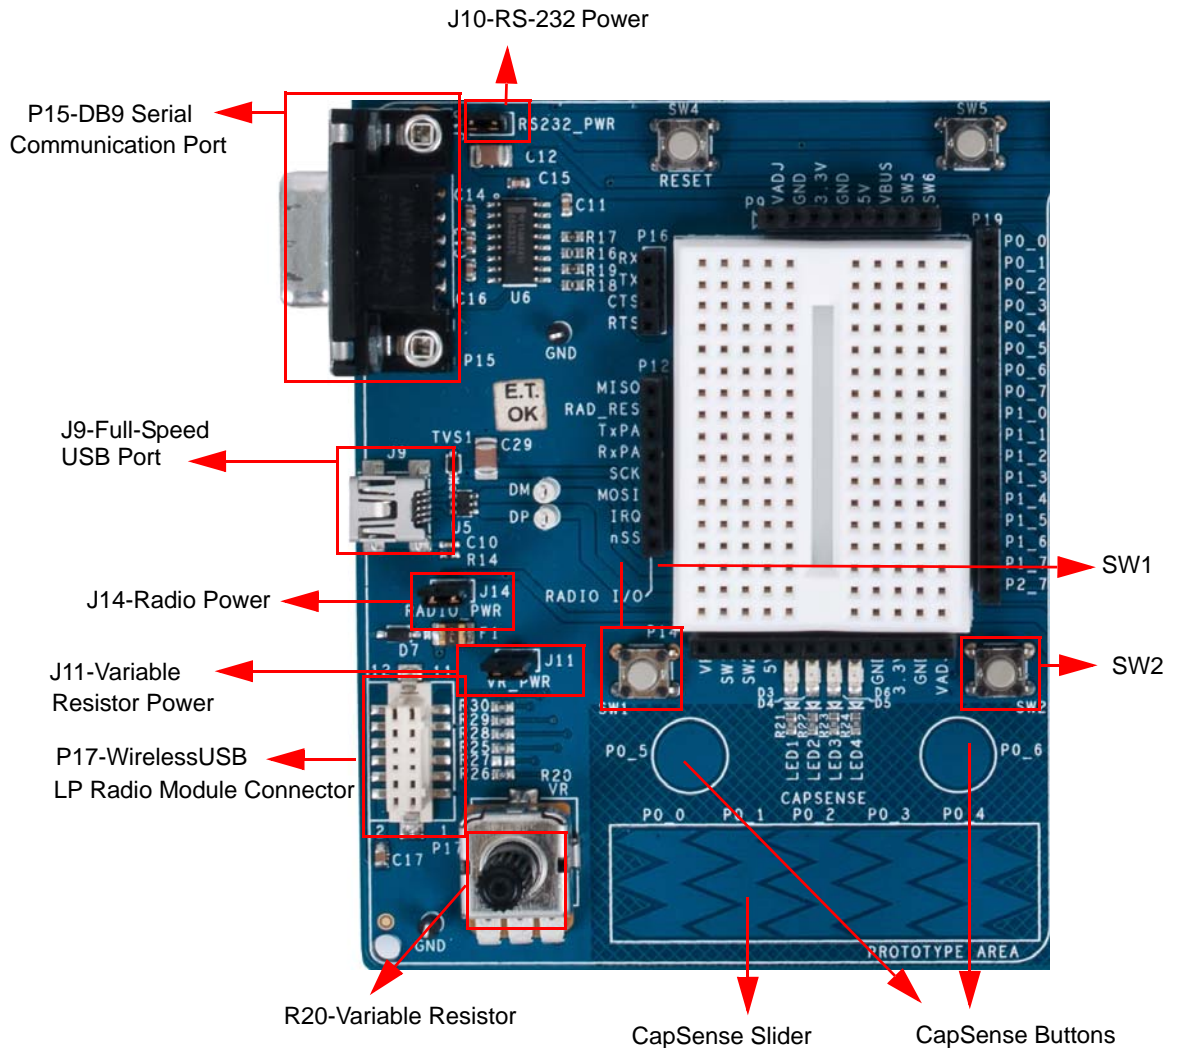

### A.1.3.2 P15 - DB9 Serial Communications Port

This is a standard female DB9 serial communications connector. Four signals are brought from the RS-232 transceiver to receptacle P16. These signals are Rx, Tx, Clear To Send, and Request To Send. To connect these signals to the PSoC I/O pins, use wires to jumper from P16 to P19, where sockets for ports zero and one are available.

Table A-1. Connector Pin Assignments - RS-232 (DTE) Serial Communications Socket

Pin Number	P15
1	(Empty)
2	TX
3	RX
4	(Empty)
5	GND
6	(Empty)
7	CTS
8	RTS
9	(Empty)

### A.1.3.3 J10 - Serial Port Power

Header J10 must be connected to use the serial communications port. Placing a jumper on J10 provides VDD power to the RS-232 transceiver. This power can be either 3.3 V or 5 V, depending on the position of the VDD select switch.

### A.1.3.4 J9 - Full Speed USB Port

The board has a mini-B full speed USB connector. There are also two test points for the differential pair signals D- and D+. These signals are routed to the processor module socket P1, pins 6 and 8 respectively. The power net VBUS is brought into the board through this interface.

### A.1.3.5 P17 - Artaflex WirelessUSB LP Radio Module Receptacle

Receptacle P17 is used specifically for the Artaflex AWP24S WirelessUSB module. Eight signals are routed from this receptacle to P12 receptacle. These signals are four serial peripheral interface (SPI) signals MISO (master-in-slave-out), MOSI (master-out-slave-in), nSS (slave select), SCK (serial clock), an IRQ (interrupt request) and RD\_RESET (radio reset). The other two signals are radio transmit and receive signals.

**Note** These I/O signals must not be greater than 3.3 V.

Table A-2. Connector Pin Assignments - Wireless Radio Module Socket

Pin Number	P17
1	GND
2	V3_3
3	IRQ
4	RD_RESET
5	MOSI
6	nSS
7	SCK
8	MISO

Table A-2. Connector Pin Assignments - Wireless Radio Module Socket (*continued*)

Pin Number	P17
9	GND
10	(Empty)
11	TxPA
12	RxPA

#### A.1.3.6 J14 - Wireless Radio Module Power

Header J14 must be connected to use the Artaflex radio module. Placing a jumper on J14 provides 3.3 V power to the P17 module socket. This power is drawn directly from the 3.3 V regulator.

#### A.1.3.7 R20 - Multipurpose Variable Resistor

The board is equipped with a 10 k $\Omega$  thumbwheel variable resistor referenced to ground. The high side of the resistor is tied to jumper J11. The wiper is tied to a receptacle pin on P14.

#### A.1.3.8 J11 - Variable Resistor Power


Header J11 must be connected to use the variable resistor. Placing a jumper on J11 provides VDD ANLG power to the high side of the resistor.

#### A.1.3.9 SW1, SW2, SW5, and SW6 - Multipurpose Push Button Switches

The board has four multipurpose mechanical push buttons, SW1, SW2, SW5, and SW6, that are referenced to ground. The other sides of the switches are tied to receptacle pins on P14 and P9. The switches follow an inverted logic as they connect ground to receptacle pins on P14 or P9 when pressed.

**Note** SW3 is VDD SELECT, SW4 is RESET switch.

### A.1.4 LCD Module

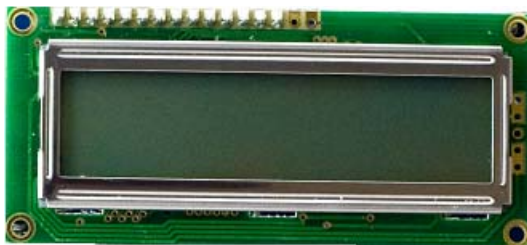

The board has a 2x16 alpha-numeric LCD. I/Os of the module are connected to port two of the PSoC device and are routed to the processor module socket P2. This LCD is rated for 5 V. However, the I/Os have a level translator inline so that signaling may be as low as 1.8 V and still be recognized by the LCD. The header J12 must be connected for the LCD module to be powered; otherwise, it removes power from the level translator. If the LCD module is removed, the receptacle pins of P18 can be used as port 2.

**Note** You can connect R40 (OE resistor, no load part) or short the pads given for R40 to switch the LCD back-light on. The current consumption of the LCD with backlight is around 70 mA; this should be considered when you budget the power supply of the design. You may use the backlight LCD from Lumex Inc (part number: LCM-S01602DSF/A).

Table A-3. Connector Pin Assignments - LCD Module Socket

Pin Number	P18
1	GND
2	VCC_LCD
3	VO
4	RS
5	R/nW
6	EN
7	D0
8	D1
9	D2
10	D3
11	D4
12	D5
13	D6
14	D7
15	BACKLT LED ANODE
16	BACKLT LED CATHODE

#### A.1.4.1 R31 - LCD Contrast Adjustment

The board is equipped with an LCD contrast adjustment resistor R31. Turning the wiper counter-clockwise increases the contrast, while turning the wiper clockwise decreases the contrast.

#### A.1.4.2 J12 - LCD Module Power

Power for the LCD module is provided through header J12. Placing a jumper on the upper two pins shorts the VCC pin of the module to ground. Placing the jumper on the lower two pins provides 5 V to the VCC pin of the module. This 5 V power is taken directly from the onboard 5 V regulator.

### A.1.5 CapSense Elements

The prototyping area has three capacitive sensing elements. There are two CapSense buttons connected directly to port zero pins. In addition, there is a five-segment CapSense slider also connected directly to port zero. Series resistors are placed on these port zero I/Os and should be loaded with appropriate values. A value of  $0\Omega$  is used for general-purpose CapSense applications, but a value of  $560\Omega$  should be used to achieve best performance. The board is loaded with  $0\Omega$  series resistors by default. The presence of CapSense elements does not affect the general purpose use of port zero pins.


### A.1.6 Processor Module

#### A.1.6.1 J2, J3, J4, and J5 - VDDIO Select

These four headers allow you to power the PSoC GPIOs at different voltages. For instance, some of the I/O may be powered at 5 V, some at 3.3 V, and some at 1.8 V. There are four blocks of GPIO, each having its own source power. Each VDDIO header provides power to specific GPIOs and is selectable from VDD, 3.3 V, or VADJ. For details on which GPIOs are powered by which VDDIO header, see the datasheet for the PSoC device used with this board.

For example, VDDIO\_0 is configured to VDD, VDDIO\_1 is configured to 3.3 V, and VDDIO\_2 is configured to VADJ by placing the jumpers in the respective positions, as shown in [Figure A-10](#).

Figure A-10. VDDIO Select

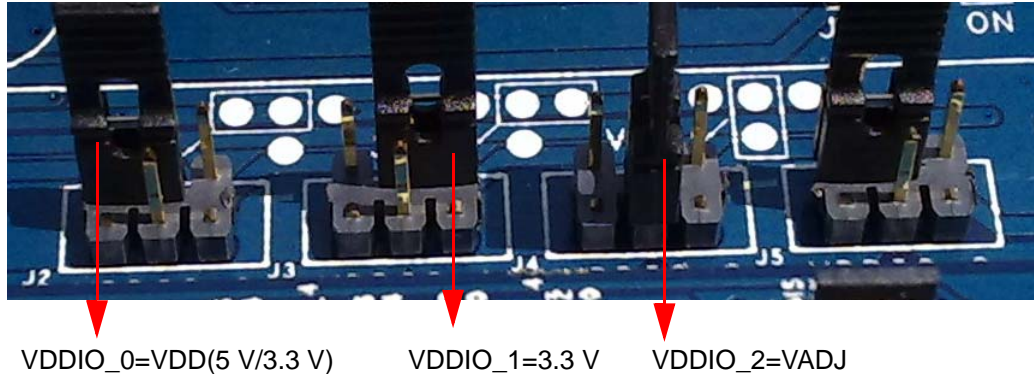

#### A.1.6.2 SW4 - Processor Reset Button

The board has a push button switch that resets the PSoC device attached to the processor module. One side of the switch is tied to the XRES pin of the processor module socket. The other end of the switch is tied to the HW\_RESET pin of the processor module socket. This allows the module designer to tie the HW\_RESET line either high or low, depending on which direction the processor reset is active.

**Note** PSoC 1 devices are active-high reset. Therefore, a light pull-down resistor may be necessary on the XRES pin of designs with these devices to avoid unintentional device resets. PSoC 3 and PSoC 5LP devices are active-low reset. Therefore, a light pull-up resistor may be necessary on the XRES pin of designs with these devices to avoid unintentional device resets.

#### A.1.6.3 U8 - External MHz Oscillator

The board supports the use of an external high frequency 8-pin PDIP oscillator. The speed of the oscillator supported is dependent on the specifications of the PSoC device used. The output of this oscillator is routed to P15[4] on receptacle P2 and TP62 near P2 of the DVK board.

#### A.1.6.4 P1, P2, P3, and P4 - Processor Module Receptacles

Processor modules provide modularity to this board. Sockets P1 to P4 are used to connect a processor module to the board. All supported GPIOs (including special I/Os), along with VDD DIG, VDD ANLG, 5 V, 3.3 V, VBUS, and VBAT (only connected to a surface mount pad on the board) are connected to these receptacles. In addition, each of the VDDIO power pins are connected to these receptacles. The full speed USB D+ and D- signals are also connected to one of the sockets. Processor reset is connected to P1. Any "no connect" pins are brought out to surface mount test pads.


Table A-4. Connector Pin Assignments - Processor Module Sockets

Pin Number	P1 (West)	P2 (North)	P3 (East)	P4 (South)
1	GND	GND	GND	GND
2	VDDD	GND	GND	P7[7]
3	V5_0	P6[1]	P12[2]	NC7
4	GND	P6[0]	P12[3]	NC8
5	VBAT	P6[3]	P8[0]	NC5
6	DM	P6[2]	P8[1]	NC6
7	V3_3	P15[5]	P4[0]	NC3


Table A-4. Connector Pin Assignments - Processor Module Sockets (*continued*)

Pin Number	P1 (West)	P2 (North)	P3 (East)	P4 (South)
8	DP	P15[4]	P4[1]	NC4
9	VBUS	P9[2]	P8[2]	P7[6]
10	VDDIO1	P9[0]	P8[3]	P7[5]
11	P5[6]	P2[1]	P0[0]	P12[0]
12	P5[7]	P2[0]	P0[1]	P12[1]
13	P5[4]	P2[3]	P0[2]	P3[6]
14	P5[5]	P2[2]	P0[3]	P3[7]
15	P12[6]	VDDIO2	VDDIO0	P7[4]
16	P12[7]	P9[3]	VDDA	VDDIO3
17	P1[6]	P2[5]	P0[4]	P3[4]
18	P1[7]	P2[4]	P0[5]	P3[5]
19	P1[4]	P2[7]	P0[6]	P3[2]
20	P1[5]	P2[6]	P0[7]	P3[3]
21	HW_RESET	P9[4]	P8[4]	P3[0]
22	P1[3]	P9[5]	P8[5]	P3[1]
23	P1[1]	P12[5]	P8[6]	P7[2]
24	P1[2]	P12[4]	P8[7]	P7[3]
25	P1[0]	P9[6]	P4[2]	(Empty)
26	P5[3]	P9[7]	P4[3]	(Empty)
27	P5[2]	P6[5]	P4[4]	P7[0]
28	P5[1]	P6[4]	P4[5]	P7[1]
29	P5[0]	P6[7]	P4[6]	NC1
30	XRES	P6[6]	P4[7]	NC2
31	GND	GND	GND	GND
32	GND	GND	P9[1]	GND

Figure A-11. Mechanical Layout Details for Processor Module Connector

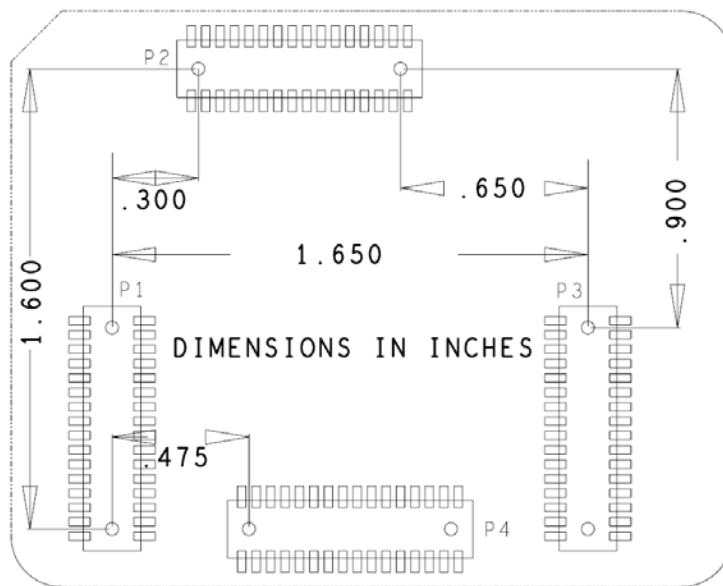

### A.1.7 Expansion Ports

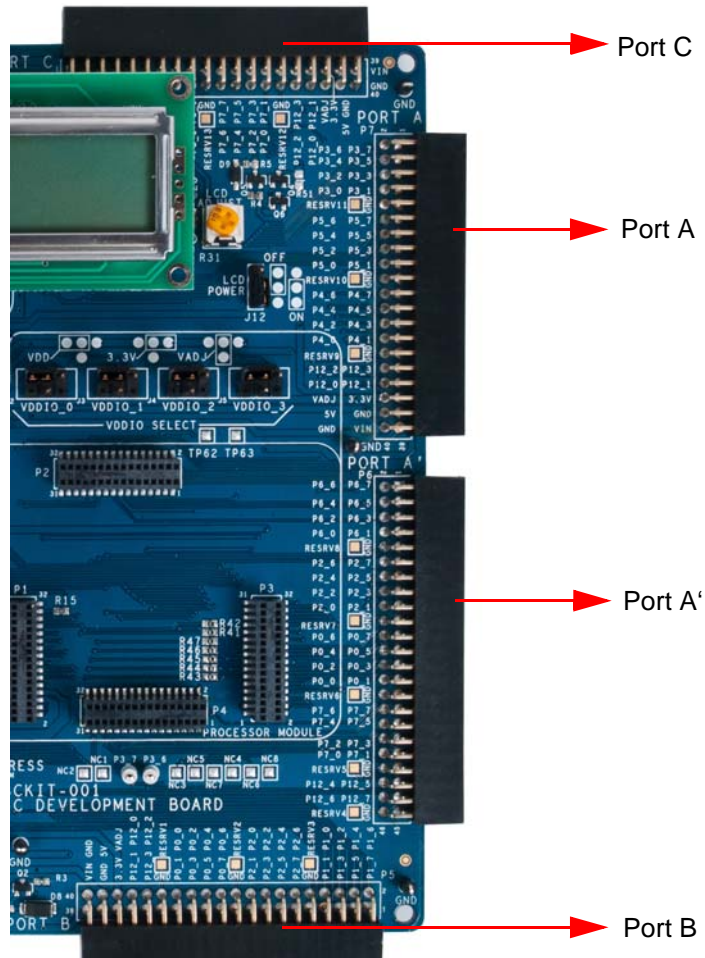

The board accommodates I/O expandability. Around the upper, lower, and right sides of the board are 0.100-inch pitch, dual row right angle receptacles, each having at least three full 8-bit ports (one has four full ports). Each also has four special I/O pins available. Three of the ports have power and ground pins as well. The fourth is simply I/O and ground exclusively. These sockets can be used to join the processor module I/Os with external I/Os through the use of daughter boards.

Table A-5. Connector Pin Assignments - Expansion Port Sockets

Pin Number	P5 (PORT B)	P6 (PORT A')	P7 (PORT A)	P8 (PORT C)
1	P1[7]	P6[7]	P3[7]	P9[7]
2	P1[6]	P6[6]	P3[6]	P9[6]
3	P1[5]	P6[5]	P3[5]	P9[5]
4	P1[4]	P6[4]	P3[4]	P9[4]
5	P1[3]	P6[3]	P3[3]	P9[3]
6	P1[2]	P6[2]	P3[2]	P9[2]
7	P1[1]	P6[1]	P3[1]	P9[1]
8	P1[0]	P6[0]	P3[0]	P9[0]
9	GND	GND	GND	GND
10	RESRV3	RESRV8	RESRV11	RESRV14

Table A-5. Connector Pin Assignments - Expansion Port Sockets (*continued*)

Pin Number	P5 (PORT B)	P6 (PORT A')	P7 (PORT A)	P8 (PORT C)
11	P2[7]	P2[7]	P5[7]	P8[7]
12	P2[6]	P2[6]	P5[6]	P8[6]
13	P2[5]	P2[5]	P5[5]	P8[5]
14	P2[4]	P2[4]	P5[4]	P8[4]
15	P2[3]	P2[3]	P5[3]	P8[3]
16	P2[2]	P2[2]	P5[2]	P8[2]
17	P2[1]	P2[1]	P5[1]	P8[1]
18	P2[0]	P2[0]	P5[0]	P8[0]
19	GND	GND	GND	GND
20	RESRV2	RESRV7	RESRV10	RESRV13
21	P0[7]	P0[7]	P4[7]	P7[7]
22	P0[6]	P0[6]	P4[6]	P7[6]
23	P0[5]	P0[5]	P4[5]	P7[5]
24	P0[4]	P0[4]	P4[4]	P7[4]
25	P0[3]	P0[3]	P4[3]	P7[3]
26	P0[2]	P0[2]	P4[2]	P7[2]
27	P0[1]	P0[1]	P4[1]	P7[1]
28	P0[0]	P0[0]	P4[0]	P7[0]
29	GND	GND	GND	GND
30	RESRV1	RESRV6	RESRV9	RESRV12
31	P12[3]	P7[7]	P12[3]	P12[3]
32	P12[2]	P7[6]	P12[2]	P12[2]
33	P12[1]	P7[5]	P12[1]	P12[1]
34	P12[0]	P7[4]	P12[0]	P12[0]
35	V3_3	P7[3]	V3_3	V3_3
36	VADJ	P7[2]	VADJ	VADJ
37	GND	P7[1]	GND	GND
38	V5_0	P7[0]	V5_0	V5_0
39	VIN	GND	VIN	VIN
40	GND	RESRV5	GND	GND
41	x	P12[5]	x	x
42	x	P12[4]	x	x
43	x	P12[7]	x	x
44	x	P12[6]	x	x
45	x	GND	x	x
46	x	RESRV4	x	x

### A.1.7.1 Expansion Ports A and A'

Expansion port A can be used as I/O ports with three full 8-bit ports: port3, port4, and port5. It has four special I/Os as well as ground and voltage pins. It can be used to join processor module I/Os port3, port4, and port5 with external I/Os through the use of daughter boards.

Expansion port A' can be used as I/O ports with four full 8-bit ports: port0, port2, port6, and port7. It has four special I/Os as well as ground pins. It has no voltage pins. It can be used to join processor module I/Os port0, port2, port6, and port7 with external I/Os through the use of daughter boards.

The main use of port A' is that it can be used together with port A to join processor module I/Os port0, port2, port3, port4, port5, port6, and port7 with external I/Os through the use of daughter boards.

#### A.1.7.2 Expansion Port B

Expansion port B can be used as I/O ports with three full 8-bit ports: port0, port1, and port2. It has four special I/Os as well as ground and voltage pins. It can be used to join processor module I/Os port0, port1, and port2 with external I/Os through the use of daughter boards. It is mainly used in devices with fewer I/Os.

#### A.1.7.3 Expansion Port C

Expansion port C can be used as I/O ports with three full 8-bit ports: port7, port8, and port9. It has four special I/Os as well as ground and voltage pins. It can be used to join processor module I/Os port7, port8, and port9 with external I/Os through the use of daughter boards. It is used for devices with a high I/O count.

#### A.1.7.4 Protection Circuit

The protection circuit consists of two P-channel MOSFET on the power line allowing the power/current to flow from input to output depending on the voltages applied at the external board connectors. This circuit protects the board from voltages above 5.5 V (over voltage) and reversing the power and ground terminals (reverse voltage) while powering the board from external connectors. [Figure A-12](#) and [Figure A-13](#) are protection circuits placed between EBK and the on-board components on the 5-V and 3.3-V line.

Figure A-12. Schematic for Protection Circuit on 5-V Power Line


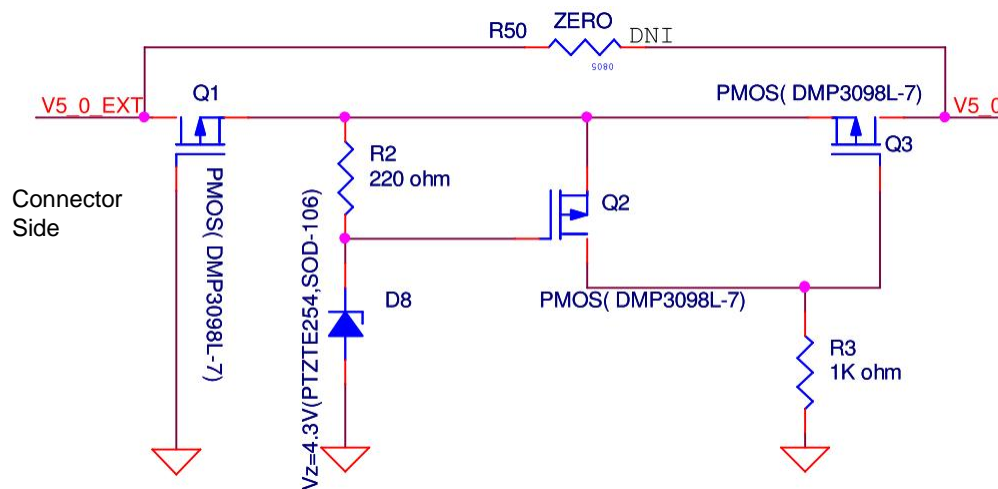


Figure A-13. Schematic for Protection Circuit on 3.3-V Power Line

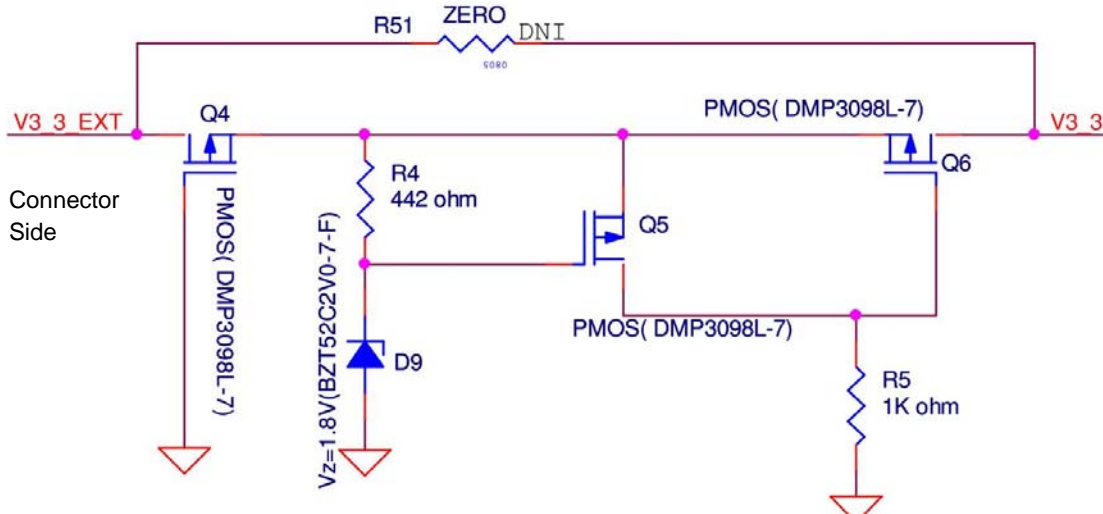

### Functional Description

The protection circuit will protect from a maximum over-voltage or reverse-voltage of 12 Volts. The cut-off voltage on the 5-V line is 5.7 V and on the 3.3-V line is 3.6 V. This means, if you apply more than this voltage level from the external board connector side, the p-MOS Q5 will turn off, thus protecting the PSoC and other on-board components. The current consumption of these protection circuits is less than 6 mA.

When voltage from the external connector is between 1.8 V and 3.3 V, the p-MOS Q4 conducts. Because the voltage across D9 and R4 is the same, the p-MOS Q6 conducts, allowing voltage supply to the DVK.

When the external power supply exceeds 3.3 V, the p-MOS Q5 starts conducting. This eventually turns off p-MOS Q6 at 3.6 V, protecting the DVK from over-voltage.


When a reverse voltage is applied across the protection circuit from the external connector side, Q4 P-MOS will turn off, thus protecting the components on the board from reverse voltage.

If you intend to use the regulator power supply from the board to power the external modules, both the P-MOS Q4 and Q5 will always be on, allowing the flow of current with a maximum of 22 mV drop across the circuit when the current consumed by the external module is 150 mA.


**Note** The working of protection circuit on the 3.3-V line and 5-V line is as described above. For the purpose of explanation, the annotation of 3.3-V protection circuitry (Figure A-13) is used.

## A.2 Schematics

### A.2.1 CY8CKIT-001 PSoC Development Board

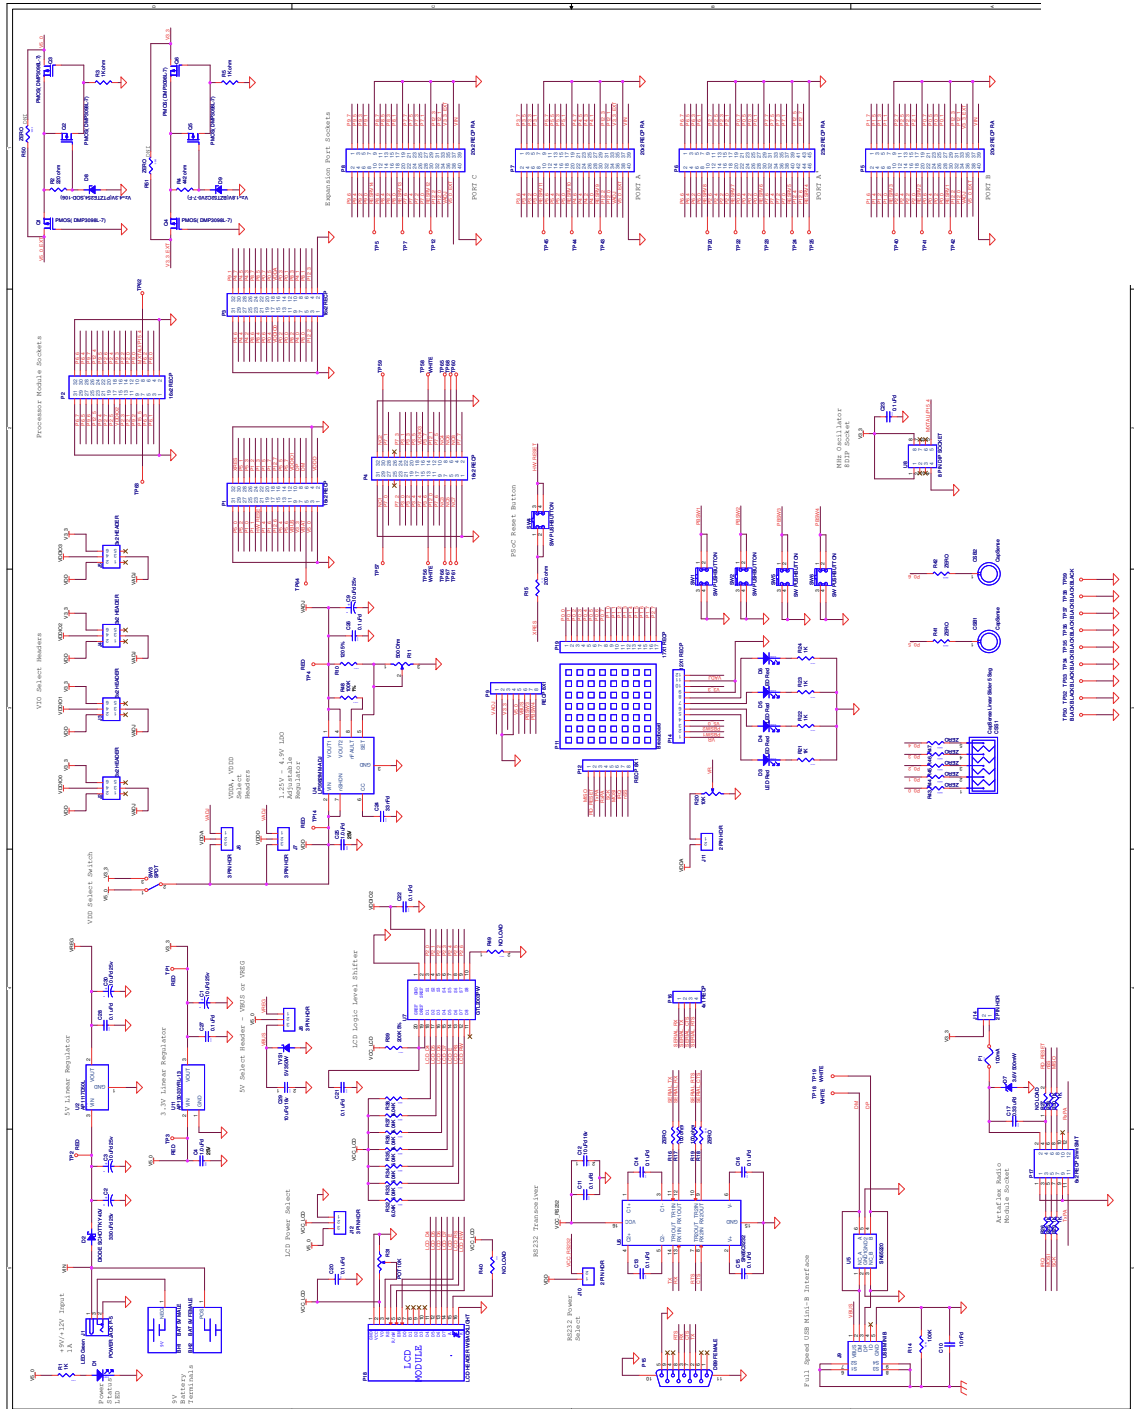


## A.2.2 CY8C28 Family Processor Module

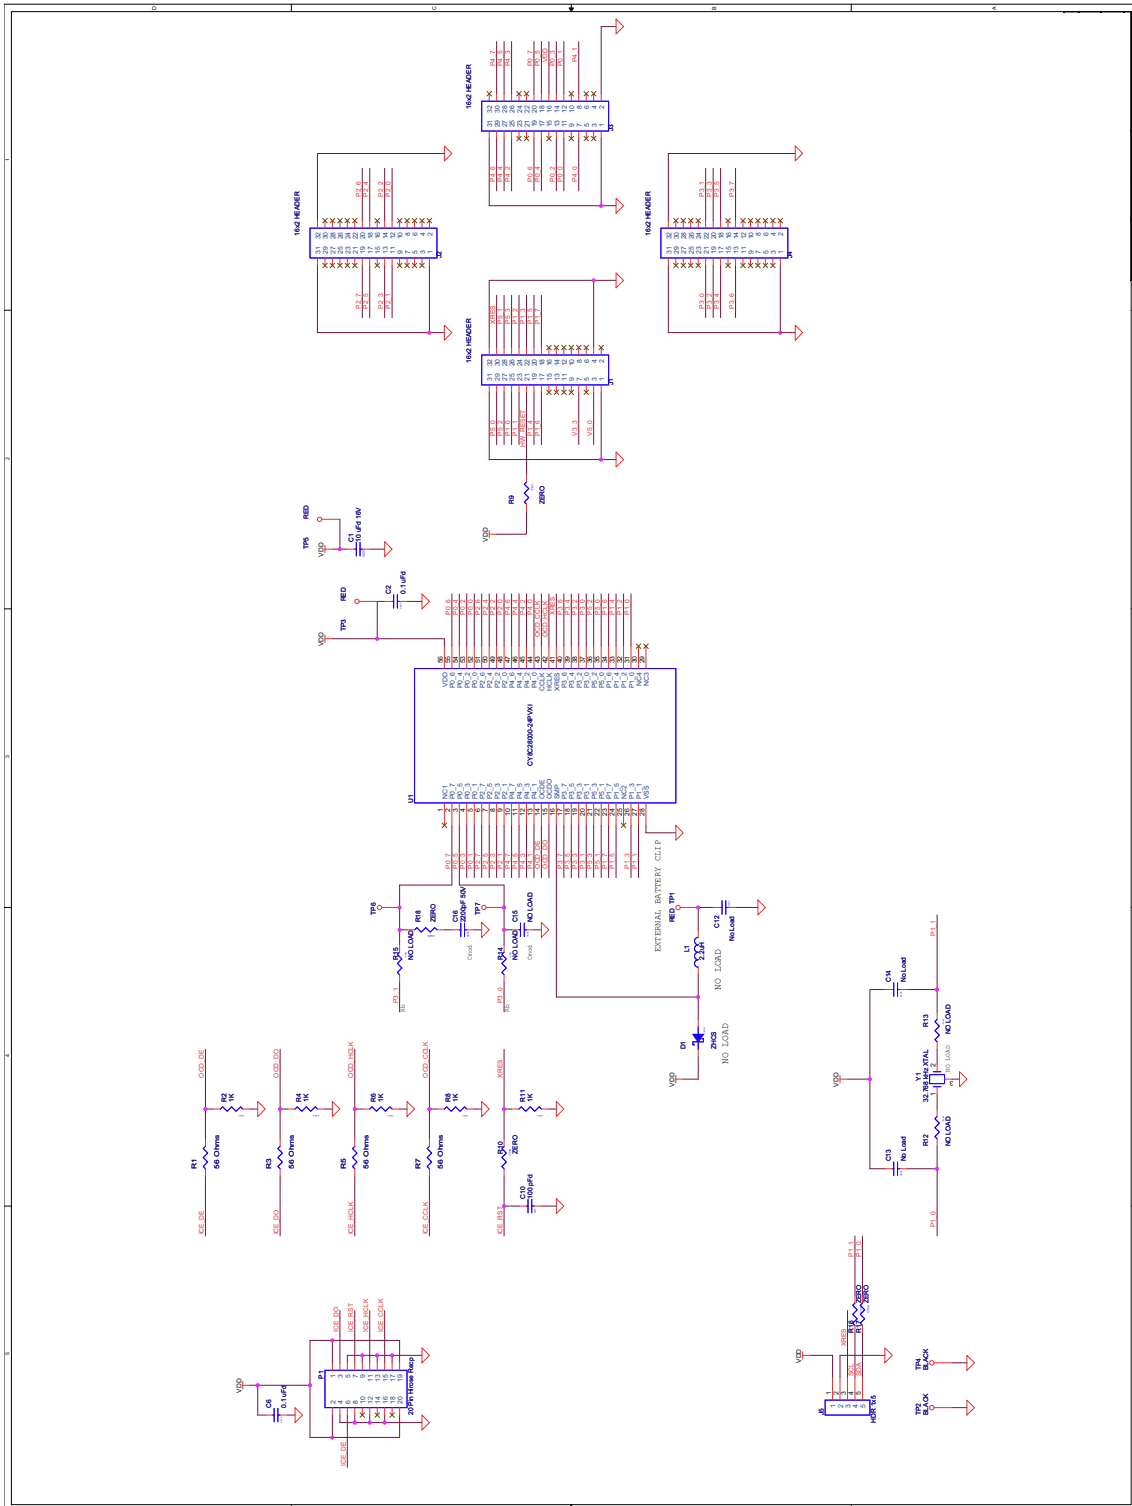




### A.2.4 CY8C38 Family Processor Module

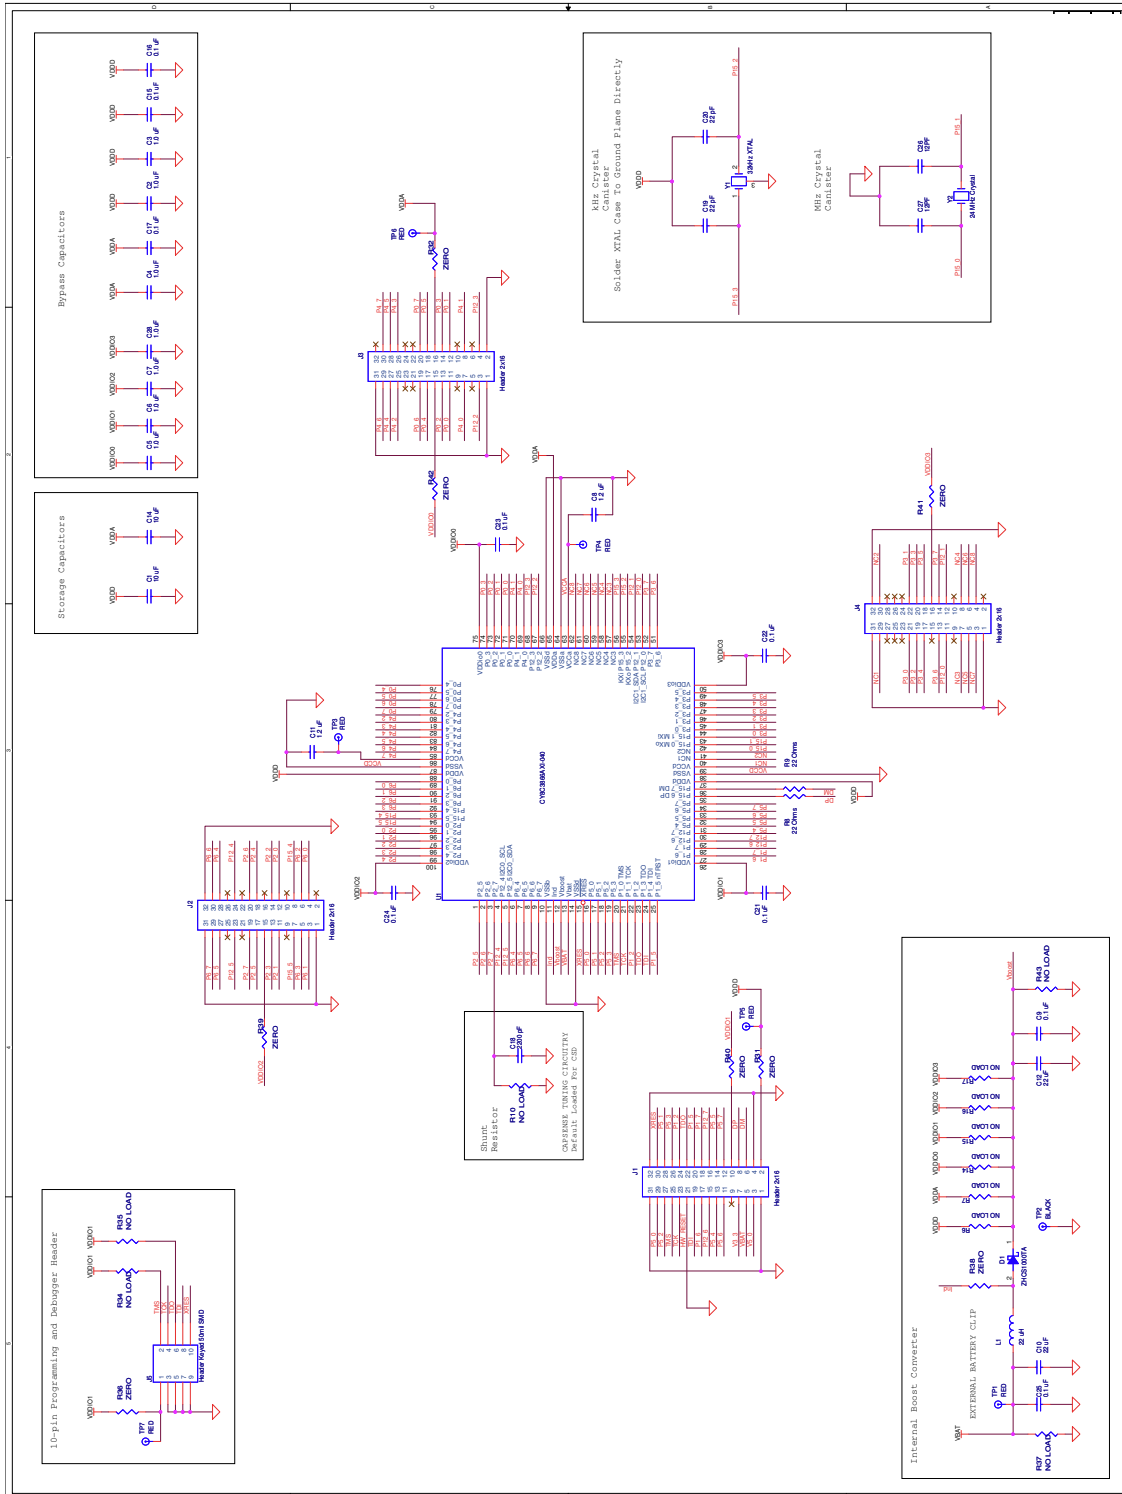

## A.2.5 CY8C58LP Family Processor Module

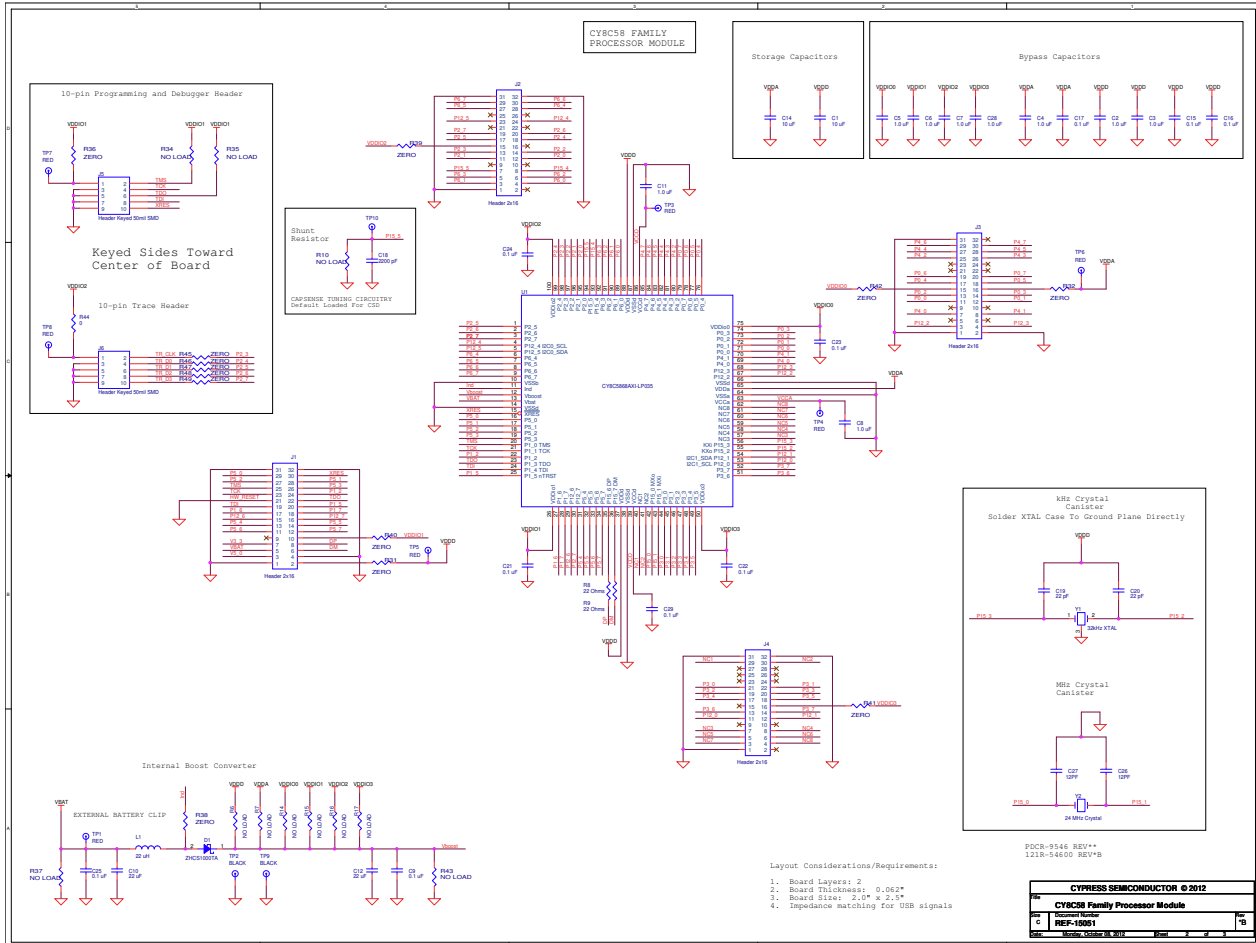

## A.2.6 Enable Boost Component in PSoC 3 and PSoC 5LP Processor Modules

To enable the boost convertor functionality, make the following hardware changes on the board.

- Populate resistors R6, R7, R14, R15, R16, R17, and R38 with 0-Ω resistors.
- Ensure that R37 and R43 are removed.

The input power supply to the boost converter must be provided through the Vbat. After making these changes, you can make a boost converter based design by making the appropriate configurations in the project.

## A.3 Bill of Materials

### A.3.1 CY8CKIT-001 PSoC Development Board

Item	Qty	Reference	Description	Manufacturer	Mfr Part Number
1	1	N/A	Schematic	N/A	REF-14647 REV *C
2	1	N/A	Assembly Drawing	N/A	121R-46100 REV *C
3	1	N/A	Fab Drawing	N/A	N/A
4	1	N/A	Assembly Adhesive Label	N/A	121R-46100 REV *C
5	1	PCB	PRINTED CIRCUIT BOARD	Cypress Semiconductor	PDCR-9461 REV *B
6	1	BH1	BATTERY HOLDER 9V Male PC MT	Keystone Electronics	593
7	1	BH2	BATTERY HOLDER 9V Female PC MT	Keystone Electronics	594
8	4	C1,C3,C9,C30	CAP ELECT 10UF 25V VS SMD size B	Panasonic - ECG	EEE-1EA100WR
9	1	C2	CAP ELECT 330UF 25V FK SMD	Panasonic - ECG	EEE-FK1E331P
10	2	C4,C25	CAP CERAMIC 1.0UF 25V X5R 0603 10%	Taiyo Yuden	TMK107BJ105KA-T
11	1	C10	CAP 10000PF 16V CERAMIC X7R 0402	Yageo America	04022R103K7B20D
12	10	C11,C13,C14,C15, C16,C21,C22,C26, C27,C28	CAP .10UF 16V CERAMIC X7R 0603	Kemet	C0603C104J4RACTU
13	2	C12,C29	CAP 10UF 16V CERAMIC X5R 1210	Panasonic - ECG	ECJ-4YB1C106K
14	1	C17	CAP .33UF 16V CERAMIC X7R 0805	Panasonic - ECG	ECJ-2YB1C334K
15	2	C20,C23	CAP .1UF 50V CERAMIC X7R 0805	Panasonic - ECG	ECJ-2YB1H104K
16	1	C24	CAP 33nF 50V CERAMIC X8R 0603	TDK Corporation	C1608X8R1H333K
17	1	D1	LED GREEN CLEAR 1206 SMD	Chicago Miniature Lamp, Inc	CMD15-21VGC/TR8
18	1	D2	DIODE SCHOTTKY 40V 1.5A SMA	Vishay IR	10MQ040NTRPBF
19	4	D3,D4,D5,D6	LED HI EFF RED CLEAR 1206 SMD	Chicago Miniature Lamp, Inc	CMD15-21VRC/TR8
20	1	D7	DIODE ZENER 3.6V 500MW SOD123	ON Semiconductor	MMSZ4685T1G
21	1	D8	DIODE ZENER 4.3V 1W SOD-106	Rohm Semiconductor	PTZTE254.3B
22	1	D9	DIODE ZENER 2V 500MW SOD-123	Diodes Inc	BZT52C2V0-7-F
23	1	F1	FUSE RESETTABLE .10A 30V HLD SMD	Bourns	MF-USMF010-2
24	1	J1	CONN JACK POWER 2.1mm PCB RA	CUI	PJ-102A
25	4	J2,J3,J4,J5	CONN HEADER 6POS .100 STR 15AU	FCI	67996-206HLF
26	4	J6,J7,J8,J12	CONN HEADR BRKWAY .100 03POS STR	Tyco Electronics/Amp	9-146280-0-03
27	1	J9	CONN USB MINI B SMT RIGHT ANGLE	Tyco	1734035-2
28	3	J10,J11,J14	CONN HEADR BRKWAY .100 02POS STR	Tyco Electronics	9-146280-0-02
29	4	P1,P2,P3,P4	CONN FEMALE 32POS DL .050 SMT GOLD	Samtec	RSM-116-02-S-D-LC
30	3	P5,P7,P8	CONN FEMALE 40POS DL .100 R/A GOLD	Sullins Electronics Corp.	PPPC202LJBN-RC
31	1	P6	CONN FEMALE 46POS DL .100 R/A GOLD	Sullins Electronics Corp.	PPPC232LJBN-RC
32	1	P11	SOLDERLESS BREADBOARD 1.8x1.35	3M	923273-I
33	2	P12,P9	CONN RECT 8POS .100 VERT	3M	929850-01-08-RA
34	1	P14	CONN RECT 12POS .100 VERT	3M	929850-01-12-RA
35	1	P15	CONN D-SUB RCPT R/A 9POS 30GOLD	AMP Division of TYCO	5747844-4
36	1	P16	CONN RECEPT 4POS .100 VERT GOLD	3M	929850-01-04-RA
37	1	P17	CONN RECEPT 12POS 2mm SMD TIN	Hirose Electric Co. LTD.	DF11Z-12DS-2V(20)
38	1	P18	CONN REC .100 14POS for LCM-S01602DSR/A	3M	929850-01-14-RA
39	1	P19	CONN RECT 17POS .100 VERT	3M	929850-01-17-RA
40	6	Q1,Q2,Q3,Q4,Q5, Q6	MOSFET P-CH 30V 3.8A SOT23-3	Diodes Inc	DMP3098L-7
41	12	R1,R3,R5,R21,R22, R23,R24,R25,R26, R28,R29,R30	RES 1.0K OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ102V

Item	Qty	Reference	Description	Manufacturer	Mfr Part Number
42	1	R2	RES 220 OHM 1/10W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF2200V
43	1	R4	RES 442 OHM 1/10W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF4420V
44	1	R10	RES 120 OHM 1/10W 5% 0603 SMD	Panasonic-ECG	ERJ-3GEYJ121V
45	1	R11	TRIMPOT 500 OHM 6mm SQ SMD	Bourns Inc.	3361P-1-501GLF
46	1	R14	RES 100K OHM 1/16W 5% 0402 SMD	Panasonic - ECG	ERJ-2GEJ104X
47	1	R15	RES 200 OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ201V
48	9	R16,R18,R41,R42,R43,R44,R45,R46,R47	RES ZERO OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEY0R00V
49	2	R17,R19	RES 100 OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ101V
50	1	R20	POT 10K OHM 1/8W CARB VERTICAL	CTS Electrocomponents	296UD103B1N
51	1	R31	POT 10K CARBON LAYDOWN (103)	Panasonic - ECG	EVN-D8AA03B14
52	7	R32,R33,R34,R35,R36,R37,R38	RES 6.04K OHM 1/10W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF6041V
53	1	R39	RES 200K OHM 1/10W 5% 0603 SMD	Panasonic-ECG	ERJ-3GEYJ204V
54	1	R48	RES 100K OHM 1/10W 1% 0603 SMD	Yageo	RC0603FR-07100KL
55	5	SW1,SW2,SW4,SW5,SW6	SWITCH TACT 6mm MOM 150GF	Omron	B3F-1022
56	1	SW3	SWITCH SLIDE MINI SPDT PCMNT SLV	APEM Components	GH36P010001
57	5	TP1,TP2,TP3,TP4,TP14	TEST POINT 43 HOLE 65 PLATED RED	Keystone Electronics	5000
58	4	TP18,TP19,TP56,TP58	TEST POINT 43 HOLE 65 PLATED WHITE	Keystone Electronics	5002
59	9	TP30,TP32,TP33,TP34,TP35,TP36,TP37,TP38,TP39	TEST POINT 43 HOLE 65 PLATED BLACK	Keystone Electronics	5001
60	1	TVS1	TVS 5.0 VOLT 350 WATT SOD-323	Semtech	SD05.TCT
61	1	U2	IC REG LDO 1.0A 5.0V TO-252	Diodes Inc	AP1117D50L-13
62	1	U4	IC REG LDO 0.3A ADJ 8MSOP	National Semiconductor	LP3982IMM-ADJ/NOPB
63	1	U5	IC SINGLE USB PORT TVS SOT-23-6	Texas Instruments	SN65220DBV
64	1	U6	IC LINE DRVR/RCVR RS232 16-SOIC	Texas Instrumnts	SN65C3232ED
65	1	U7	IC XLATR 8BIT LV 20-TSSOP	NXP Semiconductors	GTL2003PW
66	1	U8	IC SOCKET 8PIN MS TIN/TIN .300	Mill-Max Manufacturing	110-44-308-41-001000
67	1	U11	IC REG LDO 300mA 3.3V SOT89R	Diodes Inc	AP130-33YRL-13
68	1	NA	5V LCD Module 16POS w/14 pin header installed	Lumex	LCM-S01602DSR/A
69	5	NA	BUMPER WHITE .500X.23 SQUARE	Richco Plastics Co.	RBS-3R
70	11	NA	SHUNT GOLD W/HANDLE, BLACK	Kobiconn	151-8030-E
<b>Do Not Install</b>					
71	2	R27,R49	RES NO LOAD 0603 SMD	NA	NA
72	2	R50,R51	RES 0.0 OHM 1/10W 5% 0805 SMD	Panasonic - ECG	ERJ-6GEY0R00V
73	1	R40	RES NO LOAD 0805 SMD	NA	NA

## A.3.2 CY8C28 Family Processor Module

Item	Qty	Reference	Description	Manufacturer	Mfr Part Number
1	1	PCB	PRINTED CIRCUIT BOARD	Cypress Semiconductor	PDC-09547 REV **
2	1	C1	CAP CER 10UF 16V X5R 0805	Murata Electronics North America	GRM21BR61C106KE15L
3	2	C2,C6	CAP .10UF 16V CERAMIC X7R 0603	Kemet	C0603C104J4RACTU
4	1	C10	CAP 100PF 50V CERAMIC 0402 SMD	Panasonic - ECG	ECJ-0EC1H101J
5	1	C16	CAP CER 2200PF 50V 5% C0G 0603	Murata	GRM1885C1H222JA01D
6	4	J1,J2,J3,J4	CONN MALE 32POS DL .050 TH SHRD GOLD	Centronic Precision Electronic Co.	HHLHS32GB1
7	1	J5	CONN HEADER 5POS 0.1 VERT KEYED	Molex	22-23-2051
8	1	P1	HDR VERT 20POS HIROSE	Hirose	DF12-5.0-20DP-0.5V-81
9	4	R1,R3,R5,R7	RES 56 OHM 1/10W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ560V
10	5	R2,R4,R6,R8,R11	RES 1.0K OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ102V
11	1	R9	RES ZERO OHM 1/16W 0402 SMD	Panasonic - ECG	ERJ-2GE0R00X
12	4	R10,R16,R17,R18	RES ZERO OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEY0R00V
13	3	TP1,TP3, TP5	TEST POINT 43 HOLE 65 PLATED RED	Keystone Electronics	5000
14	2	TP2,TP4	TEST POINT 43 HOLE 65 PLATED BLACK	Keystone Electronics	5001
15	2	NA	SMT Spacer/nut	PEM	SMTSO-440-8ET
16	1	U1	IC, 56 PIN SSOP OCD	Cypress Semiconductor	CY8C28000-24PVXI
17	1	LABEL1	PCA # Label		120-09547-0 REV **
<b>No Load Components</b>					
18	3	C12,C13, C14	CAP NO LOAD 0805	NA	NA
19	1	C15	CAP 0603 NO LOAD	NA	NA
20	4	R12,R13,R14,R15	RES NO LOAD 0603 SMD	NA	NA
21	1	D1	DIODE SCHOTTKY 40V 1.0A SOT23-3	Zetex	ZHCS1000TA
22	1	L1	INDUCTOR FIXED SMD 2.2uH 10%	Panasonic-ECG	ELJ-FC2R2KF
23	1	Y1	CRYSTAL 32.768 kHz CYL 12.5PF	Citizen America Corporation	CFS206 32.768KDZF-UB
24	2	TP6,TP7	TEST POINT 43 HOLE 65 PLATED WHITE	Keystone Electronics	5002

## A.3.3 CY8C29 Family Processor Module

Item	Qty	Reference	Description	Manufacturer	Mfr Part Number
1	1	C1	CAP CER 10UF 16V X5R 0805	Murata Electronics North America	GRM21BR61C106KE15L
2	4	C2,C3,C4,C6	CAP .10UF 16V CERAMIC X7R 0603	Kemet	C0603C104J4RACTU
3	1	C10	CAP 100PF 50V CERAMIC 0402 SMD	Panasonic - ECG	ECJ-0EC1H101J
4	4	J1,J2,J3, J4	CONN MALE 32POS DL .050 TH SHRD GOLD	Centronic Precision Electronic Co.	HHLHS32GB1
5	1	J5	CONN HEADER 5POS 0.1 VERT KEYED	Molex	22-23-2051
6	1	P1	RECP VERT 20POS HIROSE	Hirose	DF12-5.0-20DP-0.5V-81
7	4	R1,R3,R5,R7	RES 56 OHM 1/10W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ560V
8	5	R2,R4,R6,R8, R11	RES 1.0K OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEYJ102V
9	1	R9	RES ZERO OHM 1/16W 0402 SMD	Panasonic - ECG	ERJ-2GE0R00X
10	3	R10,R12, R13	RES ZERO OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEY0R00V
11	2	TP1,TP3	TEST POINT 43 HOLE 65 PLATED RED	Keystone Electronics	5000
12	1	TP2	TEST POINT 43 HOLE 65 PLATED BLACK	Keystone Electronics	5001
13	1	U1	PSoC Mixed-Signal Array	Cypress Semiconductor	CY8C29000-24AXI
14	2	NA	SMT Spacer/nut	PEM	SMTSO-440-8ET
15	1	PCB	PRINTED CIRCUIT BOARD	Cypress Semiconductor	PDCR-9464 REV*A
16	1	LABEL1	PCA # Label		121R-46400 REV*B
<b>No Load Components</b>					
17	3	C12,C13, C14	CAP NO LOAD 0805	NA	NA
18	1	D1	DIODE SCHOTTKY 30V 200mW SOT23	Diodes Inc	BAT54-7-F
19	1	L1	INDUCTOR FIXED SMD 2.2uH 10%	Panasonic-ECG	ELJ-FC2R2KF
20	1	Y1	CRYSTAL 32.768 kHz CYL 12.5PF	Citizen America Corporation	CFS206 32.768KDZF-UB

## A.3.4 CY8C38 Family Processor Module

Item	Qty	Reference	Description	Manufacturer	Mfr Part Number
1	1	N/A	Schematic	N/A	REF-14889 REV *D
2	1	N/A	Assembly Drawing	N/A	121R-49400 REV *D
3	1	N/A	Fab Drawing	N/A	N/A
4	1	N/A	Assembly Adhesive Label	N/A	121R-49400 REV *D
5	1	N/A	PCB	Cypress Semiconductor	PDCR-9494 REV **
6	2	C1,C14	CAP CER 10UF 16V X5R 0805	Murata Electronics North America	GRM21BR61C106KE15L
7	7	C2,C3,C4,C5,C6,C7,C28	CAP CERAMIC 1.0UF 10V X5R 0603	Kemet	C0603C105K8PACTU
8	2	C8,C11	CAP CERAMIC 1.2UF 10V X5R 0805	Kemet	C0805C125K8PACTU
9	2	C9,C25	CAP .10UF 16V CERAMIC X7R 0603	Kemet	C0603C104J4RACTU
10	2	C10,C12	CAP CER 22UF 10V 10% X5R 1210	Kemet	C1210C226K8PACTU
11	7	C15,C16,C17,C21,C22,C23,C24	CAP .10UF 10V CERAMIC X5R 0402	Kemet	C0402C104K8PACTU
12	1	C18	CAP CER 2200PF 50V 5% C0G 0603	Murata	GRM1885C1H222JA01D
13	2	C19,C20	CAP CERAMIC 22PF 50V 0603 SMD	Panasonic - ECG	ECJ-1VC1H220J
14	1	D1	DIODE SCHOTTKY 40V 1A SOT23	Zetex	ZHCS1000TA
15	4	J1,J2,J3,J4	CONN MALE 32POS DL .050 TH SHRD GOLD	Centronic Precision Electronic Co.	HHLHS32GB1
16	1	J5	CONN HEADER 10 PIN 50MIL KEYED SMD	Samtec	FTSH-105-01-L-DV-K
17	1	L1	INDUCTOR SHIELD PWR 22UH 7032	TDK Corporation	SLF7032T-220MR96-2-PF
18	2	R8,R9	RES 22 OHM 1/16W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF22R0V
19	8	R31,R32,R36,R38,R39,R40,R41,R42	RES ZERO OHM 1/16W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEY0R00V
20	6	TP1,TP3,TP4,TP5,TP6,TP7	TEST POINT 43 HOLE 65 PLATED RED	Keystone Electronics	5000
21	1	TP2	TEST POINT 43 HOLE 65 PLATED BLACK	Keystone Electronics	5001
22	1	U1	PSoC3 Mixed-Signal Array	Cypress Semiconductor	CY8C3866AXI-040
23	1	Y1	CRYSTAL 32.768 kHz CYL 12.5PF	Citizen America Corporation	CFS206 32.768KDZF-UB
24	2	C26,C27	CAP, CER, 12 pF, 50V, 5%, COG, 0603, SMD	Murata Electronics North America	GRM1885C1H120JA01D
25	1	Y2	CRYSTAL, 24 MHz, 30 ppm, HC49, SMD	ECS Inc.	ECS-240-12-5PX-TR
<b>Do Not Install</b>					
26	6	R6,R7,R14,R15,R16,R17	RES NO LOAD 0805 SMD	NA	NA
27	5	R10,R34,R35,R37,R43	RES NO LOAD 0603 SMD	NA	NA

### A.3.5 CY8C58LP Family Processor Module

Item	Qty	CY Part Number	Reference	Description	Manufacturer	Mfr Part Number
1	1	630-60082-01 Rev**	N/A	Schematic	N/A	630-60082-01 Rev**
2	1	620-60083-01 Rev**	N/A	Assembly Drawing	N/A	620-60083-01 Rev**
3	1	610-60081-01 Rev**	N/A	Fab Drawing	N/A	610-60081-01 Rev**
4	1	620-60083-01 Rev**	N/A	Assembly Adhesive Label	N/A	620-60083-01 Rev**
5	1	600-60083-01 Rev**	N/A	PCB	N/A	600-60083-01 Rev**
6	2	700-00105	C1,C14	CAP, CER, 10 uF, 16 V, 5%, X5R, 0805, SMD	Murata Electronics North America	GRM21BR61C106KE15L
7	7	700-00111	C2,C3,C4,C5,C6,C7,C28	CAP, CER, 1.0 uF, 10 V, 10%, X5R, 0603, SMD	Kemet	C0603C105K8PACTU
8	2	700-00118	C8,C11	CAP, CER, 1.0 uF, 10 V, 10%, X5R, 0805, SMD	Murata	GRM219R61A105KC01D
9	2	700-00104	C9,C25	CAP, CER, 0.1 uF, 16 V, 5%, X7R, 0603, SMD	Kemet	C0603C104J4RACTU
10	2	700-00112	C10,C12	CAP, CER, 22 uF, 10 V, 10%, X5R, 1210, SMD	Kemet	C1210C226K8PACTU
11	8	700-00001	C15,C16,C17,C21,C22,C23,C24,C29	CAP, CER, 0.1 uF, 16 V, 10%, X7R, 0402, SMD	Kemet	C0402C104K4RACTU
12	1	700-00094	C18	CAP, CER, 2200 pF, 50V, 5%, COG, 0603, SMD	Murata	GRM1885C1H222JA01D
13	2	700-00012	C19,C20	CAP, CER, 22 pF, 50V, 5%, COG, 0603, SMD	Panasonic - ECG	ECJ-1VC1H220J
14	1	810-00007	D1	DIODE, SCHOTTKY, 40 V, 1 A, ZHCS1000TA, SOT-23, SMD	Zetex	ZHCS1000TA
15	4	400-00051	J1,J2,J3,J4	CONN, HDR, 2x16, 0.05", GOLD, TH	Centronic Precision Electronic Co.	HHLHS32GB1
16	2	400-00061	J5,J6	CONN, HDR, KEYED, 2x5, 0.050", Gold, SMD	Digilent	161-026
17	1	820-00006	L1	IND, FIXED, 22 uH, 20%, .960 A, 7032, SMD	TDK Corporation	SLF7032T-220MR96-2-PF
18	2	600-00208	R8,R9	RES 22 OHM 1/16W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF22R0V
19	13	620R-10519	R31,R32,R36,R38,R39,R40,R41,R42,R45,R46,R47,R48,R49	RES ZERO OHM 1/10W 5% 0603 SMD	Panasonic - ECG	ERJ-3GEY0R00V
20	1	600-00165	R44	RES, 0.0 Ohms, 1/8 W, 5%, 0805, SMD	Panasonic - ECG	ERJ-6GEY0R00V
21	7	400-00001	TP1,TP3,TP4,TP5,TP6,TP7,TP8	CONN, TEST POINT, RED, TH	Keystone Electronics	5000
22	2	400-00002	TP2,TP9	CONN, TEST POINT, BLACK, TH	Keystone Electronics	5001
23	1	CY8C5868AXI-LP035	U1	IC, PSoc5LP,CY8C5868AXI-LP035, TQFP-100, SMD	Cypress Semiconductor	CY8C5868AXI-LP035
24	1	850R-13480	Y1	CRYSTAL 32.768 KHZ CYL 12.5PF CFS308	Citizen America Corporation	CFS206 32.768KDZF-UB
25	2	700-00048	C26,C27	CAP, CER, 12 pF, 50V, 5%, COG, 0603, SMD	Murata Electronics North America	GRM1885C1H120JA01D

Item	Qty	CY Part Number	Reference	Description	Manufacturer	Mfr Part Number
26	1	850-00003	Y2	CRYSTAL, 24 MHz, 30 ppm, HC49, SMD	ECS Inc.	ECS-240-12-5PX-TR
<b>Do Not Install</b>						
27	6	NA	R6,R7,R14,R15,R16, R17	RES NO LOAD 0805 SMD	NA	NA
28	5	NA	R10,R34,R35,R37,R43	RES NO LOAD 0603 SMD	NA	NA
29	1	NA	TP10	TEST POINT 43 HOLE 65 PLATED WHITE	NA	NA
<b>Additional assembly instructions:</b>						
<ol style="list-style-type: none"> <li>1. Assemble the primary side (Top) through the hole components first. Then, assemble the secondary side (Bottom) components.</li> <li>2. Ensure J5 and J6 are installed with the keyed side of the header facing the inside of the board.</li> </ol>						

# Appendix B. MiniProg3



## B.1 MiniProg3 LEDs

MiniProg3 provides five indicator LEDs:

- Upper Left - Busy: A red LED that lights when an operation (such as programming or debug) is in progress.
- Lower Left - Status: A green LED that lights when the device is enumerated on the USB bus and flashes when the MiniProg3 receives USB traffic.
- Upper Right - Target Power: A red LED that lights to indicate that the MiniProg3 is supplying power to the target connectors. Note that it does not light when target power is detected but not being supplied by MiniProg3.
- Lower Right - Aux: A yellow LED reserved for future use.
- Middle - No Label: A yellow LED that indicates the configuration state of the device. It flashes briefly during the initial configuration of the device. If this LED lights solid, a configuration error has occurred and MiniProg3 must be disconnected from the USB port and reconnected.

## B.2 Programming in Power Cycle Mode

Do not perform power cycle mode programming with PSoC Programmer on the CY8CKIT-001. This is due to the design of the CY8C38 family module. VTARG of the MiniProg3 is wired exclusively to VDDIO1 of the chip on the module. For power cycle programming to work, VTARG needs to be wired to VDDD.

## B.3 Interface Pin Assignment Table

5-Pin # <sup>a</sup>	10-Pin # <sup>a</sup>	JTAG <sup>b</sup>	SWD	SWV	ISSP	I2C
1	1	Vtarg	Vtarg	Vtarg	Vtarg	Vtarg
2	3,5,7,9	GND	GND	GND	GND	GND
3	10	TRST		SWO	XRES	INT
4	4	TCK	SCK		SCLK	SCLK
5	2	TMS	SDIO		SDAT	SDAT
	6	TDO				
	8	TDI				

Future upgrades may be possible to support these modes

- a. The 5- and 10-pin connectors are not connected together on the I/O pins
- b. JTAG is supported only on the 10-pin connector

## **B.4 Protection Circuitry**

The Vtarg and I/O pins of the two interface connectors are protected from ESD events and momentary short circuits by a group of TVS (Transient Voltage Suppressor) diodes. These diodes provide a 15-KV ESD event protection for each pin, and will clamp the pin levels to a safe voltage in the event of a short circuit. The Vtarg pins are protected by a shared, 5-V clamp device capable of shunting 350 W of transient power. Each I/O pin is similarly protected by a 5 V, 30 W device.

## **B.5 Level Translation**

The design provides level translators that interfaces with any I/O voltage in the range of 1.2 V to 5.5 V without damage and function properly. Two different level translators are used in the design.

# Appendix C. MiniProg3 Technical Description



The MiniProg3 is a protocol translation device. It enables PC host software to communicate through high-speed USB to the target device to be programmed or debugged. This is shown in Figure C-1. The device side communication protocol can be one of several standards, and can occur over either of two connectors. Table C-1 lists the protocols that are supported by each connector. MiniProg3 enables communication with target devices using I/O voltage levels from 1.5 V to 5.5 V. In addition, MiniProg3 can provide power to a simple target board, at one of four voltage levels.

Figure C-1. System Block Diagram

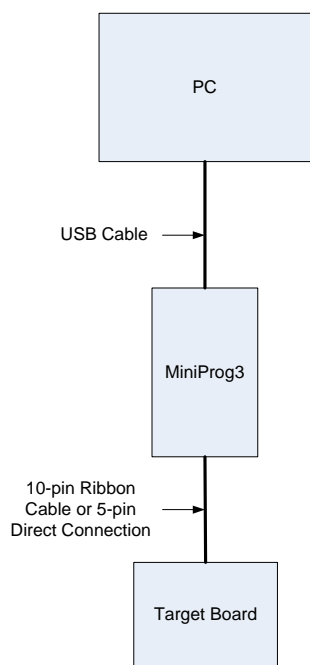


Table C-1. Connectors/Communication Protocol Support

Connector	ISSP	JTAG	SWD and SWV <sup>a</sup>	I <sup>2</sup> C
5-pin	Supported	N/A	SWD	Supported
10-pin	N/A	Supported	SWD and SWV	N/A

a. SWV trace is only available with SWD debugging.

## C.1 Interfaces

### C.1.1 ISSP

In-system serial programming (ISSP) is a Cypress legacy interface used to program the PSoC 1 family of microcontrollers. MiniProg3 supports programming PSoC 1 devices through the 5-pin connector only.

For more information about the ISSP interface, see the PSoC 1 Technical Reference Manual.

### C.1.2 JTAG

The Joint Test Action Group (JTAG) standard interface is supported by many high-end microcontrollers, including the PSoC 3 and PSoC 5LP families. This interface allows a daisy chain bus of multiple JTAG devices. MiniProg3 supports programming and debugging PSoC 3 and PSoC 5LP devices using JTAG, through the 10-pin connector only.

### C.1.3 SWD/SWV

Recent ARM based devices have introduced a new serial debugging standard called serial wire debug (SWD). The PSoC 3 and PSoC 5LP family implements this standard, which offers the same programming and debug functions as JTAG, except the boundary scan and daisy chain. SWD uses fewer pins of the device than the JTAG standard. MiniProg3 supports programming and debugging PSoC 3 and PSoC 5LP devices, using SWD, through the 5-pin or 10-pin connector.

The single wire viewer (SWV) interface, also introduced by ARM, is used for program and data monitoring, where the firmware may output data in a method similar to 'printf' debugging on PCs, using a single pin. MiniProg3 supports monitoring of PSoC 3 and PSoC 5LP firmware, using SWV, through the 10-pin connector and in conjunction with SWD only.

### C.1.4 I<sup>2</sup>C™

A common serial interface standard is the Inter-IC Communication (I<sup>2</sup>C) standard by Philips. It is mainly used for communication between microcontrollers and other ICs on the same board, but can also be used for intersystem communications. MiniProg3 implements an I<sup>2</sup>C multimaster host controller that allows the tool to exchange data with I<sup>2</sup>C enabled devices on the target board. For example, this feature may be used to tune CapSense designs.

For more information on the PSoC 3 and PSoC 5LP JTAG, SWD, SWV, and I<sup>2</sup>C interfaces, see the PSoC 3 and PSoC 5LP Technical Reference Manual. For more information on PSoC 1 interfaces, see the PSoC 1 Technical Reference Manual.


## C.2 Connectors

**Warning** It is recommended that a keyed 10-pin or 5-pin connector be used on the target board applications as programmer/debugger headers for the MiniProg3. The I/Os of the MiniProg3 have limited series protection against over current. Therefore, plugging the MiniProg3 into a programming/debugger header backwards can potentially damage the MiniProg3.

### C.2.1 5-Pin Connector

The 5-pin connector is configured as a single row with a 100-mil pitch. It is designed to mate with a Molex model 22-23-2051 (straight) or 22-05-3051 (right angle) male header, with key tab. The signal assignment is shown in this figure.


Figure C-2. 5-Pin Connector with Pin Assignments

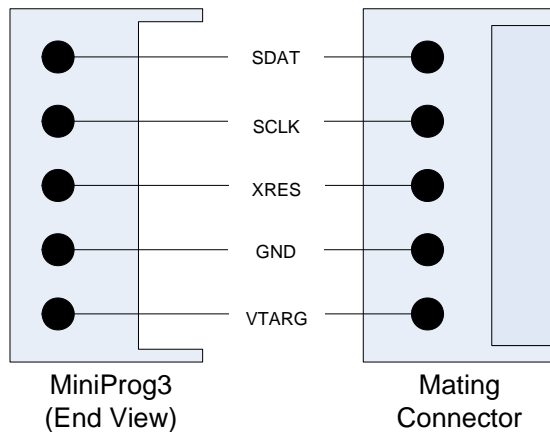

### C.2.2 10-Pin Connector

The 10-pin connector is configured as a dual row with a 50-mil pitch. It is used with a ribbon cable (provided) to mate to a similar connector on the target board. The recommended mating connectors are the Samtec FTSH-105-01-L-DV-K (surface mount) and the FTSH-105-01-L-D-K (through hole) or similar available from other vendors. The signal assignment is shown in this figure.

Figure C-3. 10-Pin Connector with Pin Assignments

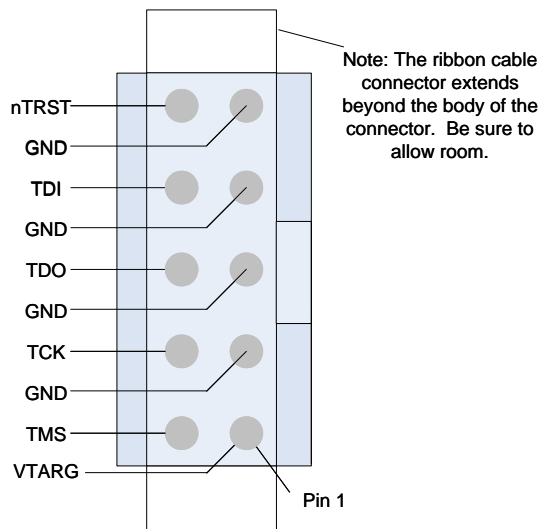

Here is a summary of the protocols and related pin assignments.

Table C-2. Communication Protocol Pin Assignments

Protocol	Signal	5-Pin	10-Pin
ISSP	SCLK	4	
	SDAT	5	
	XRES	3	
JTAG	TMS		2
	TCK		4
	TDO		6
	TDI		8
	XRES		10
SWD/SWV	SDIO	5	2
	SCK	4	4
	SWV <sup>a</sup>		6
	XRES	3	10
I2C	SCK	4	
	SDA	5	

a. SWV trace is only available in conjunction with SWD debugging.

### C.3 Power

MiniProg3 requires a connection to the Vddio supply of the target device to set the voltage level used for communication. This is required regardless of the communication protocol and the port selected. One of the connectors' VTARG pins must be connected to the Vddio supply of the target device. For PSoC 3 and PSoC 5LP, this is the Vddio1 supply, because this is the supply used to drive the debug pins. Failing to connect VTARG, or connecting it to the wrong supply results in the MiniProg3 being unable to communicate with the target device.

On boards where there is a single power supply for the entire board, the MiniProg3 can, in some cases, supply power to the board. This supply is limited to approximately 200 mA and is protected against excess current draw. The power supply voltage can be selected from one of 1.8 V, 2.5 V, 3.3 V, or 5 V. The 5-V supply may be as low as 4.25 V or as high as 5.5 V, as it is supplied directly from the USB port.

# Appendix D. PSoC Creator DWR




The PSoC Creator Design-Wide Resources (DWR) system provides a single location to manage all the resources in your design. These resources include pins, clocks, interrupts, DMA, and so on. Each new design project provides a default design-wide resources file (.cydwr) file with the same name as the project.

A brief explanation of each tab is provided here. See **Help > Topics > Using Design Entry Tools > Design-Wide Resources** for more details of each editor in the DWR file.


The Pins tab of the DWR file or the Pin Editor allows you to manually assign the pins used in the schematic to the PSoC.

Figure D-1. DWR File - Pin Editor

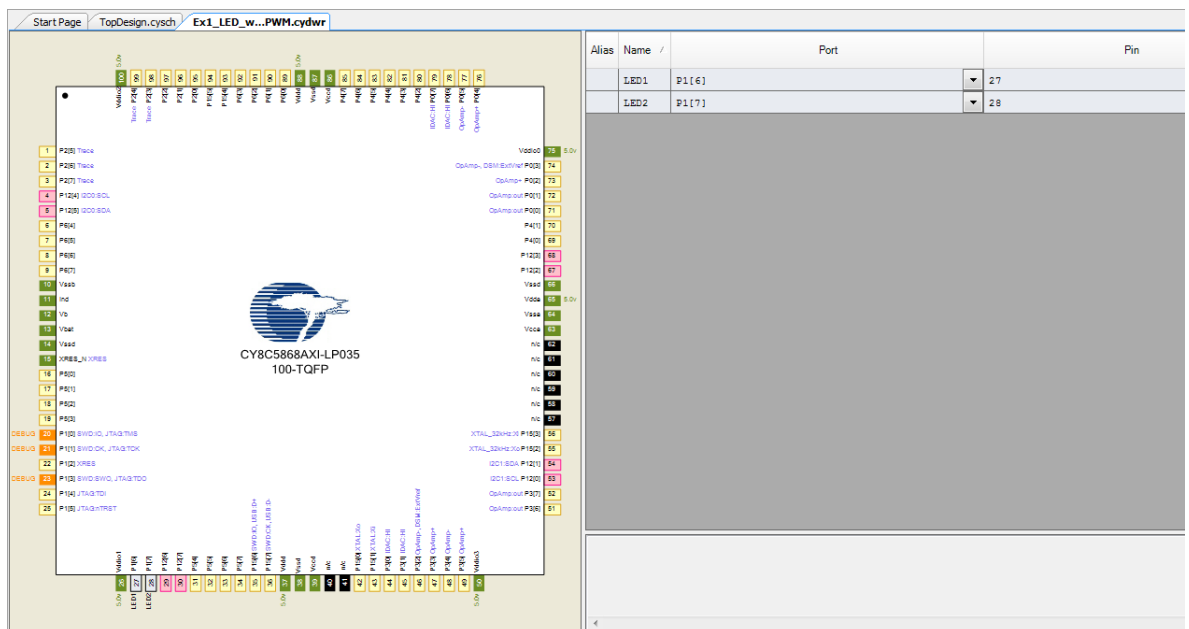


The Analog tab or the Analog Device Editor provides an interconnect view of the PSoC 3 and PSoC 5LP devices along with place-and-route results for a particular design. The editor also allows for manual place-and-route with the ability to lock-down all or some of the results.

Figure D-2. DWR File - Analog Device Editor

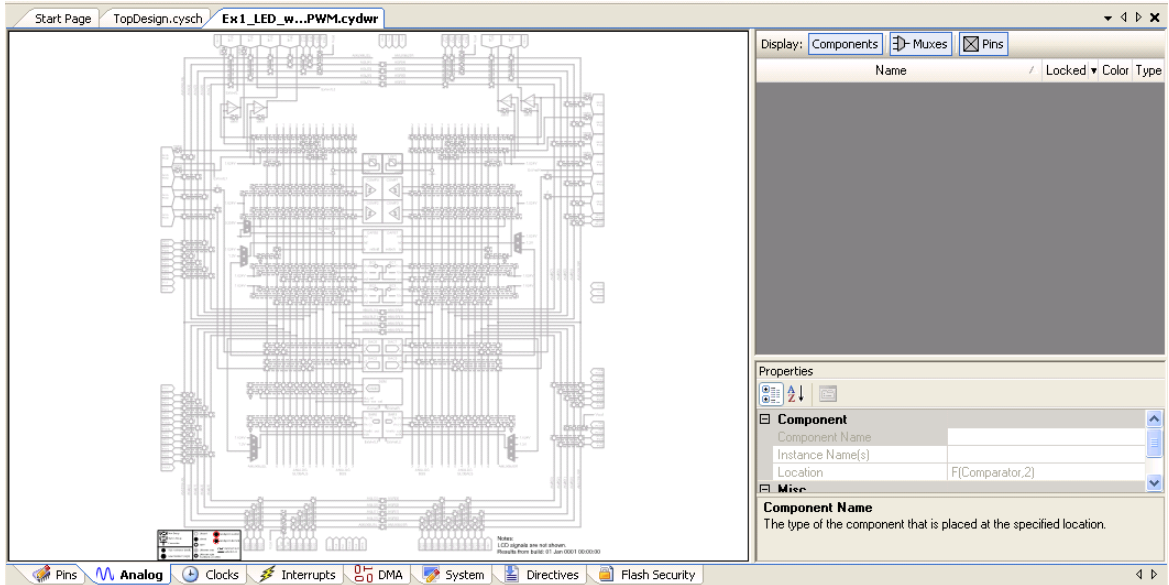


The Clocks tab or the Clock Editor is a design-wide resources tool to create and edit clocks. This tool allows you to view all clocks, add and delete design-wide clocks, as well as edit design-wide and system clocks.

Figure D-3. DWR File - Clock Editor

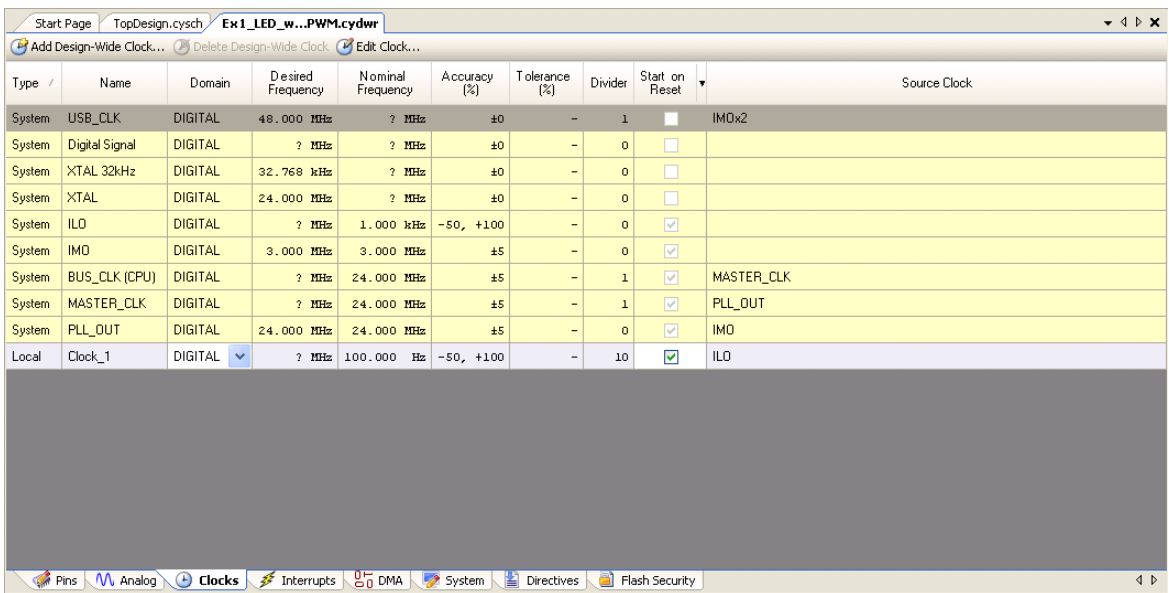


The Interrupts tab or the Interrupt Editor allows you to change the priority of interrupt service routines (ISRs) in your design.

Figure D-4. DWR File - Interrupt Editor

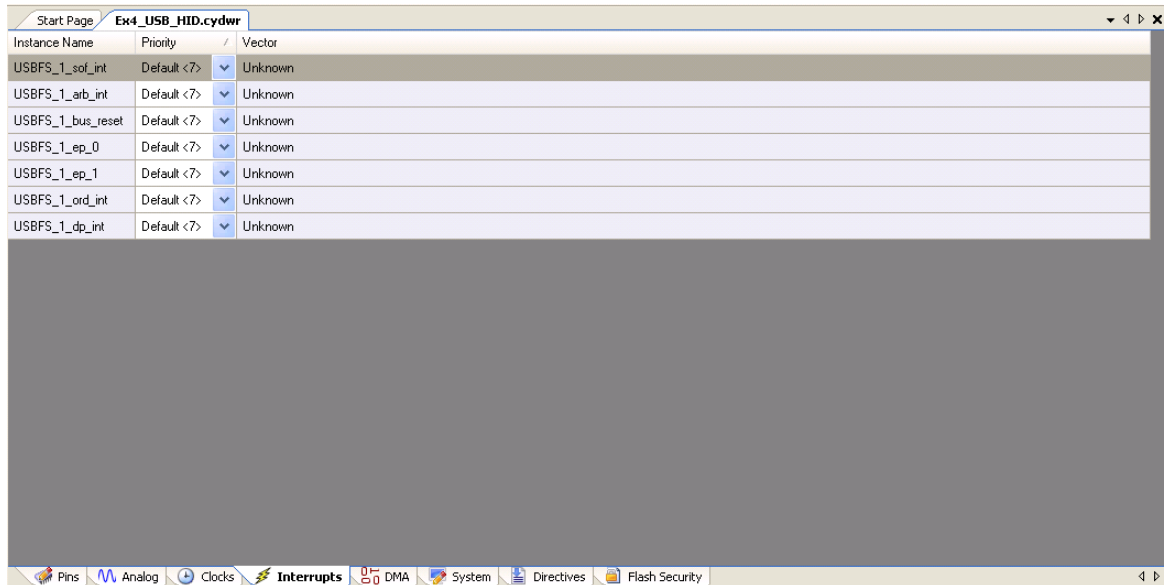


**Note** If no interrupts are used in your design, the Interrupt Editor displays the message shown in the following figure.

Figure D-5. Message for No Interrupts

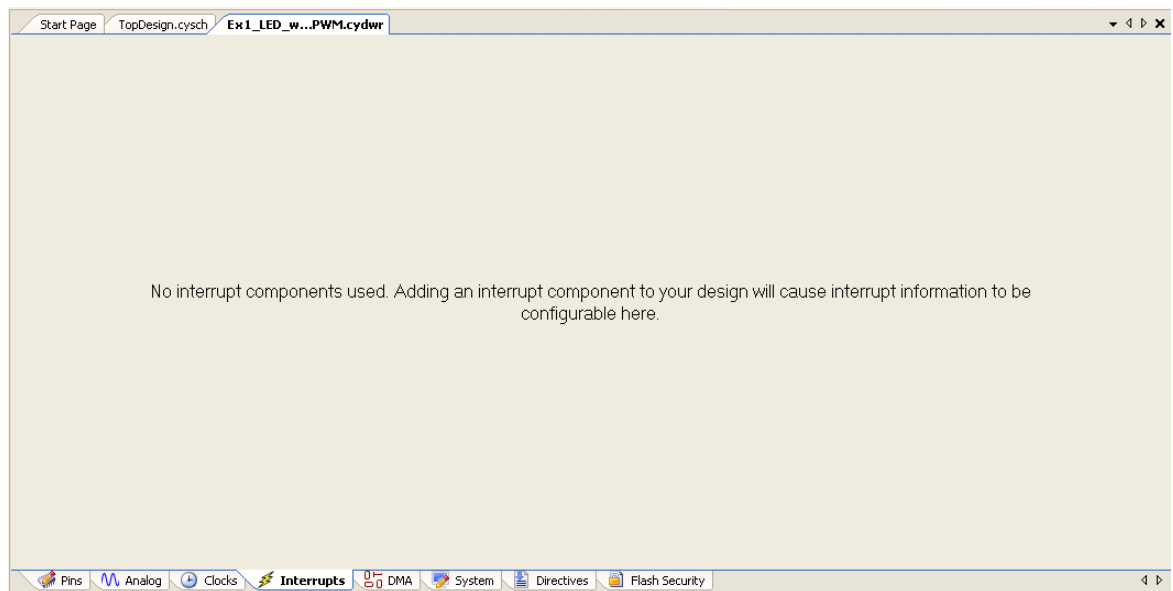


The DMA tab or the DMA Editor displays all the direct memory access (DMA) components that have been directly placed in the design, as well as all the DMA components "inside" placed components.

Figure D-6. DWR File - DMA Editor

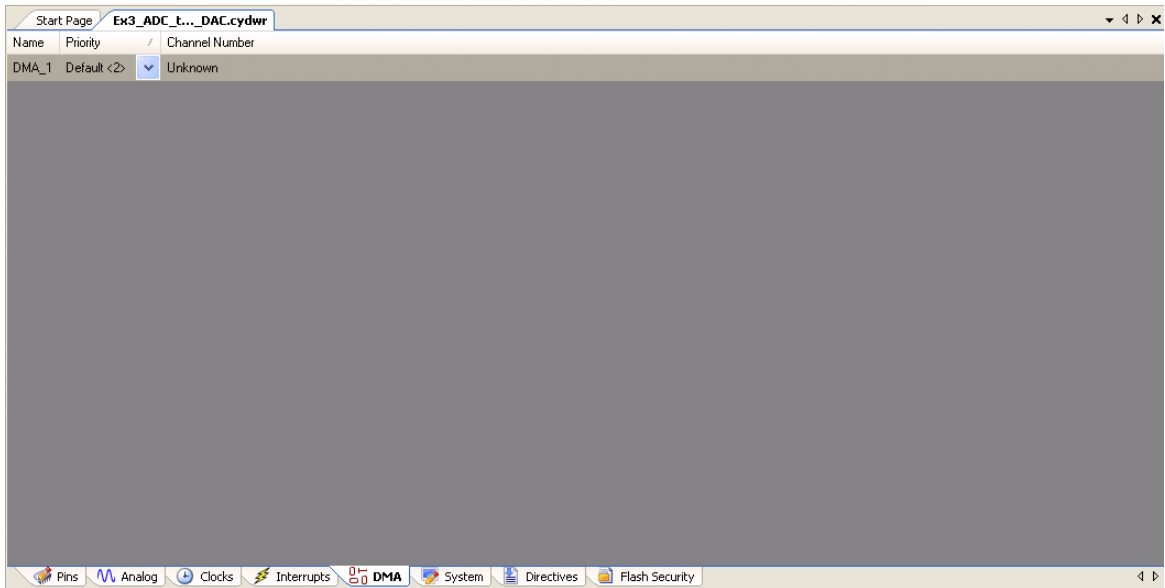


Similar to the Interrupt Editor, if there is no DMA component used in the design DMA editor shows the message that there is no DMA component being used.

Figure D-7. No DMA Component

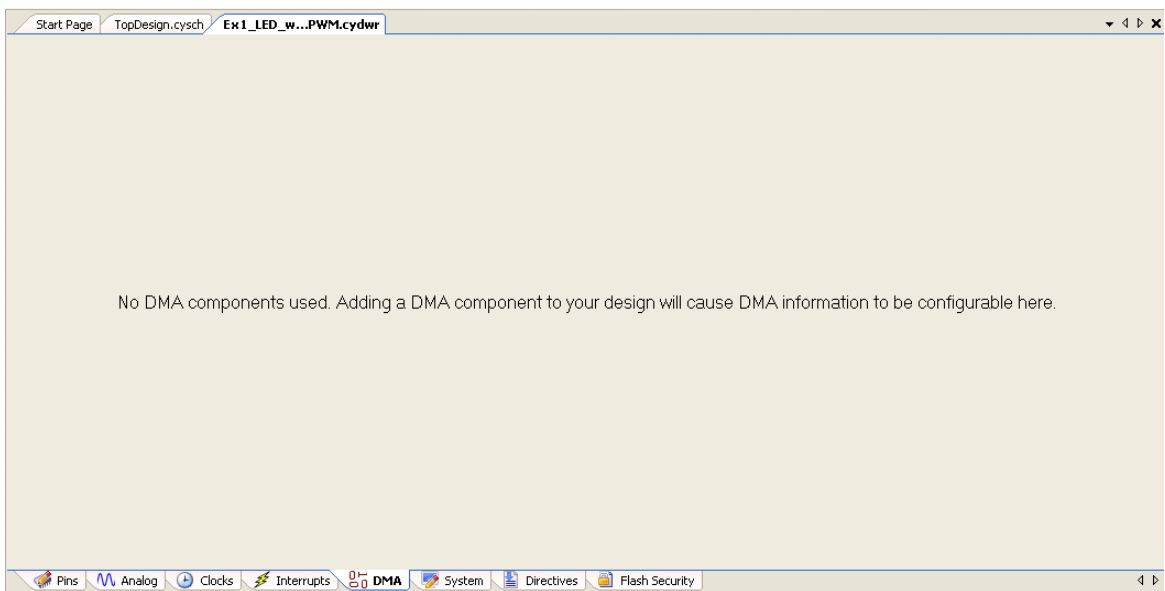

The System tab or the System Editor is used to edit various system properties. It contains a table with different categories of properties, such as Configuration, Programming/Debugging, and Operating Conditions. The available categories change based on your design.


Figure D-8. DWR File - System Editor

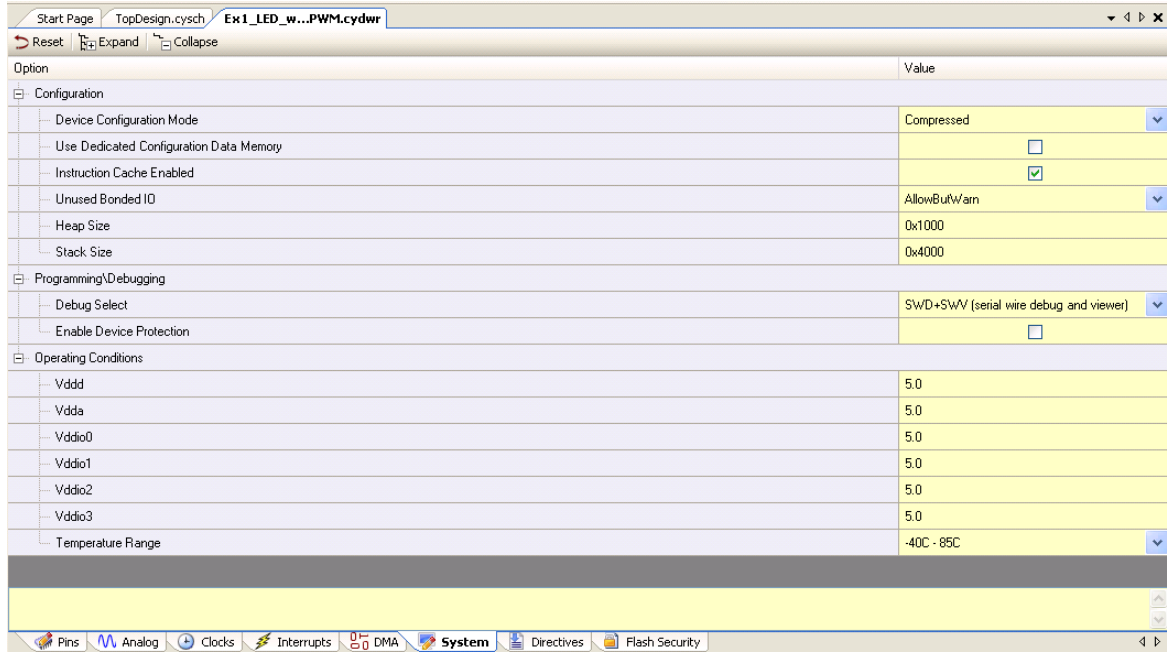

The Directives tab or the Directives Editor is used to add, remove, and edit directives. Directives may be used to influence the implementation of a design. They are used in an iterative fashion to refine, improve, or constrain the results of synthesis. Directives may be applied to components that have been either instantiated in a schematic or inferred by the synthesizer from Verilog HDL code.


See **Help > Topics > PSoC Creator > Building a PSoC Creator Project > Directives** for more information on the directives available in PSoC Creator.

Figure D-9. DWR File - Directives Editor

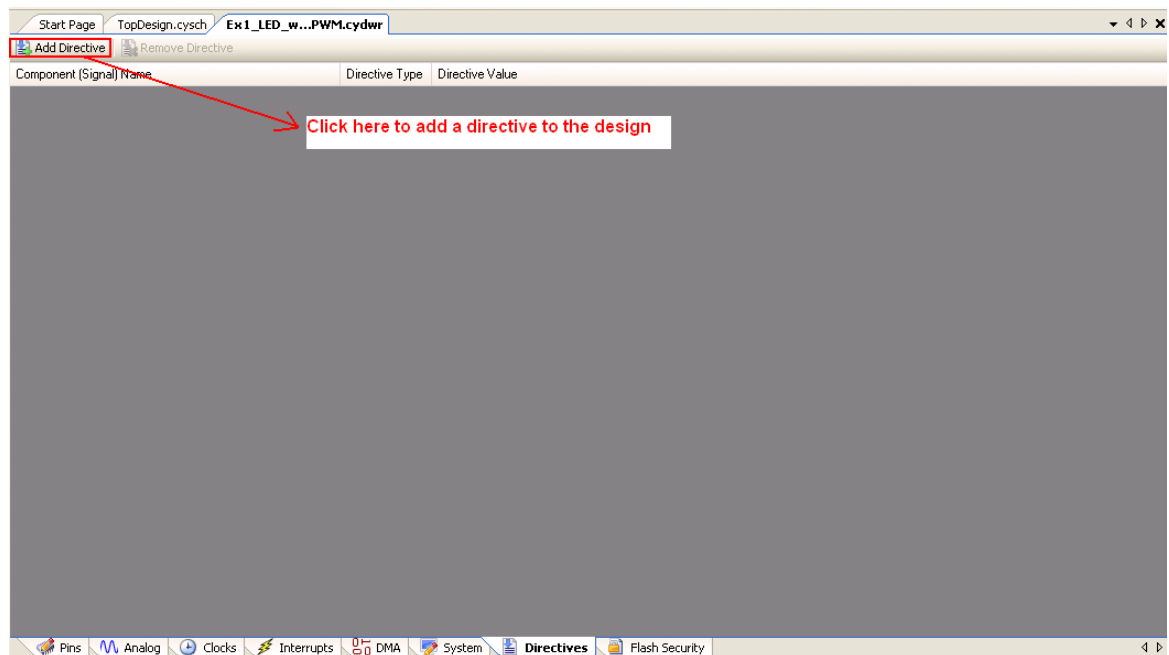

The Flash security tab or the Flash Security Editor allows you to control the read/write access to the device memory. The flash rows are displayed as a table where each editable cell in the table represents a single row of flash (256 bytes). Each flash row can have its protection level independently set.

Figure D-10. DWR File - Flash Security Editor

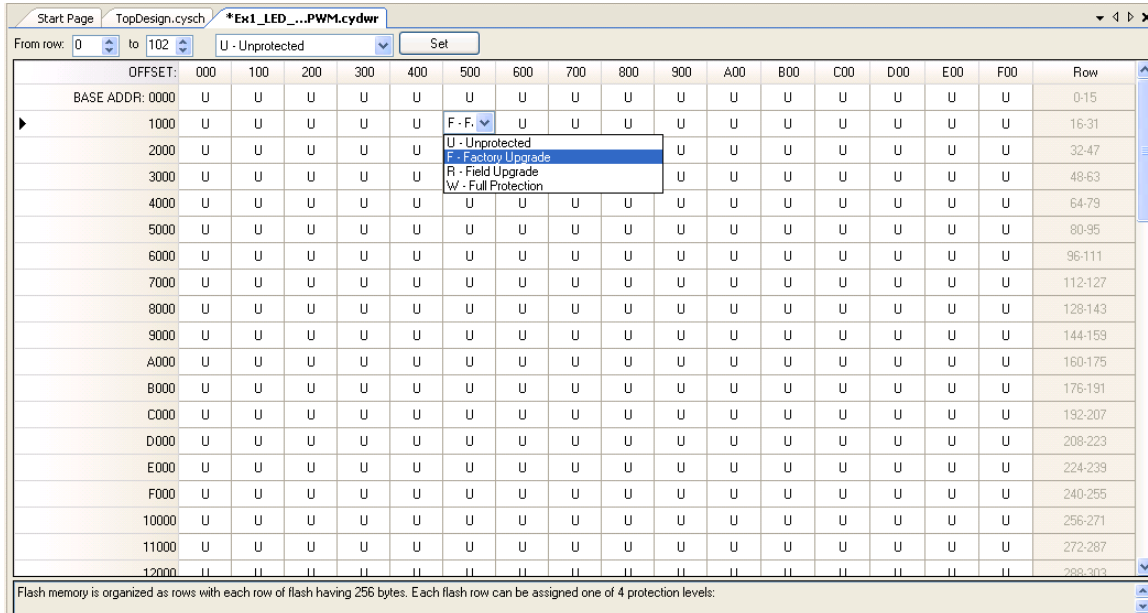

The screenshot shows the Flash Security Editor window for a file named \*Ex1\_LED\_...PWM.cydwr. The interface includes a 'From row' dropdown set to 0 and a 'to' dropdown set to 102. A 'Set' button is visible. The main table has columns for 'OFFSET' (000, 100, 200, 300, 400, 500, 600, 700, 800, 900, A00, B00, C00, D00, E00, F00) and 'Row' (0-15, 16-31, 32-47, 48-63, 64-79, 80-95, 96-111, 112-127, 128-143, 144-159, 160-175, 176-191, 192-207, 208-223, 224-239, 240-255, 256-271, 272-287, 288-303). A dropdown menu is open over the cell at row 1000, column 500, showing options: U - Unprotected, F - Field Upgrade, R - Field Upgrade, and W - Full Protection. A status bar at the bottom states: 'Flash memory is organized as rows with each row of flash having 256 bytes. Each flash row can be assigned one of 4 protection levels:'

OFFSET:	000	100	200	300	400	500	600	700	800	900	A00	B00	C00	D00	E00	F00	Row
BASE ADDR: 0000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	0-15
1000	U	U	U	U	U	F - F	U	U	U	U	U	U	U	U	U	U	16-31
2000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	32-47
3000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	48-63
4000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	64-79
5000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	80-95
6000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	96-111
7000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	112-127
8000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	128-143
9000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	144-159
A000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	160-175
B000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	176-191
C000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	192-207
D000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	208-223
E000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	224-239
F000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	240-255
10000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	256-271
11000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	272-287
12000	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	288-303